



[Manuals.plus](#) /

› [TURNMEON](#) /

› TURNMEON Prelit Christmas Bows (Model TAS-28) Instruction Manual

TURNMEON TAS-28

TURNMEON Prelit Christmas Bows (Model TAS-28) Instruction Manual

Your guide to setting up and enjoying your festive LED bows.

1. PRODUCT OVERVIEW

The TURNMEON Prelit Christmas Bows are designed to add a festive touch to your holiday decorations. Each package includes two large bows, measuring approximately 20 inches in height and 11 inches in width. These bows feature 20 warm white LED lights per piece, totaling 40 LED lights for the pair, operating in a steady-on mode. They are powered by two CR2032 batteries (included) per bow, with a small, discreet battery box on the back. Crafted from durable canvas material, these bows are designed to maintain their shape and color over time. A soft metal wire is integrated for easy hanging.



Image 1.1: Two TURNMEON Prelit Christmas Bows, featuring a Santa Bells and red/black buffalo plaid pattern, illuminated with warm white LED lights.

2. SETUP INSTRUCTIONS

2.1. Battery Installation

1. Locate the small battery box on the back of each bow.
2. Open the battery compartment cover.
3. Insert two CR2032 batteries into each compartment, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover.

2.2. Fluffing the Bows

Upon receiving your bows, they may appear compressed. Gently adjust and fluff the loops and tails to achieve their

full, natural shape. The integrated wire allows for easy shaping.



-Made Of Burlap Material

Please Adjust The Bows To Make It Fluffy



Image 2.1: Visual guide demonstrating how to gently fluff the bow to restore its intended shape after unpacking.

2.3. Hanging the Bows

Each bow is equipped with a soft metal wire on the back for easy attachment. You can hang these bows on various surfaces, including Christmas trees, wreaths, garlands, lamp posts, handrails, doorways, windows, fences, mailboxes, or door signs.



Suits For Decor Different Christmas Scene



Image 2.2: Examples of the Christmas bows used to decorate a festive wreath, an outdoor lamp post, and a front door, showcasing their versatility.

3. OPERATING INSTRUCTIONS

To activate the LED lights, locate the small switch on the battery box. Slide the switch to the 'ON' position. The lights will illuminate in a steady-on warm white mode. To turn off the lights, slide the switch to the 'OFF' position.



Image 3.1: A Christmas bow displayed on a tree, illustrating the visual difference between the lights being off and on.

Video 3.1: A short video demonstrating the TURNMEON PreLit Christmas Bows, showing their appearance and how the lights function.

4. MAINTENANCE

4.1. Cleaning

To clean the bows, gently wipe them with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, as this may damage the canvas fabric or the LED lights.

4.2. Storage

When not in use, remove the batteries to prevent corrosion. Store the bows in a cool, dry place away from direct sunlight and extreme temperatures. Proper storage will help maintain their appearance and extend their lifespan.

5. TROUBLESHOOTING

5.1. Lights Not Illuminating

- **Check Batteries:** Ensure that the CR2032 batteries are correctly inserted with the proper polarity and are not depleted. Replace with new batteries if necessary.
- **Power Switch:** Verify that the power switch on the battery box is in the 'ON' position.
- **Connection:** Inspect the wiring for any visible damage or loose connections.

6. SPECIFICATIONS

Feature	Detail
Model Number	TAS-28
Dimensions (H x W)	20 x 11 inches
Material	Canvas
Number of Lights per Bow	20 LED lights
Light Color	Warm White
Lighting Mode	Steady On
Power Supply	2 x CR2032 batteries (per bow)
Voltage	6 Volts
Item Weight	8.3 ounces (per bow)
Package Includes	2 x Christmas Bows

7. WARRANTY AND SUPPORT

For any questions regarding your TURNMEON Prelit Christmas Bows, please refer to the retailer's return policy or contact the manufacturer directly. Specific warranty details may vary by purchase location.