

[manuals.plus](#) /› [Severin](#) /› [Severin MW7771 Microwave Oven with Grill, 20L Capacity, 900W Grill, Stainless Steel/Black User Manual](#)

## Severin MW 7771

# Severin MW7771 Microwave Oven with Grill User Manual

Model: MW 7771

## 1. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance. Improper use may result in personal injury or damage to the appliance.


- Do not operate the microwave oven if the door is damaged or if the seals are faulty.
- Ensure proper ventilation around the appliance.
- Do not heat liquids or other foods in sealed containers, as they are liable to explode.
- Only use microwave-safe utensils.
- Regularly clean the oven cavity and remove any food deposits.
- Do not attempt to service or repair the appliance yourself. Contact qualified service personnel.

## 2. PRODUCT OVERVIEW

The Severin MW7771 is a 20-liter microwave oven with an integrated grill function, designed for versatile cooking. It features intuitive rotary controls for power and time settings.

### Components:

- Microwave Oven Unit
- Glass Turntable (Ø 24.5 cm)
- Turntable Ring
- Grill Rack

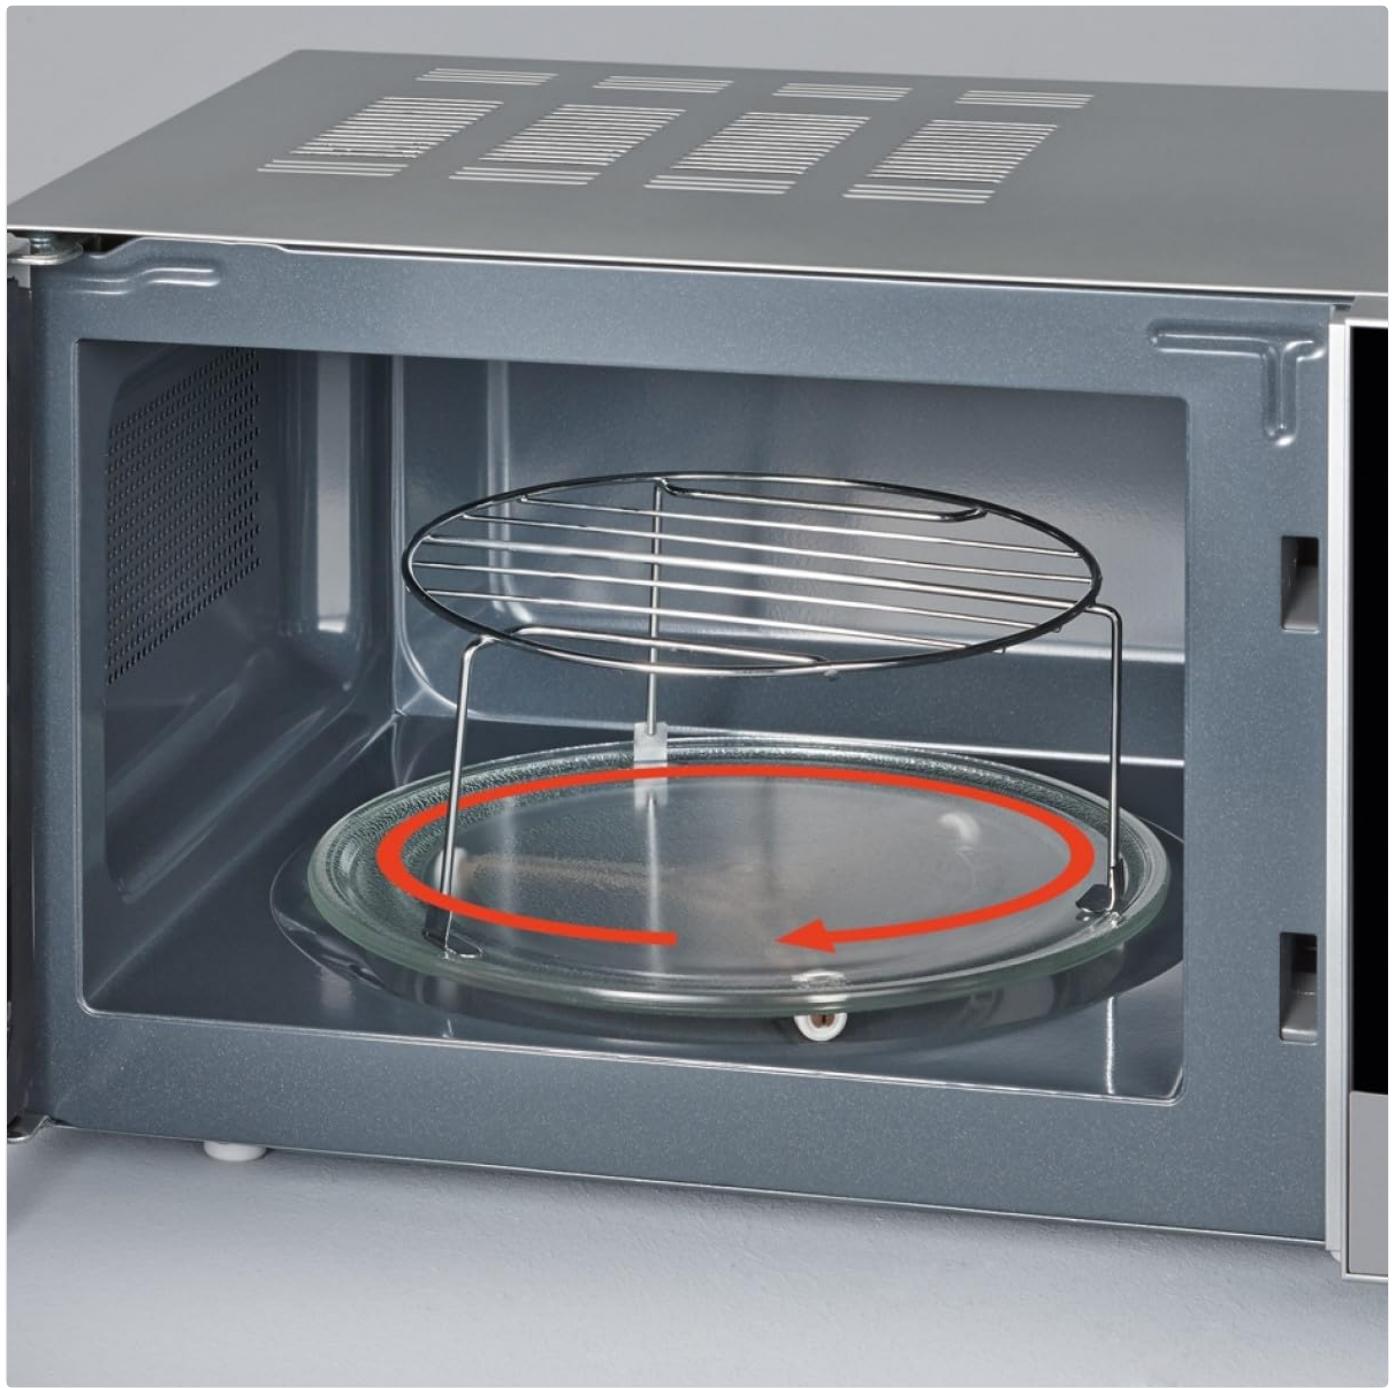

Interior view of the Severin MW7771 microwave oven, highlighting the removable glass turntable and the metal grill rack. Ensure these components are correctly placed before operation.

### 3. SETUP AND INSTALLATION

#### Unpacking:

Carefully remove the microwave oven and all packaging materials from the box. Inspect the appliance for any damage. Do not remove the light brown mica sheet inside the cavity, as it protects the magnetron.

#### Placement:

- Place the oven on a flat, stable, heat-resistant surface.
- Ensure adequate ventilation: leave at least 20 cm clearance above, 10 cm at the rear, and 5 cm on each side for proper airflow.
- Do not place the oven near heat sources or in a damp environment.

#### Assembly:

1. Place the turntable ring in the depression on the oven floor.
2. Position the glass turntable securely on top of the turntable ring.
3. For grill cooking, place the grill rack on the glass turntable.

## 4. OPERATING INSTRUCTIONS

The microwave oven features two rotary knobs for easy operation.

### Controls:

- **Upper Rotary Knob:** Selects the cooking function and power level (Microwave, Grill, Combination).
- **Lower Rotary Knob:** Sets the cooking time (up to 30 minutes) or defrost weight/time.



This image shows the upper rotary knob used to select the desired power level for microwave cooking, grill function, or combination modes. Settings range from low wattage for gentle heating to 900W for maximum power.



This image displays the lower rotary knob, which controls the cooking timer (up to 30 minutes) and the defrost function. The defrost settings allow for selection by time or by food weight.

### **Microwave Cooking:**

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Turn the upper rotary knob to select the desired microwave power level (e.g., 900W for high power).
4. Turn the lower rotary knob to set the cooking time. The oven will start automatically.
5. A bell will sound when the cooking time is complete.

### **Grill Function:**

1. Place food on the grill rack, which should be positioned on the glass turntable.
2. Close the oven door.
3. Turn the upper rotary knob to the grill symbol.
4. Turn the lower rotary knob to set the grilling time.

## Combination Cooking:

This function combines microwave and grill cooking for faster results and browning.

1. Place food on the grill rack.
2. Close the oven door.
3. Turn the upper rotary knob to select a combination mode (e.g., Microwave + Grill).
4. Turn the lower rotary knob to set the cooking time.

## Defrost Function:

The defrost function allows you to thaw food based on time or weight.

1. Place the frozen food in a suitable container on the glass turntable.
2. Close the oven door.
3. Turn the lower rotary knob to the desired defrost time or weight setting.
4. The oven will automatically adjust the power for defrosting.

---

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

### Before Cleaning:

- Always unplug the microwave oven from the power outlet.
- Allow the oven to cool down completely before cleaning.

### Cleaning the Interior:

- Wipe the oven cavity with a damp cloth and a mild detergent.
- Remove any food spills or splatters immediately to prevent stubborn stains and odors.
- The glass turntable and turntable ring can be washed in warm soapy water or in a dishwasher.
- The grill rack can be cleaned with warm soapy water.

### Cleaning the Exterior:

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.

---

## 6. TROUBLESHOOTING

If you encounter any issues with your microwave oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Timer not set.	Ensure power cord is securely plugged in; Close the door firmly; Set the cooking time.
Food not heating	Incorrect power level selected; Cooking time too short; Non-microwave-safe container used.	Select a higher power level; Increase cooking time; Use microwave-safe cookware.

Problem	Possible Cause	Solution
Turntable not rotating	Turntable or ring not correctly positioned; Obstruction.	Ensure the turntable and ring are properly seated; Remove any obstructions.
Unusual noise during operation	Loose components; Foreign object inside.	Check for proper placement of turntable and grill rack; Inspect for any foreign objects.

If the problem persists after checking these points, please contact customer support.

## 7. SPECIFICATIONS

- **Model:** MW 7771
- **Capacity:** 20 Litres
- **Microwave Power:** 700 Watts
- **Grill Power:** 900 Watts
- **Power Levels:** 9
- **Timer:** 30 minutes with end signal
- **Dimensions (L x W x H):** 45.4 x 35.4 x 26.4 cm
- **Weight:** 10.83 kg
- **Material:** Stainless Steel (exterior), Lacquered cavity (interior)
- **Turntable Diameter:** 24.5 cm
- **Included Components:** Glass turntable, Turntable ring, Grill rack

## 8. WARRANTY AND SUPPORT

### Warranty:

This Severin appliance comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and material faults under normal household use.

### Customer Support:

For further assistance, spare parts, or service inquiries, please visit the official Severin website or contact their customer service department. You can find more information at [Severin Brand Store](#).