

[manuals.plus](#) /› [Severin](#) /› **Severin MW 7772 Microwave Oven User Manual**

Severin MW 7772

Severin MW 7772 Microwave Oven User Manual

Your guide to safe and efficient operation of your Severin Microwave Oven.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Only use the appliance for its intended household use.
- Always ensure the turntable is correctly placed before operation.
- Do not heat sealed containers, as they may explode.
- Regularly clean the microwave interior to prevent food residue buildup.

PRODUCT OVERVIEW

The Severin MW 7772 is a 28-liter microwave oven designed for defrosting, heating, and warming food. It features a simple and intuitive design with two rotary knobs for power and time settings, a 35-minute timer, and a removable turntable.



Figure 1: Front view of the Severin MW 7772 Microwave Oven, showcasing its sleek silver design and control panel.

Fácil de usar

5 niveles de potencia

Luz interior

Con plato giratorio



Figure 2: The microwave features two rotary controls for adjusting power and time, along with a heat-resistant casing and lacquered interior for durability and easy cleaning.

SETUP

- Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check for any damage.
- Placement:** Place the microwave on a flat, stable surface. Ensure there is adequate ventilation space around the unit (at least 10 cm at the back and sides, 20 cm above). Do not block air vents.
- Turntable Installation:** Place the turntable ring inside the microwave cavity, then place the glass turntable plate securely on top of the ring. Ensure it rotates freely.
- Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (2.3E+2 Volts).

Dos mandos giratorios para la potencia y el tiempo

Carcasa resistente al calor e interior lacada



Figure 3: View of the microwave interior, showing the removable glass turntable and its support ring. Ensure the turntable is properly seated before use.

OPERATING INSTRUCTIONS

The Severin MW 7772 microwave oven is operated using two mechanical rotary knobs: one for power level and one for cooking time.



Figure 4: Detailed view of the control panel, featuring the power level selector (top knob) and the timer/defrost knob (bottom knob).

Setting Power Level

The microwave offers 5 power levels, ranging from 150W to 900W. Rotate the top knob to select the desired power level:

- **150W:** Low power, suitable for keeping food warm.
- **300W:** Medium-low power, ideal for simmering or softening.
- **500W:** Medium power, for general reheating.
- **700W:** Medium-high power, for faster cooking.
- **900W:** High power, for quick heating and boiling.

Setting Cooking Time

Rotate the bottom knob to set the cooking time, up to a maximum of 35 minutes. The timer will count down and emit a sound signal when cooking is complete.

Defrosting Function

The bottom knob also includes a defrost setting, adjustable by time or weight. For defrosting, select the appropriate weight or time on the defrost scale. The microwave will automatically adjust power for optimal defrosting.



Figure 5: Key features of the microwave, including ease of use, 5 power levels, interior light, and the presence of a turntable.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient operation of your microwave oven.

- **Interior Cleaning:** After each use, wipe the interior with a damp cloth to remove food splatters. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or metal brushes.
- **Turntable Cleaning:** The removable glass turntable can be washed by hand with warm soapy water or placed in a dishwasher.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Avoid getting water into the ventilation openings.

- **Odor Removal:** To remove odors, place a bowl of water with lemon slices or vinegar inside the microwave and heat on high for 5-10 minutes.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Microwave does not start.	Power cord unplugged; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker.
Food is not heating.	Power level set too low; Cooking time too short; Incorrect dish used.	Increase power level or cooking time; Use microwave-safe cookware.
Turntable is not rotating.	Turntable not properly seated; Obstruction under turntable.	Re-seat turntable and ring; Remove any obstructions.
Unusual noises during operation.	Food container touching interior walls; Turntable not centered.	Adjust food container position; Re-center turntable.

SPECIFICATIONS

Feature	Detail
Model Number	MW 7772
Brand	Severin
Capacity	28 Liters
Power Output	900 Watts
Power Levels	5 (150W, 300W, 500W, 700W, 900W)
Timer	35 Minute Mechanical Timer
Turntable Diameter	31.5 cm
Product Dimensions (L x W x H)	51.8 x 43 x 30.5 cm (20.39 x 16.93 x 12.01 inches)
Item Weight	14.7 kg (32.4 pounds)
Color	Silver
Material	Stainless Steel (Interior and Exterior)
Installation Type	Freestanding

WARRANTY AND SUPPORT

Severin products are known for their quality and durability. For warranty information and customer support, please refer to the official Severin website or contact their customer service department.

Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may visit the [Severin Store on Amazon](#).

© 2025 Severin. All rights reserved.

Related Documents - MW 7772

 <small>ART. NO. MW 7772</small> <small>DE: Gebrauchsanleitung EN: Instructions for use ES: Guía de uso NL: Gebruiksaanwijzing IT: Istruzioni per l'uso PT: Manual de uso FI: Käytäntöohje SV: Användningsanvisning DE: Sicherheitshinweise EN: Safety instructions ES: Información de seguridad NL: Veiligheidshandeling IT: Istruzioni di sicurezza PT: Informações de segurança FI: Turvallisuusohjeet SV: Säkerhetsanvisningar DE: Produktdatenblatt EN: Product data sheet ES: Ficha técnica NL: Producttdatenblatt IT: Ficha tecnica PT: Folha de dados FI: Tuotetiedot SV: Produktdokumentation DE: Praktische Anleitungen EN: Practical instructions ES: Instrucciones prácticas NL: Praktische handleidingen IT: Istruzioni pratiche PT: Instruções práticas FI: Praktiset ohjeet SV: Praktiska anvisningar</small>	<p>SEVERIN MW 7772 Mikrowelle: Bedienungsanleitung & Sicherheitshinweise Umfassende Bedienungsanleitung und Sicherheitshinweise für die SEVERIN MW 7772 Mikrowelle. Erfahren Sie alles über Installation, Bedienung und Wartung dieses Qualitätsprodukts von SEVERIN.</p>
 <small>ART. NO. MW 7892 - MW 7893 - MW 7894 - MW 7898</small> <small>DE: Gebrauchsanleitung EN: Instructions for use ES: Guía de uso NL: Gebruiksaanwijzing IT: Istruzioni per l'uso PT: Manual de uso FI: Käytäntöohje SV: Användningsanvisning DE: Sicherheitshinweise EN: Safety instructions ES: Información de seguridad NL: Veiligheidshandeling IT: Istruzioni di sicurezza PT: Informações de segurança FI: Turvallisuusohjeet SV: Säkerhetsanvisningar DE: Produktdatenblatt EN: Product data sheet ES: Ficha técnica NL: Producttdatenblatt IT: Ficha tecnica PT: Folha de dados FI: Tuotetiedot SV: Produktdokumentation DE: Praktische Anleitungen EN: Practical instructions ES: Instrucciones prácticas NL: Praktische handleidingen IT: Istruzioni pratiche PT: Instruções práticas FI: Praktiset ohjeet SV: Praktiska anvisningar</small>	<p>SEVERIN Mikrowelle mit Grillfunktion - Bedienungsanleitung Umfassende Bedienungsanleitung für die SEVERIN Mikrowelle mit Grillfunktion, Modellreihen MW 7892, MW 7893, MW 7894, MW 7898. Erfahren Sie mehr über Sicherheit, Bedienung und Funktionen wie Auftauen, Erwärmen und Grillen.</p>
 <small>ART. NO. MW 7892 - MW 7893 - MW 7894 - MW 7898</small> <small>DE: Gebrauchsanleitung EN: Instructions for use ES: Guía de uso NL: Gebruiksaanwijzing IT: Istruzioni per l'uso PT: Manual de uso FI: Käytäntöohje SV: Användningsanvisning DE: Sicherheitshinweise EN: Safety instructions ES: Información de seguridad NL: Veiligheidshandeling IT: Istruzioni di sicurezza PT: Informações de segurança FI: Turvallisuusohjeet SV: Säkerhetsanvisningar DE: Produktdatenblatt EN: Product data sheet ES: Ficha técnica NL: Producttdatenblatt IT: Ficha tecnica PT: Folha de dados FI: Tuotetiedot SV: Produktdokumentation DE: Praktische Anleitungen EN: Practical instructions ES: Instrucciones prácticas NL: Praktische handleidingen IT: Istruzioni pratiche PT: Instruções práticas FI: Praktiset ohjeet SV: Praktiska anvisningar</small>	<p>SEVERIN MW 7892/7893/7894/7898 Mikrowelle Bedienungsanleitung Umfassende Bedienungsanleitung für die SEVERIN Retro-Mikrowelle mit Grillfunktion, Modelle MW 7892, MW 7893, MW 7894, MW 7898. Enthält Sicherheitshinweise, Bedienung, Programme und technische Daten in mehreren Sprachen.</p>
 <small>ART. NO. MW 7777</small> <small>DE: Garantie EN: Warranty ES: Garantía NL: Garantie IT: Garanzia PT: Garantia FI: Garantia SV: Garantie DE: Garantiebedingungen EN: Warranty terms ES: Condiciones de la garantía NL: Garantievoorwaarden IT: Condizioni della garanzia PT: Termos de garantia FI: Garantievaatimukset SV: Garantivillkor DE: Garantiebedingungen EN: Warranty terms ES: Condiciones de la garantía NL: Garantievoorwaarden IT: Condizioni della garanzia PT: Termos de garantia FI: Garantievaatimukset SV: Garantivillkor</small>	<p>SEVERIN MW 7777 Microwave Warranty Information Official warranty details for the SEVERIN MW 7777 microwave, outlining terms, conditions, exclusions, and how to claim your guarantee.</p>

 <p>SEVERIN</p> <p>ART-NO. MW7778</p> <table border="1"> <tr><td>DE</td><td>Gebrauchsanleitung</td><td>1</td></tr> <tr><td>DE</td><td>Heißluftgrill</td><td>11</td></tr> <tr><td>DE</td><td>Heißluftgrillanwendung</td><td>15</td></tr> <tr><td>DE</td><td>Intervallsteuerung</td><td>17</td></tr> <tr><td>DE</td><td>Intervallsteuerungseinstellung</td><td>18</td></tr> <tr><td>DE</td><td>Grillanwendung</td><td>19</td></tr> <tr><td>DE</td><td>Grillanwendungseinstellung</td><td>20</td></tr> <tr><td>DE</td><td>Kochfunktion</td><td>21</td></tr> <tr><td>DE</td><td>Kochfunktionseinstellung</td><td>22</td></tr> <tr><td>DE</td><td>Intervallgrill</td><td>23</td></tr> <tr><td>DE</td><td>Intervallgrilleinstellung</td><td>24</td></tr> <tr><td>DE</td><td>Ofenfunktion</td><td>25</td></tr> </table>	DE	Gebrauchsanleitung	1	DE	Heißluftgrill	11	DE	Heißluftgrillanwendung	15	DE	Intervallsteuerung	17	DE	Intervallsteuerungseinstellung	18	DE	Grillanwendung	19	DE	Grillanwendungseinstellung	20	DE	Kochfunktion	21	DE	Kochfunktionseinstellung	22	DE	Intervallgrill	23	DE	Intervallgrilleinstellung	24	DE	Ofenfunktion	25	<p>SEVERIN MW 7778 Mikrowelle Bedienungsanleitung Grill & Heißluft</p> <p>Entdecken Sie die SEVERIN MW 7778 Mikrowelle mit dieser vollständigen Bedienungsanleitung. Erfahren Sie alles über Funktionen, Sicherheit, Bedienung und Pflege für Ihr Küchengerät.</p>																																							
DE	Gebrauchsanleitung	1																																																																										
DE	Heißluftgrill	11																																																																										
DE	Heißluftgrillanwendung	15																																																																										
DE	Intervallsteuerung	17																																																																										
DE	Intervallsteuerungseinstellung	18																																																																										
DE	Grillanwendung	19																																																																										
DE	Grillanwendungseinstellung	20																																																																										
DE	Kochfunktion	21																																																																										
DE	Kochfunktionseinstellung	22																																																																										
DE	Intervallgrill	23																																																																										
DE	Intervallgrilleinstellung	24																																																																										
DE	Ofenfunktion	25																																																																										
<p>SEVERIN</p> <p>ART-NO. MW7777</p> <table border="1"> <tr><td>DE</td><td>Servicenr.</td><td>2</td></tr> <tr><td>DE</td><td>Modell</td><td>2</td></tr> <tr><td>DE</td><td>Art.</td><td>3</td></tr> <tr><td>DE</td><td>Servicenr.</td><td>4</td></tr> <tr><td>DE</td><td>Modell</td><td>5</td></tr> <tr><td>DE</td><td>Art.</td><td>6</td></tr> <tr><td>DE</td><td>Servicenr.</td><td>7</td></tr> <tr><td>DE</td><td>Modell</td><td>8</td></tr> <tr><td>DE</td><td>Art.</td><td>9</td></tr> <tr><td>DE</td><td>Servicenr.</td><td>10</td></tr> <tr><td>DE</td><td>Modell</td><td>11</td></tr> <tr><td>DE</td><td>Art.</td><td>12</td></tr> <tr><td>DE</td><td>Servicenr.</td><td>13</td></tr> <tr><td>DE</td><td>Modell</td><td>14</td></tr> <tr><td>DE</td><td>Art.</td><td>15</td></tr> <tr><td>DE</td><td>Servicenr.</td><td>16</td></tr> <tr><td>DE</td><td>Modell</td><td>17</td></tr> <tr><td>DE</td><td>Art.</td><td>18</td></tr> <tr><td>DE</td><td>Servicenr.</td><td>19</td></tr> <tr><td>DE</td><td>Modell</td><td>20</td></tr> <tr><td>DE</td><td>Art.</td><td>21</td></tr> <tr><td>DE</td><td>Servicenr.</td><td>22</td></tr> <tr><td>DE</td><td>Modell</td><td>23</td></tr> <tr><td>DE</td><td>Art.</td><td>24</td></tr> <tr><td>DE</td><td>Servicenr.</td><td>25</td></tr> </table>	DE	Servicenr.	2	DE	Modell	2	DE	Art.	3	DE	Servicenr.	4	DE	Modell	5	DE	Art.	6	DE	Servicenr.	7	DE	Modell	8	DE	Art.	9	DE	Servicenr.	10	DE	Modell	11	DE	Art.	12	DE	Servicenr.	13	DE	Modell	14	DE	Art.	15	DE	Servicenr.	16	DE	Modell	17	DE	Art.	18	DE	Servicenr.	19	DE	Modell	20	DE	Art.	21	DE	Servicenr.	22	DE	Modell	23	DE	Art.	24	DE	Servicenr.	25	<p>SEVERIN MW 7777 Appliance Warranty Information</p> <p>Detailed warranty terms, conditions, exclusions, and claim procedure for the SEVERIN MW 7777 appliance. Learn how to get service and understand your rights.</p>
DE	Servicenr.	2																																																																										
DE	Modell	2																																																																										
DE	Art.	3																																																																										
DE	Servicenr.	4																																																																										
DE	Modell	5																																																																										
DE	Art.	6																																																																										
DE	Servicenr.	7																																																																										
DE	Modell	8																																																																										
DE	Art.	9																																																																										
DE	Servicenr.	10																																																																										
DE	Modell	11																																																																										
DE	Art.	12																																																																										
DE	Servicenr.	13																																																																										
DE	Modell	14																																																																										
DE	Art.	15																																																																										
DE	Servicenr.	16																																																																										
DE	Modell	17																																																																										
DE	Art.	18																																																																										
DE	Servicenr.	19																																																																										
DE	Modell	20																																																																										
DE	Art.	21																																																																										
DE	Servicenr.	22																																																																										
DE	Modell	23																																																																										
DE	Art.	24																																																																										
DE	Servicenr.	25																																																																										