

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Toyomi](#) /

› [Toyomi MC 4646 4-in-1 Multi Cooker Steamboat Hot Pot User Manual](#)

Toyomi MC 4646

Toyomi MC 4646 4-in-1 Multi Cooker Steamboat Hot Pot User Manual

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Toyomi MC 4646 Multi Cooker. Retain this manual for future reference.

- Always ensure the appliance is unplugged from the power outlet before cleaning, assembling, or disassembling parts.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact authorized service personnel for examination, repair, or adjustment.
- Do not use outdoors. This appliance is for household use only.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Always place the appliance on a stable, flat, and heat-resistant surface.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove the plug from the wall outlet.
- Avoid contact with hot surfaces. Use handles or knobs.
- The cooking pot has a non-stick coating. Avoid using metal utensils that can scratch the surface. Use wooden, plastic, or silicone utensils.

PRODUCT OVERVIEW

The Toyomi MC 4646 is a versatile 4-in-1 Multi Cooker designed for convenient meal preparation. It features a 4.0L capacity and a duo-sided non-stick pot, allowing for various cooking methods including sautéing, hotpot, steaming, and boiling.

Key features include:

- Multi cooker with 4-in-1 duo sided non stick cooking pot.
- Tempered glass lid for easy monitoring.

- Heating power 1400 - 1650W for fast boiling.
- Suitable for sautéing, hotpot, steaming, and boiling.
- Non-stick pot for easy cooking and cleaning.



Image: Front view of the Toyomi MC 4646 Multi Cooker with its tempered glass lid. This shows the overall design and the control panel on the front.

COMPONENTS

The Toyomi MC 4646 Multi Cooker consists of the following main components:

- **Main Unit:** The base housing the heating element and control panel.
- **Cooking Pot:** A removable 4.0L non-stick pot with a duo-sided design.
- **Tempered Glass Lid:** With a heat-resistant knob for safe handling.



Image: Close-up view of the non-stick interior of the cooking pot, highlighting its smooth surface.



Image: View of the heating element located at the base of the main unit, where the cooking pot sits.

BEFORE FIRST USE

1. **Unpack:** Carefully remove all packaging materials, stickers, and labels from the multi cooker.
2. **Clean:** Wash the cooking pot and glass lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Initial Burn-off (Optional):** For some new appliances, a slight odor may be present during the first use. This is normal. Operate the cooker with some water for 10-15 minutes on a medium setting in a well-ventilated area to dissipate any manufacturing odors. Discard the water afterwards.
4. **Placement:** Place the multi cooker on a stable, flat, and heat-resistant surface, away from walls or other appliances to allow for proper ventilation.

OPERATING INSTRUCTIONS

The Toyomi MC 4646 Multi Cooker offers various cooking functions controlled by a single slide switch.



Image: Close-up of the control panel showing the slide switch with settings for OFF, WARM, LOW, MID, HIGH, and indicator lights for SLOW COOK, STEAM, HOT POT, BOIL.

General Operation:

1. Ensure the cooking pot is properly seated in the main unit.
2. Add desired ingredients and liquids to the cooking pot. Do not overfill beyond the maximum fill line (if present) or to the brim.
3. Place the tempered glass lid securely on the pot.
4. Plug the power cord into a suitable electrical outlet (220V).
5. Slide the control switch to the desired heat setting: **WARM**, **LOW**, **MID**, or **HIGH**. The corresponding indicator light (SLOW COOK, STEAM, HOT POT, BOIL) will illuminate depending on the cooking method.
6. Monitor cooking progress through the glass lid.
7. Once cooking is complete, slide the control switch to **OFF** and unplug the appliance.
8. Use heat-resistant gloves or oven mitts when handling the hot pot or lid.

Specific Cooking Modes:

- **Slow Cook:** Use the LOW or MID setting for extended cooking times, ideal for stews, soups, and braises.
- **Steam:** Add water to the bottom of the pot, place a steaming rack (if included or purchased separately) with food above the water, and cover with the lid. Use the HIGH setting to bring water to a boil, then adjust as needed.
- **Hot Pot / Steamboat:** Fill the pot with broth and desired ingredients. Use the HIGH setting to bring to a boil, then reduce to MID or LOW to maintain a simmer for communal cooking.
- **Boil:** Use the HIGH setting to quickly boil water for noodles, blanching vegetables, or other tasks requiring rapid boiling.
- **Warm:** After cooking, switch to the WARM setting to keep food at a serving temperature without further cooking.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Toyomi MC 4646 Multi Cooker.

1. **Always unplug** the appliance and allow it to cool completely before cleaning.
2. **Cooking Pot and Lid:** Wash the removable cooking pot and glass lid with warm, soapy water using a soft sponge or cloth. For stubborn food residue, soak the pot in warm water before cleaning. Rinse thoroughly and dry completely. The non-stick coating is delicate; avoid abrasive cleaners, metal scouring pads, or harsh brushes that can damage the surface.
3. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners. Never immerse the main unit, power cord, or plug in water or any other liquid.
4. **Storage:** Ensure all parts are clean and dry before storing. Store the multi cooker in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your multi cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on or heat up.	Not plugged in; power outlet malfunction; control switch is OFF.	Ensure the power cord is securely plugged into a working outlet. Check if the control switch is set to a heat setting (WARM, LOW, MID, HIGH).
Food sticks to the pot.	Insufficient oil/liquid; cooking at too high a temperature; damaged non-stick coating.	Add a small amount of cooking oil or liquid. Adjust temperature setting. Avoid using metal utensils. If coating is severely damaged, consider replacing the pot.
Lid does not fit properly.	Lid or pot is misaligned; food debris on rim.	Ensure the lid is correctly aligned with the pot. Check for any food particles or debris on the rim of the pot or lid and clean if necessary.
Burning smell during operation.	Food residue on heating element; initial use odor.	Unplug and allow to cool. Check if any food has spilled onto the heating element and clean carefully. If it's the first use, this is normal and should dissipate. Ensure proper ventilation.

If the problem persists after trying these solutions, please contact Toyomi customer support.

SPECIFICATIONS

Model:	MC 4646
Brand:	Toyomi

Capacity:	4.0 Liters
Power:	1400 - 1650W
Voltage:	220 Volts
Material:	Non-stick coated (pot)
Product Dimensions:	35.2 x 16.5 x 35 cm (approx.)
Item Weight:	3.04 kg (approx.)
Special Features:	Non-stick coating, Tempered glass lid, 4-in-1 functionality

WARRANTY AND SUPPORT

Toyomi products are manufactured to high-quality standards and are warranted against manufacturing defects. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Toyomi website.

For technical support, service, or inquiries regarding your Toyomi MC 4646 Multi Cooker, please contact Toyomi customer service through their official channels. Contact information can typically be found on the product packaging, warranty card, or the official Toyomi website.

Online Support: [Visit the Toyomi Store on Amazon](#)