

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BaBylissPRO](#) /

› [BaByliss PRO LoPro FX Hair Clipper \(FX825E\) User Manual](#)

BaBylissPRO FX825E

BaByliss PRO LoPro FX Hair Clipper (FX825E) User Manual

Model: FX825E | Brand: BaBylissPRO

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your BaByliss PRO LoPro FX Hair Clipper (Model FX825E). Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- **Water Exposure:** Avoid using the appliance near water, such as bathtubs, showers, basins, or other vessels containing water.
- **Skin Conditions:** Do not use the clipper on irritated skin, open wounds, or areas with skin lesions.
- **Eye Safety:** Exercise extreme caution when using the clipper near your eyes to prevent injury.
- **Maintenance:** Ensure the appliance is properly maintained and cleaned regularly to ensure optimal performance and safety.
- **Children:** Keep this appliance out of reach of children.
- **Power Cord:** Do not wrap the power cord around the appliance.

PRODUCT OVERVIEW

The BaByliss PRO LoPro FX Hair Clipper (FX825E) is a professional-grade grooming tool designed for precision cutting. It features a low-profile design and advanced motor technology.



Image 1: BaByliss PRO LoPro FX Hair Clipper. This image displays the ergonomic design and professional finish of the clipper.

Key Components:

- **Graphite Blade:** Precision-engineered for smooth cutting.
- **5-Level Metal Adjustment Lever:** For precise cutting length control.
- **Clipper Guards:** Various sizes for different hair lengths.
- **Digital Motor:** Provides consistent power and performance.
- **Lithium-Ion Battery:** For cordless operation and extended run time.

SETUP AND INITIAL USE

1. **Unpacking:** Carefully remove the clipper and all accessories from the packaging.
2. **Initial Charge:** Before first use, fully charge the clipper's lithium-ion battery. Connect the charging adapter to the clipper and a suitable power outlet.
3. **Attaching Clipper Guards:** Select the desired clipper guard and securely attach it to the clipper blade. Ensure it clicks into place.
4. **Blade Adjustment:** Use the 5-level metal adjustment lever to fine-tune the cutting length. Move the lever up

for shorter cuts and down for longer cuts.

OPERATING INSTRUCTIONS

Follow these steps for effective hair clipping:

- 1. Preparation:** Ensure hair is clean, dry, and combed.
- 2. Power On:** Turn on the clipper using the power switch.
- 3. Clipping Technique:** Hold the clipper with the blade flat against the head. Move the clipper against the direction of hair growth. Use smooth, overlapping strokes.
- 4. Length Adjustment:** Adjust the cutting length as needed using the metal adjustment lever and by changing clipper guards.
- 5. Finishing:** After clipping, turn off the clipper and clean it as described in the Maintenance section.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your clipper.

- Cleaning Blades:** After each use, brush away loose hair from the blades using the provided cleaning brush.
- Oiling Blades:** Regularly apply a few drops of clipper oil (not included) to the blades to keep them lubricated and sharp. Do this before and after each use for best results.
- Storage:** Store the clipper in a dry, cool place, away from direct sunlight and moisture.
- Battery Care:** To maintain battery life, avoid fully discharging the battery frequently. Charge it when the power indicator shows low.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is discharged.	Charge the clipper fully.
Clipper pulls hair or cuts poorly.	Blades are dull or not oiled. Hair buildup.	Clean and oil the blades. Ensure blades are free of hair. Consider blade replacement if dull.
Excessive vibration or noise.	Blades are misaligned or loose.	Check blade alignment and tighten screws if necessary. If problem persists, contact customer support.

SPECIFICATIONS

Brand: BaBylissPRO

Model: FX825E

Item Model Number: Babyliss - 4Artists - Lo-Pro Clipper -

Manufacturer: Babyliss

Special Features: Digital Motor, Lithium-Ion Battery, Adjustable Graphite Blade, 5-Level Metal Adjustment Lever

Model Color: Black

Item Weight: 1 Grams

Package Dimensions: 23.1 x 18.6 x 7.9 centimeters

ASIN: B0B75TCD58

Date First Available: November 15, 2022

WARRANTY AND SUPPORT

While specific warranty details are not provided in this document, BaBylissPRO products typically come with a manufacturer's warranty covering defects in materials and workmanship. Please refer to the warranty card included with your product or visit the official BaBylissPRO website for detailed warranty information and customer support contacts.

For technical assistance, spare parts, or service, please contact BaBylissPRO customer service through their official channels.

© 2024 BaBylissPRO. All rights reserved. This manual is for informational purposes only.