



[Manuals.plus](#) /

> [VINATO](#) /

> VINATO Electric Body Hair Trimmer User Manual - Model B0B76XHTPX

## VINATO B0B76XHTPX

# VINATO Electric Body Hair Trimmer User Manual

Model: B0B76XHTPX

## INTRODUCTION

---

Thank you for choosing the VINATO Electric Body Hair Trimmer. This manual provides essential information for the safe and effective use, maintenance, and care of your new grooming device. Please read these instructions thoroughly before first use and keep them for future reference.

# SOFT CERAMIC BLADE, NO NICKS, NO CUTS




Security



Led Light



Low Noise

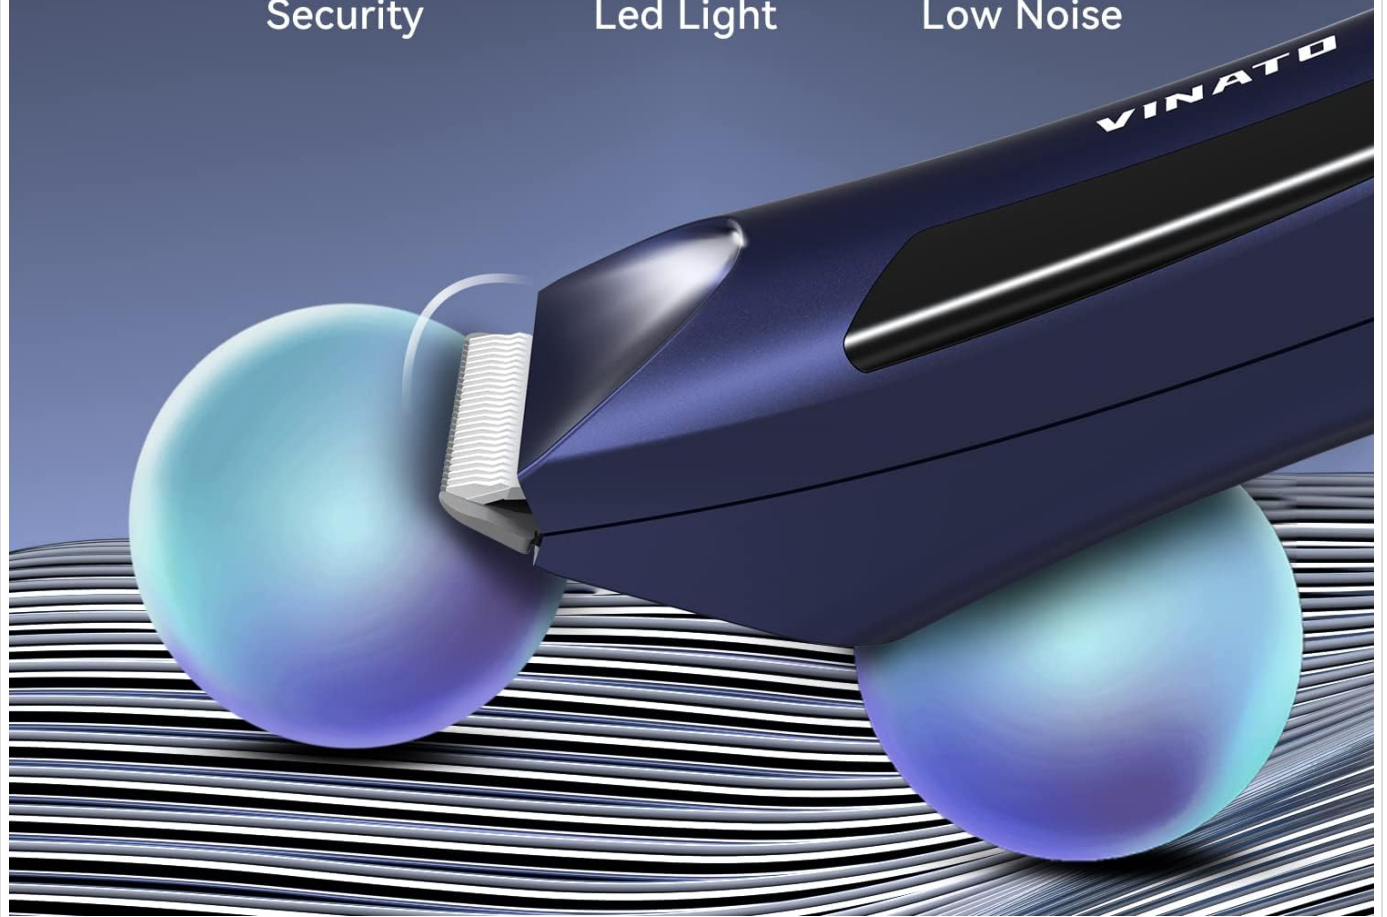 

*Image: The VINATO Electric Body Hair Trimmer, showcasing its sleek design.*

## SAFETY INFORMATION

**WARNING: To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions.**

- Ensure water safety during charging. Do not charge the device near water or in wet environments.
- Use skin-friendly ceramic blades with care. Avoid excessive pressure on sensitive areas to prevent irritation or cuts.
- Keep the device away from infants and children. This product is not a toy.
- Maintain the trimmer with regular cleaning as instructed in the maintenance section.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.
- Only use the provided charging dock and cable.

*Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.*

## PACKAGE CONTENTS

---

Your VINATO Electric Body Hair Trimmer package includes the following items:

- VINATO Electric Body Hair Trimmer
- Wireless Charging Dock
- USB Charging Cable
- Four Guide Combs (1.5mm, 2.5mm, 3.5mm, 4.5mm)
- Cleaning Brush
- Lubricating Oil
- User Manual



*Image: All components included in the VINATO Electric Body Hair Trimmer package.*

## PRODUCT FEATURES

---

- **Ceramic Blade Technology:** Equipped with skin-friendly ceramic blades designed to reduce nicks and cuts, especially in sensitive areas.
- **Powerful Motor:** Features a 7000 RPM motor for efficient and smooth trimming of various hair types.
- **Waterproof Design:** Fully waterproof, allowing for safe use in the shower and easy cleaning under running water.
- **Long Battery Life:** Provides up to 90 minutes of cordless use on a single charge.
- **Wireless Charging Dock:** Convenient charging base that also serves as a storage stand.
- **LED Spotlight & LCD Display:** Built-in LED light for improved visibility during trimming and an LCD display showing battery percentage.
- **Versatile Guide Combs:** Includes four detachable guide combs (1.5mm, 2.5mm, 3.5mm, 4.5mm) for customized hair length.

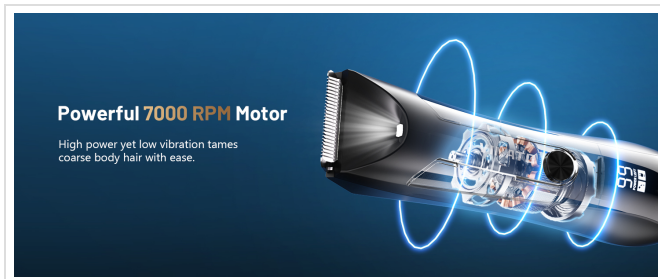 


Image: Close-up of the ceramic blade with a protective guard, designed for safe grooming.

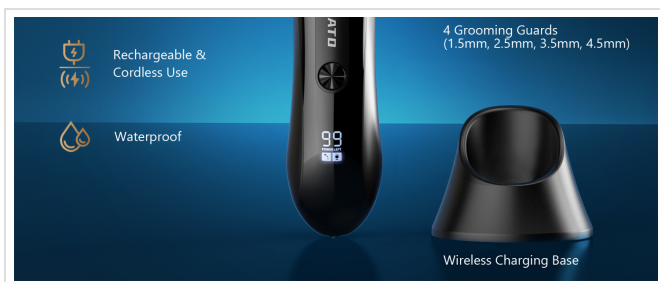 


Image: Illustration highlighting the powerful 7000 RPM motor for efficient trimming.

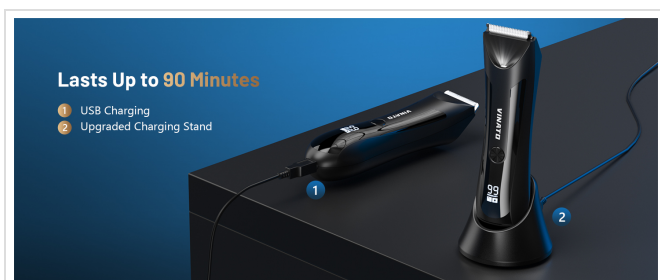 


Image: The trimmer submerged in water, illustrating its waterproof capability for wet or dry use.

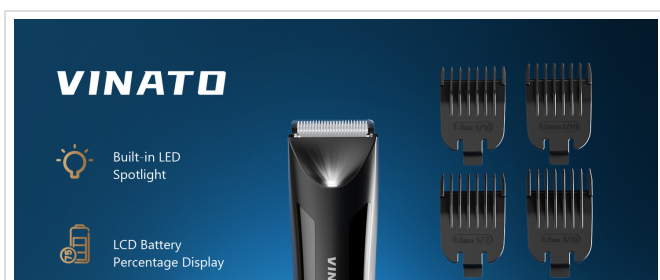 


Image: The trimmer charging via USB cable and resting on its upgraded charging stand.

## SETUP

---

1. **Initial Charge:** Before first use, fully charge your trimmer. Place the trimmer in the wireless charging dock or plug the USB cable directly into the trimmer. The LCD display will show the battery percentage. A full charge provides approximately 90 minutes of use.
2. **Attaching Guide Combs:** Select the desired guide comb (1.5mm, 2.5mm, 3.5mm, or 4.5mm). Align the comb with the trimmer head and gently push until it clicks into place. Ensure it is securely attached before use.
3. **Detaching Guide Combs:** To remove a guide comb, gently pull it away from the trimmer head.

Your browser does not support the video tag.

*Video: A short demonstration of the VINATO body hair trimmer, showing its features and how to attach guide combs.*

## OPERATING INSTRUCTIONS

---

1. **Power On/Off:** Press the power button to turn the trimmer on or off. The LED spotlight will illuminate when the device is active.
2. **Trimming without a Comb:** For a closer trim, use the trimmer without a guide comb. Hold the trimmer flat against the skin and move it slowly against the direction of hair growth.
3. **Trimming with a Comb:** For desired hair length, attach the appropriate guide comb. Hold the trimmer at a slight angle and move it smoothly against the hair growth.
4. **Sensitive Areas:** When trimming sensitive areas (e.g., groin, armpits), use extra caution. It is recommended to use a guide comb and stretch the skin taut to ensure a smooth surface.
5. **Wet or Dry Use:** The trimmer can be used on dry skin or in the shower for wet trimming.

# STYLE ALL AREAS OF YOUR BODY



Image: Visual guide for using the trimmer on different body areas, highlighting the versatility of the device and the use of guide combs.

## MAINTENANCE

- Cleaning the Blade:** After each use, detach the blade head by gently pushing it off. Rinse the blade head under running water to remove hair and debris. Use the provided cleaning brush for stubborn hairs.
- Cleaning the Trimmer Body:** The trimmer body can be rinsed under water due to its waterproof design. Ensure the charging port is dry before charging.
- Lubrication:** Periodically apply a small drop of the provided lubricating oil to the blades to maintain optimal performance and longevity. Turn the trimmer on for a few seconds to distribute the oil.
- Storage:** Store the trimmer in its charging dock or a dry place away from direct sunlight and extreme temperatures.

# FULLY WATERPROOF WORK WITH DRY AND WET



Image: The trimmer being cleaned under running water, demonstrating its waterproof feature for easy maintenance.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery or device lock engaged.	Charge the trimmer fully. Press and hold the power button for 3 seconds to unlock if necessary.
Poor trimming performance.	Blades are dull, dirty, or not properly lubricated.	Clean and lubricate the blades. Ensure guide comb is correctly attached. Consider replacing the blade head if excessively dull.
Trimmer makes unusual noise.	Hair caught in blades or internal issue.	Clean the blades thoroughly. If the issue persists, contact customer support.

## SPECIFICATIONS

- **Brand:** VINATO
- **Model:** Electric Body Hair Trimmer (B0B76XHTPX)
- **Power Source:** Battery Powered (1 Lithium Polymer battery included)
- **Battery Life:** Up to 90 minutes
- **Motor Speed:** 7000 RPM
- **Blade Material:** Ceramic
- **Waterproof:** Yes
- **Item Weight:** 0.39 Kilograms (approximately 13.76 ounces)
- **Color:** Blue (as per current product variant)
- **Recommended Uses:** Armpit, Back Hair, Beard, Chest, Genital, Leg, Pubic, Body

## WARRANTY AND SUPPORT

---

VINATO offers comprehensive after-sales support for your Electric Body Hair Trimmer.

- **Warranty:** Enjoy a one-year free replacement service from the date of purchase.
- **Customer Support:** Our dedicated support team is available to assist with any questions, concerns, or troubleshooting needs. Please refer to the contact information provided with your purchase or visit the official VINATO website for support.

