

[Manuals.plus](#) /

› [Drsn](#) /

› Drsn Universal TV Base Stand User Manual

Drsn Universal TV Stand Legs for 27-55 inch Smart TVs

Drsn Universal TV Base Stand User Manual

Model: Universal TV Stand Legs for 27"-55" Smart TVs

PRODUCT OVERVIEW

The Drsn Universal TV Base Stand provides a stable and convenient tabletop solution for your television. Designed for ease of installation without the need for wall drilling, these legs are compatible with a wide range of smart TVs from 27 to 55 inches. Constructed from high-quality ABS material, each leg features a non-slip pad at the base to ensure stability and protect your furniture surfaces.



Image: Components included with the Drsn Universal TV Base Stand, showing two stand legs, multiple sizes of screws, and washers for installation.

What's Included

Your Drsn Universal TV Base Stand package includes all necessary components for assembly:

- 2 x TV Base Stand Legs (Black, ABS Material)
- Assorted Screws for TV attachment
- Washers
- Installation Instructions

Packing list

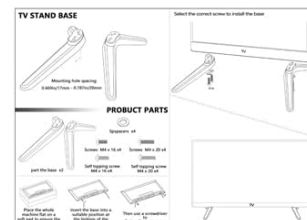


Image: A visual representation of the packing list, detailing the two TV stand legs, different screw types, and the included instruction manual.

COMPATIBILITY

These TV base stand legs are designed for universal compatibility with smart TVs ranging from 27 to 55 inches. They are specifically suited for TVs with bottom-mounted screw holes where the hole spacing is between 0.66 inches and 0.78 inches (1.68 cm - 1.98 cm). Please verify your TV's mounting hole configuration before installation.

Compatible brands include, but are not limited to: Samsung, TCL, Hisense, Sony, LG, VIZIO, RCA, Sceptre, Generic, Element, SANSUI, Supersonic, SYLVOX.

Compatible with most brands of LCD TV



Compatible Brands

SAMSUNG

TCL

Hisense

Sony

LG

VIZIO

RCA

Sceptre

Generic

Element

SANSUI

Supersonic

SYLVOX



Location of bottom mounting holes



Middle mounting hole position



Rear mounting hole position

Image: Illustrates the compatible bottom mounting hole position for the TV stand legs. It also shows examples of incompatible middle and rear mounting hole positions, emphasizing the need for bottom-located holes.

SETUP AND INSTALLATION

The Drsn TV Base Stand is designed for quick and easy installation, requiring no drilling into walls or the TV itself. Follow these steps for proper setup:

1. **Prepare Your TV:** Carefully lay your TV screen-down on a soft, clean surface to prevent scratches. Ensure the TV's bottom mounting holes are accessible and within the specified 0.66" - 0.78" range.
2. **Attach the Legs:** Align each TV stand leg with the corresponding mounting holes on the bottom of your television. The legs are designed to fit securely into these pre-existing holes.
3. **Secure with Screws:** Use the provided screws and washers to firmly attach the legs to the TV. Ensure all screws are tightened securely, but do not overtighten to avoid damaging the TV or the stand.
4. **Position the TV:** Once both legs are securely attached, carefully lift the TV and place it on your desired flat, stable surface, such as a TV cabinet or table. The non-slip pads on the bottom of the legs will help keep the TV stable.

This "hole-free" design ensures your walls remain undamaged and provides a tidy, comfortable viewing setup.

Just need 4 screws easy to install



Image: Detailed diagram illustrating the simple installation process, showing the TV stand legs being attached to the TV's bottom mounting holes using four screws. Key dimensions for hole spacing are also provided.

Hole – free assembly

Requires drilling holes in the wall

Tidy comfortable



Image: A visual comparison highlighting the "hole-free assembly" benefit of the Drsn TV stand, contrasting it with traditional wall mounts that require drilling.

OPERATING INSTRUCTIONS

Once installed, the Drsn TV Base Stand provides a fixed, stable platform for your television. No further operation is required for the stand itself. Ensure the TV is placed on a level and sturdy surface to maintain stability.



TV stand legs Improve quality of modern life style



Image: Depicts a television securely placed on the Drsn TV stand legs, showcasing its integration into a modern living space.

MAINTENANCE

The Drsn TV Base Stand requires minimal maintenance. To ensure its longevity and appearance:

- **Cleaning:** Wipe the stand legs with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these may damage the ABS material.
- **Inspection:** Periodically check that the screws securing the legs to the TV remain tight. If any looseness is detected, gently retighten them.
- **Surface Protection:** The integrated non-slip pads are designed to protect your furniture. Ensure these pads are clean and intact for optimal performance.

with non-slip pad


Marble countertop



Glass countertop



Wooden slab countertop

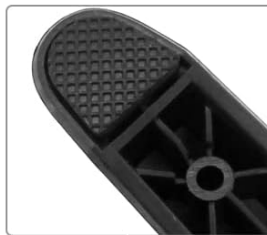

Anti-slip mat



Image: Highlights the non-slip pad feature of the TV stand legs, demonstrating its effectiveness on various surfaces like marble, glass, and wood, ensuring stability and preventing scratches.

TROUBLESHOOTING

If you encounter issues with your Drsn TV Base Stand, consider the following common solutions:

• Legs do not align with TV holes:

- Verify your TV's mounting hole spacing. These stands are designed for holes between 0.66" and 0.78" (1.68 cm - 1.98 cm).
- Ensure your TV has bottom-mounted holes. These stands are not compatible with middle or rear-mounted holes.
- Confirm you are attempting to install the legs on the correct side (left leg on left side, right leg on right side).

• TV feels unstable:

- Check that all screws are securely tightened.
- Ensure the TV is placed on a completely flat and stable surface.
- Verify that the non-slip pads on the bottom of the legs are intact and clean.
- Confirm your TV's size is within the compatible range (27-55 inches) and its weight does not exceed the stand's

capacity (implied by material and design, though not explicitly stated in specs, it's for typical TVs in this size range).

• **Missing parts:**

- Refer to the "What's Included" section and the packing list image to confirm all components were received. If parts are missing, contact customer support.

Note: One customer video shows an issue with hole alignment for a Hisense TV. While the product claims compatibility, individual TV models may vary. Always double-check your TV's specific mounting hole dimensions.

SPECIFICATIONS

Brand	Drsn
Model Compatibility	Universal for 27" - 55" Smart TVs
Mounting Type	Tabletop Mount
Movement Type	Fixed
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Black
Compatible Hole Spacing	0.66" - 0.78" (1.68 cm - 1.98 cm)
Item Weight	5 ounces (approx. 142 grams)
Package Dimensions	7.8 x 5.55 x 1.54 inches (approx. 19.8 x 14.1 x 3.9 cm)
UPC	765875895273

WARRANTY AND SUPPORT

For any questions regarding compatibility, installation, or product issues, please contact Drsn customer service. While specific warranty details are not provided in this manual, Drsn aims to provide great service and support for their products. If you are unsure if these TV legs are compatible with your TV, please reach out to the manufacturer for assistance before attempting installation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question