

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Timex](#) /

› [Timex Men's Chronograph 41mm Watch Instruction Manual \(Model TW2V43700VQ\)](#)

**Timex TW2V43700VQ**

# Timex Men's Chronograph 41mm Watch Instruction Manual

Model: TW2V43700VQ

## INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Timex Men's Chronograph 41mm Watch. This timepiece features a low-lead brass case, a round analog dial with three-hand quartz movement, Arabic and index hour markers, three sub-dials, and a date display. The watch is equipped with a quick-release leather strap and an adjustable buckle closure. It is water-resistant up to 50 meters.



Image: Front view of the Timex Men's Chronograph 41mm Watch with a black dial and black leather strap.

## 1. Setting Time and Date

1. **Pull the crown out to position 3.** The crown is the small knob on the side of the watch.
2. **Rotate the crown** to set the hour and minute hands to the correct time.
3. **Push the crown back to position 2.**
4. **Rotate the crown** to set the date. The date display is located at the 4 o'clock position.
5. **Push the crown back to position 1** (normal operating position) to start the watch.

## 2. Adjusting the Strap

The watch features a quick-release leather strap with an adjustable buckle closure. To adjust the fit, simply move the buckle pin to the desired hole on the strap. Ensure the watch is snug but comfortable on your wrist.



Image: Side view of the watch showing the crown and chronograph pushers.

## OPERATING THE WATCH

### 1. Chronograph Functions

Your Timex Chronograph watch includes sub-dials for measuring elapsed time. The specific functions of the sub-dials may vary slightly by model, but typically include:

- **Seconds Sub-dial:** Measures elapsed seconds.
- **Minutes Sub-dial:** Measures elapsed minutes.
- **24-Hour Sub-dial (if present):** Displays time in a 24-hour format.

To operate the chronograph:

1. **Start:** Press the top pusher (button) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the top pusher again to stop the chronograph. The elapsed time will be displayed on the sub-dials.
3. **Reset:** After stopping, press the bottom pusher to reset all chronograph hands to their zero positions.

## 2. INDIGLO Night-Light

The INDIGLO night-light illuminates the entire watch dial for easy reading in low-light conditions. To activate, simply press and hold the crown (the main setting knob) for a few seconds. The light will remain on as long as the crown is pressed.

## MAINTENANCE

---

### 1. Water Resistance

This watch is water-resistant up to 50 meters (164 feet). This rating means it is suitable for short periods of recreational swimming, showering, or washing hands. It is **not** suitable for diving, snorkeling, or prolonged water exposure. Always ensure the crown is fully pushed in before any contact with water.

### 2. Battery Replacement

The watch is powered by one Lithium Metal battery (included). When the watch stops running or the INDIGLO light dims significantly, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

### 3. Cleaning

To clean your watch, wipe the case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or strap. For leather straps, avoid excessive moisture and direct sunlight to prevent drying and cracking.



Image: Back view of the watch, showing the stainless steel back and water resistance marking.

## TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Date not changing:** Ensure the time is set correctly, passing midnight to advance the date. If the date is stuck, try manually advancing it using the crown in position 2.
- **Chronograph hands not resetting to zero:** This may indicate a need for calibration or service. Consult a professional watch repair service.
- **INDIGLO not working:** The battery may be low, or there could be an internal issue.

For persistent issues, contact Timex customer support or an authorized service center.

## SPECIFICATIONS

|                            |             |
|----------------------------|-------------|
| <b>Brand</b>               | Timex       |
| <b>Model Number</b>        | TW2V43700VQ |
| <b>Display Type</b>        | Analog      |
| <b>Watch Movement Type</b> | Quartz      |
| <b>Case Material Type</b>  | Brass       |

|                               |  |
|-------------------------------|--|
| <b>Case Diameter</b>          | 41 Millimeters                                     |
| <b>Case Thickness</b>         | 12 Millimeters                                     |
| <b>Band Material Type</b>     | Fabric (Leather Combo Strap)                       |
| <b>Band Width</b>             | 0.79 Inches  |
| <b>Band Length</b>            | 8 Inches   |
| <b>Crystal Type</b>           | Mineral Glass                                      |
| <b>Water Resistance Depth</b> | 50 Meters (164 Feet)                               |
| <b>Power Source</b>           | Battery Powered (1 Lithium Metal battery included) |
| <b>Item Weight</b>            | 0.21 Kilograms (approx. 7.41 ounces)               |

## WARRANTY AND SUPPORT

---

Your Timex watch is covered by a limited warranty. For detailed warranty information, including terms and conditions, please refer to the warranty card included with your purchase or visit the official Timex website. For customer support, service, or parts, please contact Timex directly through their official channels. Keep your proof of purchase for warranty claims.