

[Manuals.plus](#) /

› [Asmuse](#) /

› Asmuse 88-Key Digital Piano User Manual

Asmuse 7690eed8-dca7-4869-aaf1-8f847d3101ee

Asmuse 88-Key Digital Piano User Manual

Model: 7690eed8-dca7-4869-aaf1-8f847d3101ee

INTRODUCTION

This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your Asmuse 88-Key Digital Piano. Please read this manual thoroughly before using the instrument to ensure optimal performance and longevity.

1. SETUP

1.1 Unpacking and Component Check

Carefully remove all components from the packaging. Verify that all items listed below are present:

- Asmuse 88-Key Digital Piano Unit
- Power Adapter (DC 12V)
- Sustain Pedal
- Headphones
- User Manual (this document)
- Dust Cover



Figure 1: Digital Piano and Accessories

1.2 Power Connection

1. Locate the DC 12V input port on the rear panel of the digital piano.
2. Connect the power adapter cable to the DC 12V input port.
3. Plug the power adapter into a standard electrical outlet.



SUPPORT MULTIPLE DEVICES



SUS



AUDIO IN



AUDIO OUT



MIDI USB



DC 12V

Figure 3: Rear Panel Connections

2. OPERATING INSTRUCTIONS

2.1 Power On/Off and Volume Control

- To power on the piano, press the **ON/OFF** button located on the control panel.
- To power off, press the **ON/OFF** button again.
- Adjust the master volume using the **VOL** knob. Turn clockwise to increase volume, counter-clockwise to decrease.

2.2 Control Panel Overview

The control panel provides access to various functions and settings. The LCD screen displays current selections and parameters.

LCD SCREEN



Figure 4: Control Panel and LCD Screen

Key functions include:

- **TONE:** Select different instrument voices.
- **RHYTHM:** Choose from various rhythm patterns.
- **TEMPO:** Adjust the speed of rhythms or metronome.
- **DRUMKITS:** Access different drum sounds.
- **INTEGRATE:** (Specific function, refer to full manual for details)
- **SPLIT:** Divides the keyboard into two sections, each with a different voice.
- **DUAL:** Layers two voices simultaneously.
- **TRANS (Transpose):** Shift the pitch of the keyboard up or down.
- **SYNC:** Synchronize rhythm start with playing.
- **BEAT:** Adjust beat settings for metronome/rhythm.
- **RECORD/REC-PLAY:** Record your performance and play it back.

- **DEMO:** Play built-in demonstration songs.
- **PREV/NEXT:** Navigate through selections (tones, rhythms, songs).
- **PLAY/PAUSE:** Start or pause playback of rhythms, demos, or recorded tracks.
- **ENBBLE/STOP:** Enable or stop certain functions.

The piano features 88 semi-weighted keys, providing a realistic playing feel.



Figure 5: Key Features Overview

3. MAINTENANCE

3.1 Cleaning

- Use a soft, dry cloth to wipe the surface of the piano.
- For stubborn dirt, slightly dampen the cloth with water and a mild soap solution, then wipe dry immediately.
- Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.

3.2 Storage and Care

- Store the piano in a cool, dry place away from direct sunlight and extreme temperatures.
- Protect the instrument from dust using the provided dust cover when not in use.
- Avoid placing heavy objects on the keyboard.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty; power outlet not working.	Ensure the power adapter is securely connected to the piano and a working electrical outlet. Try a different outlet.
No sound	Volume is too low; headphones connected; external speakers not connected or off.	Increase the VOL knob. Disconnect headphones if sound is desired from built-in speakers. Ensure external speakers are powered on and connected correctly to AUDIO OUT .
Distorted or unclear sound	Volume too high; faulty audio connection; internal issue.	Reduce the volume. Check all audio cables for secure connection. If the issue persists, contact customer support.
Keys not responding	Debris under keys; internal malfunction.	Gently inspect keys for any obstructions. If the problem continues, contact customer support.

5. SPECIFICATIONS

Feature	Detail
Brand	Asmuse
Model Number	7690eed8-dca7-4869-aaf1-8f847d3101ee
Instrument Type	Digital Piano
Number of Keys	88
Key Type	Semi-weighted
Body Material	Plastic
Color	Brown
Dimensions (Product)	128.5 cm (L) x 27.2 cm (W) x 10.2 cm (H)
Package Dimensions	134 x 34.29 x 18.54 cm
Item Weight	12.4 Kilograms
Supported Software	MIDI Software
Special Feature	Modern Asmuse functionalities (e.g., Metronome, Synchrony Chord, Recording)
Skill Level	Intermediate



Figure 6: Product Dimensions

6. WARRANTY AND SUPPORT

6.1 Product Warranty

For information regarding the product warranty, please refer to the warranty card included with your purchase or contact your retailer. Warranty terms and conditions may vary by region and retailer.

6.2 Customer Support

If you encounter any issues or have questions not covered in this manual, please contact Asmuse customer support for assistance. Contact details can typically be found on the manufacturer's official website or through your purchase documentation.

