



[Manuals.plus](#) /
› [PayLessHere](#) /
› PayLessHere TV Stand (Model B0B7727B9N) Instruction Manual

PayLessHere B0B7727B9N

PayLessHere TV Stand Instruction Manual

Model: B0B7727B9N

1. PRODUCT OVERVIEW

The PayLessHere TV Stand is a versatile entertainment console designed to accommodate most flat-screen televisions up to 48 inches. It features a unique curved geometric design with an embossed wood grain finish, offering both aesthetic appeal and practical storage solutions for your living space. This unit includes open shelving and cabinets with glass doors, providing ample space for media devices, accessories, and decorative items.



Image 1.1: Overview of the PayLessHere TV Stand with a television.



Modern and fashionable TV cabinet

Unique embossed wood grain and complex curved geometry design

1 Spacious desktop design

2 Glass partition storage cabinet

3 Open storage for each layer

4 Unique curved open storage cabinet

Image 1.2: Key features of the TV Stand, including desktop, glass cabinets, and open storage areas.

2. SETUP AND ASSEMBLY

This PayLessHere TV Stand requires assembly. Please follow the detailed assembly instructions provided in the separate manual included with your product packaging. Ensure all components are present before beginning assembly. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

2.1 Package Contents

Refer to the parts list in your assembly manual to verify all hardware and panels are included.

2.2 Assembly Steps

1. Unpack all components and lay them out on a protected surface.
2. Identify each part using the provided labels and diagrams.
3. Follow the step-by-step instructions in the assembly manual carefully.
4. Ensure all screws and fasteners are tightened securely, but do not overtighten.
5. Once assembled, place the TV stand in its desired location.

Product parameters

Unit(inch)

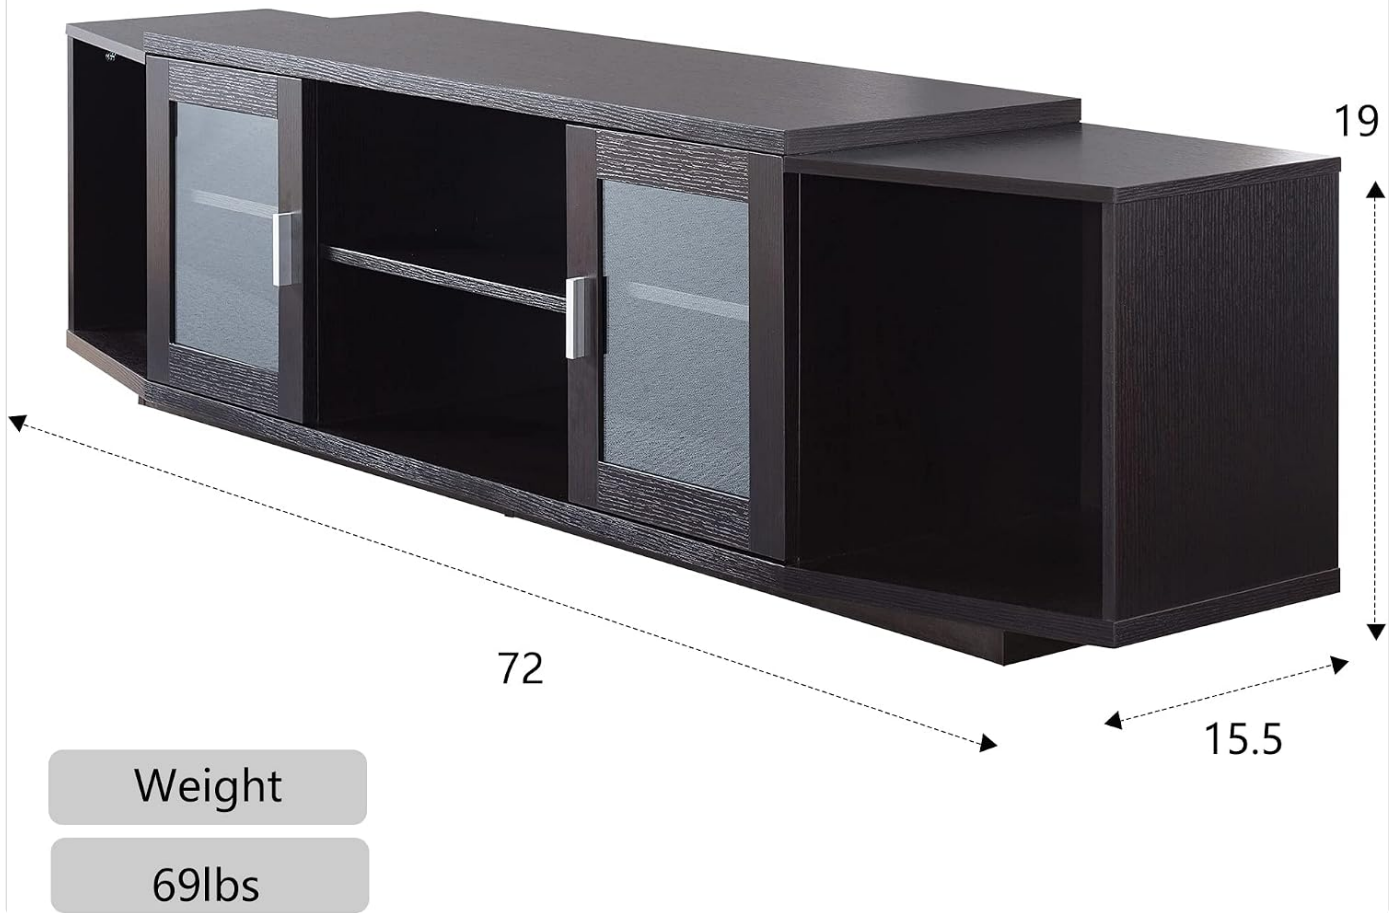


Image 2.1: Product dimensions for placement planning.

2.3 Cable Management

The TV stand includes integrated wire holes in the cabinet design to help manage and organize cables for your audio and video equipment. Route cables through these openings to maintain a tidy appearance and prevent tangles.



Image 2.2: Detail of the wire hole design for cable organization.

3. OPERATING INSTRUCTIONS

The PayLessHere TV Stand is designed for functional use as a media console and storage unit. It can also serve as a hallway table or sofa table.

3.1 Placing Your Television


- Place your television centrally on the spacious desktop.
- Ensure the TV base is fully supported by the stand's surface.
- This stand is suitable for most flat-screen TVs up to 48 inches.

3.2 Utilizing Storage Space

- **Open Shelves:** Use the four open shelves for easy access to devices like set-top boxes, gaming consoles, or decorative items.
- **Glass Door Cabinets:** The two cabinets with glass doors provide enclosed storage for DVDs, CDs, remote controls, or other items you wish to keep dust-free and neatly organized while still visible.

Glass display cabinet

Items are clearly placed inside

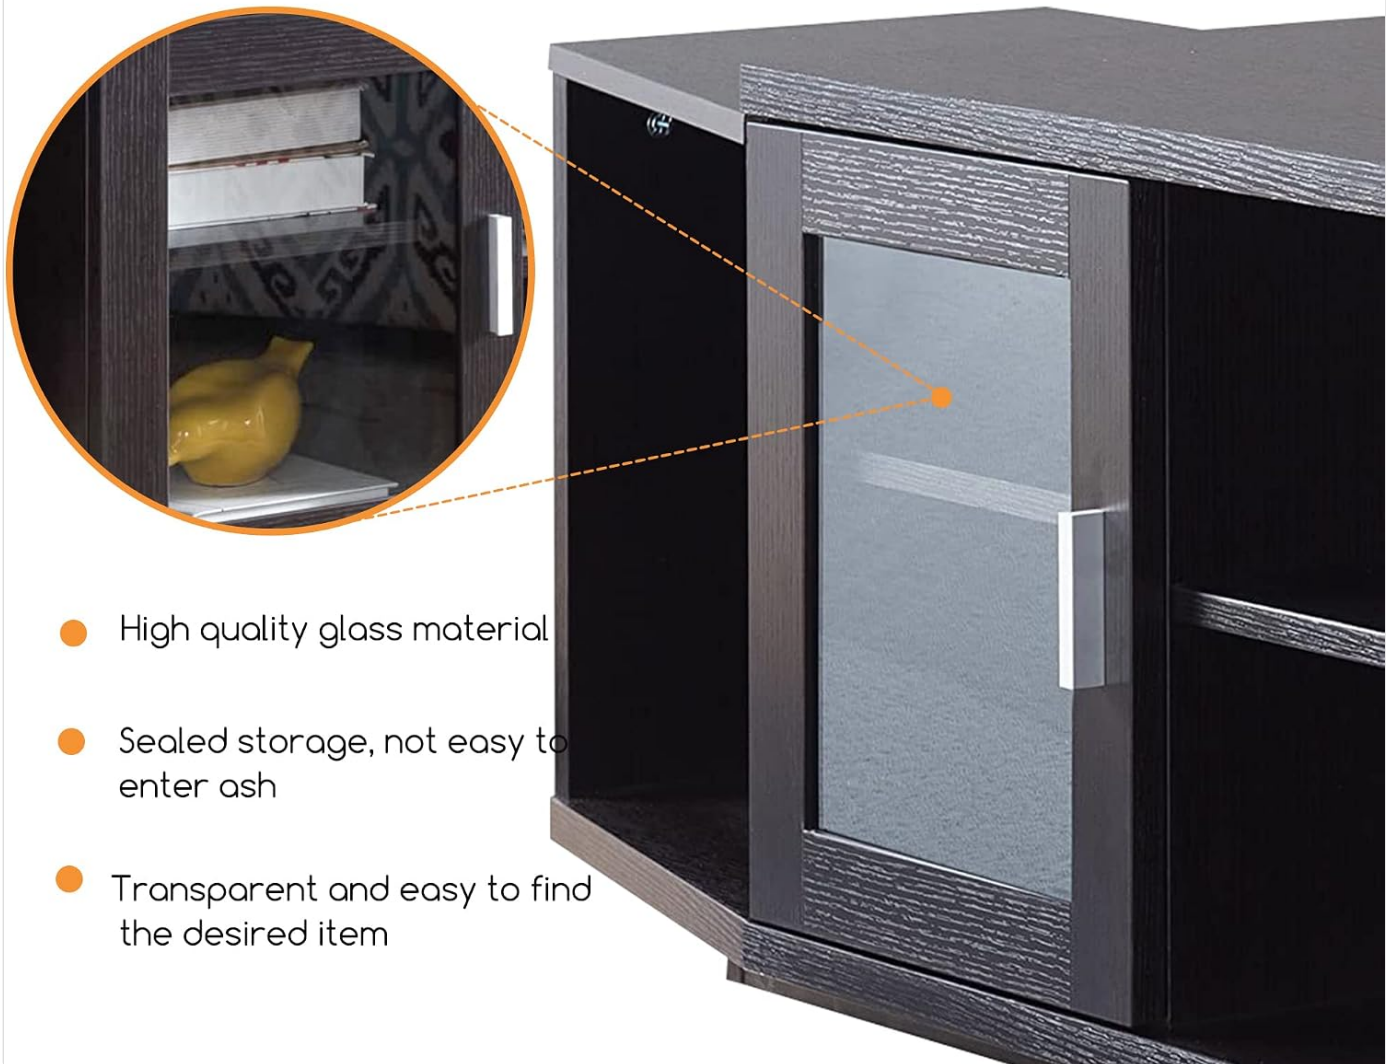

- High quality glass material
- Sealed storage, not easy to enter ash
- Transparent and easy to find the desired item

Image 3.1: Detail of the glass display cabinet, offering sealed and transparent storage.

4. MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your PayLessHere TV Stand.

4.1 Cleaning Instructions

- For general cleaning, wipe surfaces with a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish or glass.
- Promptly wipe up any spills to prevent staining.
- The glass doors can be cleaned with a standard glass cleaner and a lint-free cloth.

4.2 Material Properties

The TV stand is constructed from thick, durable material with strong hardness, offering wear and scratch resistance. Skilled craftsmanship ensures good edge sealing.

Wire hole design

Open cabinet cable hole design, reserving holes for audio and setting boxes to accommodate cables



Image 4.1: Material properties highlighting durability and ease of cleaning.

4.3 General Care

- Avoid exposing the stand to direct sunlight or extreme temperature changes.
- Do not place hot items directly on the surface without protection.
- Periodically check and tighten any loose fasteners to maintain structural integrity.

5. TROUBLESHOOTING

If you encounter any issues with your PayLessHere TV Stand, please refer to the following common solutions.

5.1 Stability Issues

- **Problem:** The stand feels wobbly or unstable.
- **Solution:** Ensure all assembly screws and fasteners are securely tightened. Check that the stand is placed on a level surface. If necessary, adjust any leveling feet (if present) or place shims under the base.

5.2 Damaged or Missing Parts

- **Problem:** Parts are damaged or missing upon arrival.
- **Solution:** Do not proceed with assembly. Contact PayLessHere customer support immediately for assistance with replacement parts.

5.3 Difficulty with Assembly

- **Problem:** Unable to complete assembly following the instructions.
- **Solution:** Review the assembly manual carefully, paying close attention to diagrams and step sequences. Ensure you are using the correct hardware for each step. If issues persist, contact customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	B0B7727B9N
Dimensions (L x W x H)	72 x 15.5 x 19.25 inches
Item Weight	69 pounds
Color	Brown
Material	Engineered Wood, Glass
Max TV Size Supported	Up to 48 inches
Number of Open Shelves	4
Number of Glass Door Cabinets	2
Assembly Required	Yes

7. WARRANTY AND SUPPORT

For warranty information or customer support regarding your PayLessHere TV Stand, please refer to the documentation included with your purchase or contact PayLessHere customer service directly. Contact details are typically available on the manufacturer's website or through your retailer.