

Cheerble Wicked Ball SE

Cheerble Wicked Ball SE Intelligent Interactive Dog Toy Manual

Model: Wicked Ball SE | Brand: Cheerble

INTRODUCTION

Welcome to the instruction manual for your Cheerble Wicked Ball SE. This intelligent interactive dog toy is designed to provide engaging play for puppies and small dogs, stimulating their natural instincts with various interactive modes and LED lights. Please read this manual carefully to ensure proper use and maintenance of your Wicked Ball SE.

WHAT'S IN THE BOX

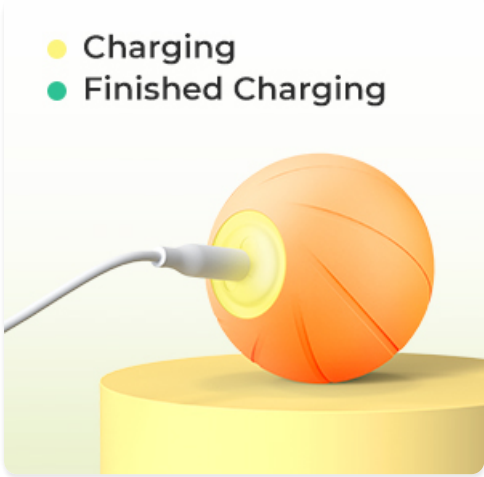


Image: The package contents, including the Wicked Ball SE, DC charging cable, and user manual.

- 1x Wicked Ball SE
- 1x DC Charging Cable
- 1x User Manual

FEATURES

Best Gift for Your Pet

Bring Happiness & Health to Your Pet



Image: Visual representation of the three interactive modes: Normal (active rolling & bouncing), Passive (bouncing on contact), and Gentle (slow rolling or shaking on contact).

The Wicked Ball SE offers three distinct interactive modes to suit your pet's play style:

- **Normal Mode:** Provides active rolling and bouncing for energetic play.
- **Passive Mode:** Activates with bouncing motion only upon contact, ideal for less intense play.
- **Gentle Mode:** Features slow rolling or gentle shaking on contact, suitable for timid or calm pets.

Play-Rest Balance



Alleviate
Loneliness



Improve
Intelligence



Separation
Anxiety



Weight
Management

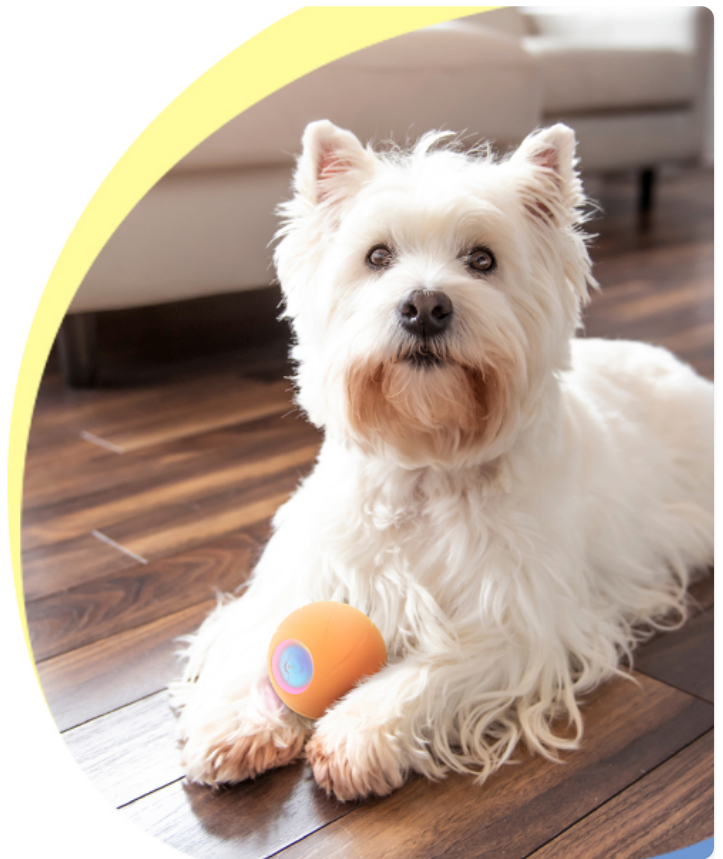


Image: A circular diagram showing a 10-minute play cycle followed by a 30-minute rest cycle. The ball reactivates upon pet's touch during rest time.

The Wicked Ball SE is designed with a smart play-rest cycle. After 10 minutes of active play, it enters a 30-minute rest period. During this rest time, the ball will reactivate for another 10 minutes of play if touched by your pet, promoting balanced activity.

LED Indicators

Status of Led Indicator

3 Motions with different movements, always keep your dog interested.

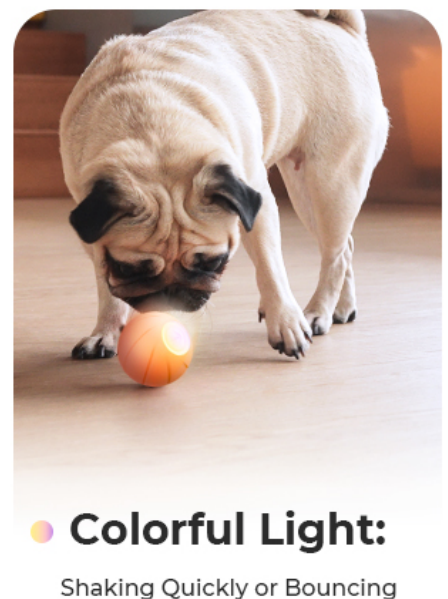
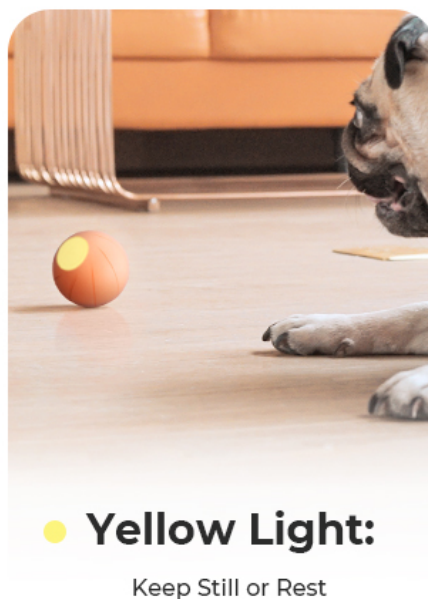
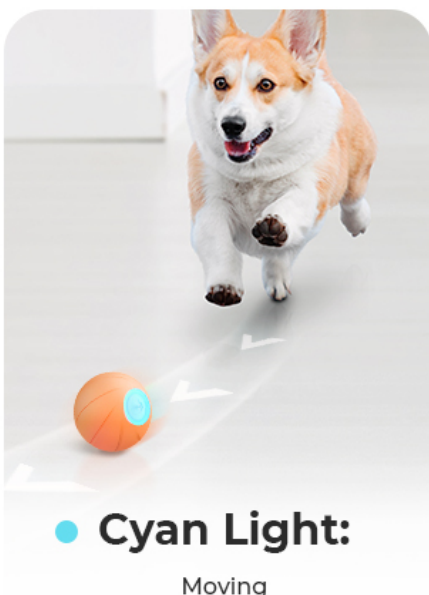


Image: Displays the LED colors and their corresponding meanings: Cyan (moving), Yellow (flashing, keeping still), Colorful Light (shaking quickly or jumping), and Red (flashing, low battery).

The LED light changes color to indicate the ball's current mode and status:

- **Cyan Light:** Indicates the ball is moving.
- **Yellow Light:** Indicates the ball is keeping still or in rest mode.
- **Colorful Light:** Indicates quick shaking or jumping motions.
- **Red Light (Flashing):** Indicates low battery.

Durable Material

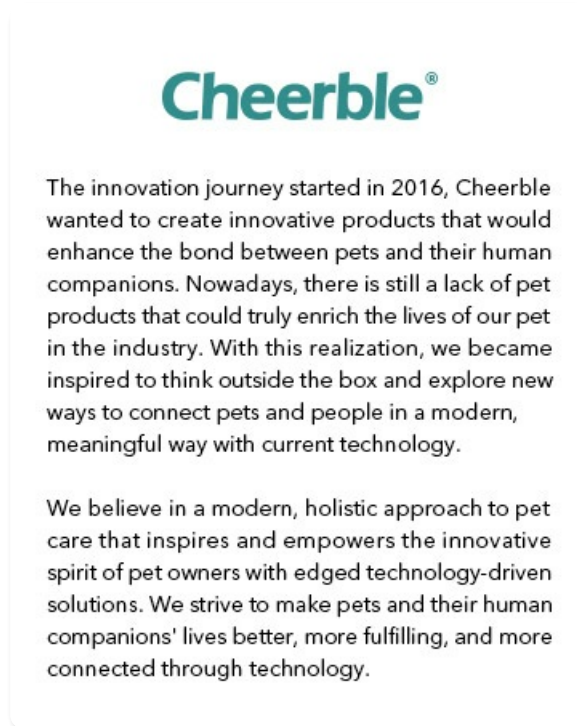


Image: A cutaway view of the Wicked Ball SE highlighting its natural rubber construction for durability and reduced noise.

The Wicked Ball SE is constructed from natural rubber, ensuring durability and minimizing noise during play. This design provides a robust toy for your pet's enjoyment.

SETUP

Charging the Ball

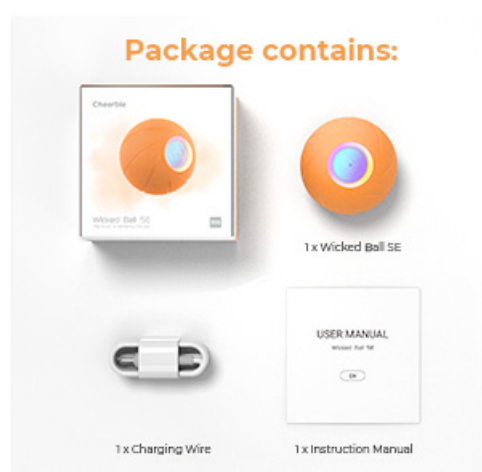


Image: The Wicked Ball SE plugged in for charging. A yellow light indicates charging, and a green light indicates charging is complete.

To charge your Wicked Ball SE:

1. Locate the charging port on the ball.
2. Connect the provided DC charging cable to the ball and a suitable USB power source.
3. The LED will show a **yellow light** while charging.
4. Once fully charged, the LED will turn **green**.

Power On/Off and Mode Selection



Image: A hand pressing the central button on the Wicked Ball SE, indicating its function for power and mode selection.

To power on, power off, or change modes:

1. Press and hold the power button (located on the center of the ball) for 3 seconds to turn the ball on or off.
2. Once powered on, short press the button to cycle through the three interactive modes (Normal, Passive, Gentle). The LED color will change to indicate the selected mode.

OPERATING THE WICKED BALL SE

After selecting your desired mode, place the Wicked Ball SE on a suitable surface. The ball will begin its interactive movements according to the chosen mode. Encourage your pet to interact with the ball. The ball is designed to react to your pet's touch, providing dynamic and engaging play.

Suitable Play Surfaces

Stronger in Materials. More Peace of Mind.

Made of natural rubber that is more durable and makes less noise.

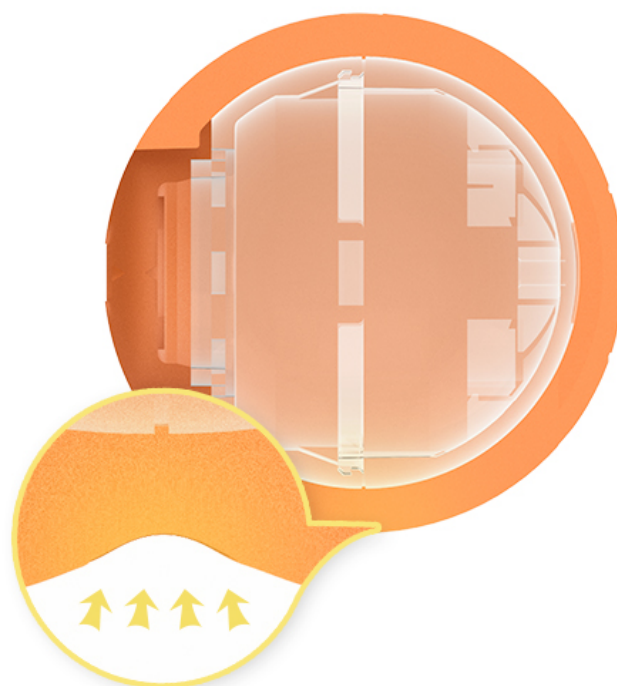


Image: A grid showing the Wicked Ball SE is suitable for Wooden Floors, Tile Floors, and Thin Carpets (indicated by green checkmarks), but not for Thick Carpet (indicated by a red 'X').

For optimal performance, use the Wicked Ball SE on:

- Wooden Floors
- Tile Floors
- Thin Carpets

Avoid using the ball on thick carpets, as this may impede its movement and functionality.

MAINTENANCE

To ensure the longevity and hygiene of your Wicked Ball SE:

- Wipe the exterior of the ball with a damp cloth to remove dirt and debris.
- Do not immerse the ball in water.
- Store the ball in a cool, dry place when not in use.

TROUBLESHOOTING

If you encounter issues with your Wicked Ball SE, please refer to the following common solutions:

- **Ball not turning on:** Ensure the ball is fully charged. Connect it to the charger and wait for the LED to turn green. If it still doesn't turn on, try pressing and holding the power button firmly for 3-5 seconds.
- **Ball not moving or reacting:** Check if the ball is on a suitable surface (e.g., not thick carpet). Ensure it is fully charged and in an active play mode.
- **Short battery life:** Make sure the ball is fully charged before each use. Battery life can vary based on usage patterns and selected mode.

If problems persist, please contact Cheerble customer support for further assistance.

SPECIFICATIONS

Attribute	Value
Brand Name	Cheerble
Model Name	Wicked Ball SE
Item Weight	5 ounces (0.31 Pounds)
Item Dimensions LxWxH	2.2 x 2.2 x 2.2 inches
Material	Rubber
Target Audience	Dogs (Puppy/Small Dogs, Medium Breeds)
Color	Orange
Manufacturer	Cheerble
Date First Available	October 17, 2023

WARRANTY AND SUPPORT

Cheerble products are designed for quality and durability. For information regarding product warranty, returns, or technical support, please refer to the official Cheerble website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

For additional resources and product information, visit the [Cheerble Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B77FV5X1>

More documents and user manuals: <https://manuals.plus/>