

[manuals.plus](#) /› [FOHERE](#) /› [FOHERE 6.3-Quart Electric Hot Oil Popcorn Popper Machine Instruction Manual](#)

FOHERE POPCORN MACHINE

FOHERE 6.3-Quart Electric Hot Oil Popcorn Popper Machine Instruction Manual

Model: POPCORN MACHINE

Brand: FOHERE

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your FOHERE 6.3-Quart Electric Hot Oil Popcorn Popper Machine. Please read all instructions carefully before first use and retain for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always remove the black vent cover from the transparent lid during operation to prevent steam buildup and potential melting due to high temperatures.
- Do not immerse the main base of the popcorn machine in water or any other liquid. This can cause electrical shock or damage to the appliance.
- Turn off the machine immediately once popping stops to prevent burning the popcorn.
- Use the anti-scald handles when handling hot components.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- This appliance is for household use only.

PRODUCT COMPONENTS

Your FOHERE Popcorn Machine includes the following parts:

- 1x Popcorn Machine Base (Red/Black)
- 1x Detachable & Nonstick Popping Plate with Stirring Rod
- 1x 6-Quart Transparent Lid (doubles as a serving bowl)
- 1x Black Vent Cover (for transparent lid)
- 1x 30ml Small Measuring Cup (for oil)
- 1x 100ml Large Measuring Cup (for corn kernels)
- 1x Instruction Manual

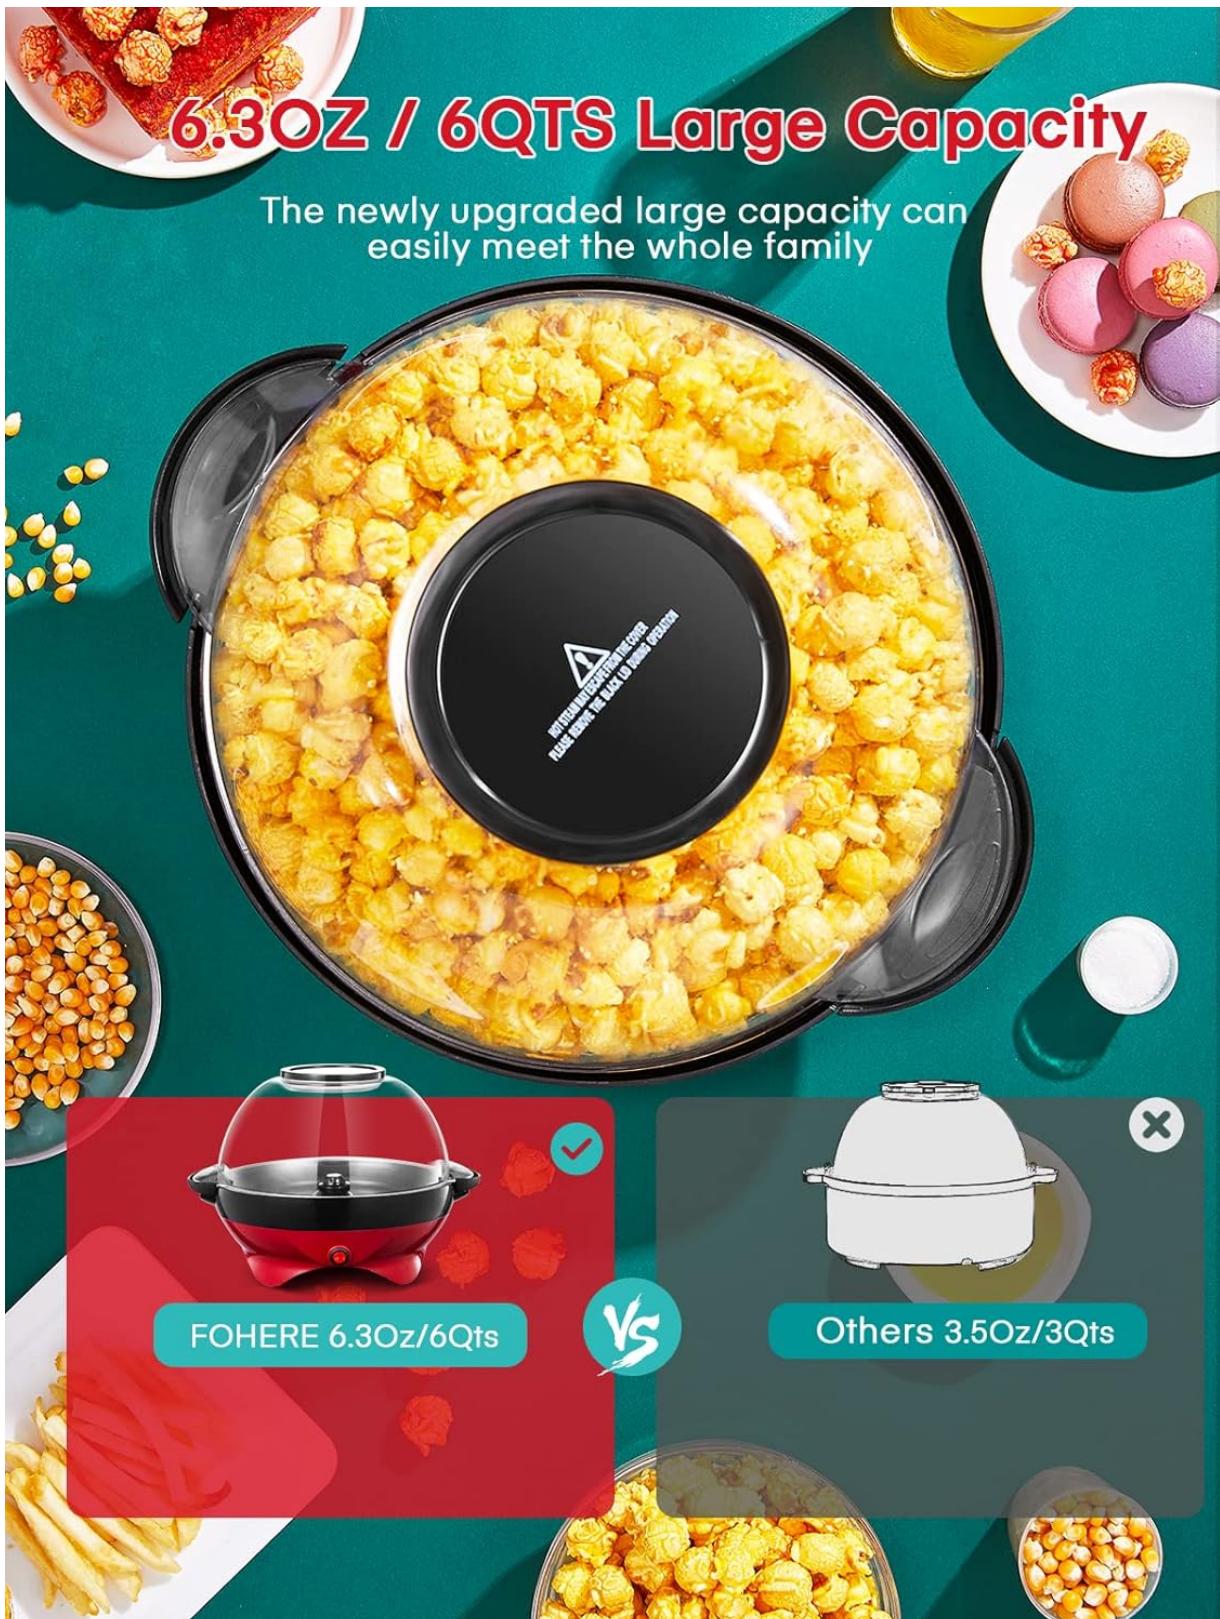


Image: All components of the FOHERE Popcorn Machine, including the base, popping plate, transparent lid, black vent cover, and measuring cups.

SETUP AND FIRST USE

1. Unpack all components and remove any packaging materials.
2. Wipe down the nonstick popping plate and transparent lid with a damp cloth. Ensure all parts are dry before assembly.
3. Align the detachable popping plate with the base and ensure it is securely seated.
4. Place the transparent lid onto the popping plate.

5. Ensure the black vent cover is removed from the transparent lid before operation.



Image: A person assembling the popcorn machine by placing the transparent lid onto the base and popping plate.

OPERATING INSTRUCTIONS

- Prepare Ingredients:** Pour 30ml of oil (using the small measuring cup) onto the nonstick popping plate, spreading it in a circular motion.
- Add Kernels:** Use the large measuring cup to add 100g (approximately 4.6 ounces) of corn kernels to the popping plate. You may also sprinkle sugar or other seasonings evenly at this stage if desired.
- Cover and Power On:** Place the transparent lid onto the popping plate. Ensure the black vent cover

is removed. Plug in the machine and press the power switch button to the "ON" position. The stirring rod will begin to rotate.

4. **Popping Process:** The machine will begin heating and popping. This typically takes about 3 minutes for 6.3 quarts (28 cups) of popcorn.
5. **Monitor Popping:** Observe the popcorn through the transparent lid. Once the popping sounds significantly slow down or stop, immediately turn off the power switch.
6. **Serve:** Carefully place the black vent cover back onto the transparent lid. Hold both handles of the transparent lid and the popping plate, then carefully flip the entire unit 180 degrees. The transparent lid now serves as a large serving bowl filled with popcorn.

Your browser does not support the video tag.

Video: A step-by-step tutorial demonstrating the usage of the FOHERE Popcorn Machine, from adding ingredients to serving the popcorn.




Just Rotate The Popping Plate Easily



Large Bowl for Serving Popcorn

Image: A person adding oil and corn kernels to the popping plate of the FOHERE Popcorn Machine.

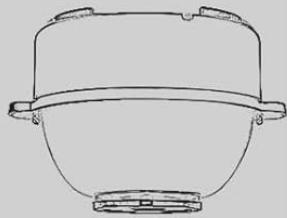

- Pop 3qts popcorn

- Flip the whole machine

- Popcorn tasteless, soft

- Old heating pipe, easy to break




- Pop 6.3Oz/ 6Qts Popcorn

- Flip directly the popping plate

- DIY various flavors, crispy

- Bold heating pipe, long life

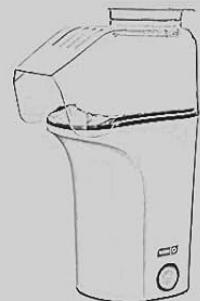

- Pop 2qts popcorn

- Spray popcorn everywhere

- Popcorn no taste, soft


- Local heating tube, easy to break

Image: The FOHERE Popcorn Machine actively popping corn, with the transparent lid showing the process.

Be Your Silent Pal



55dB quiet operation

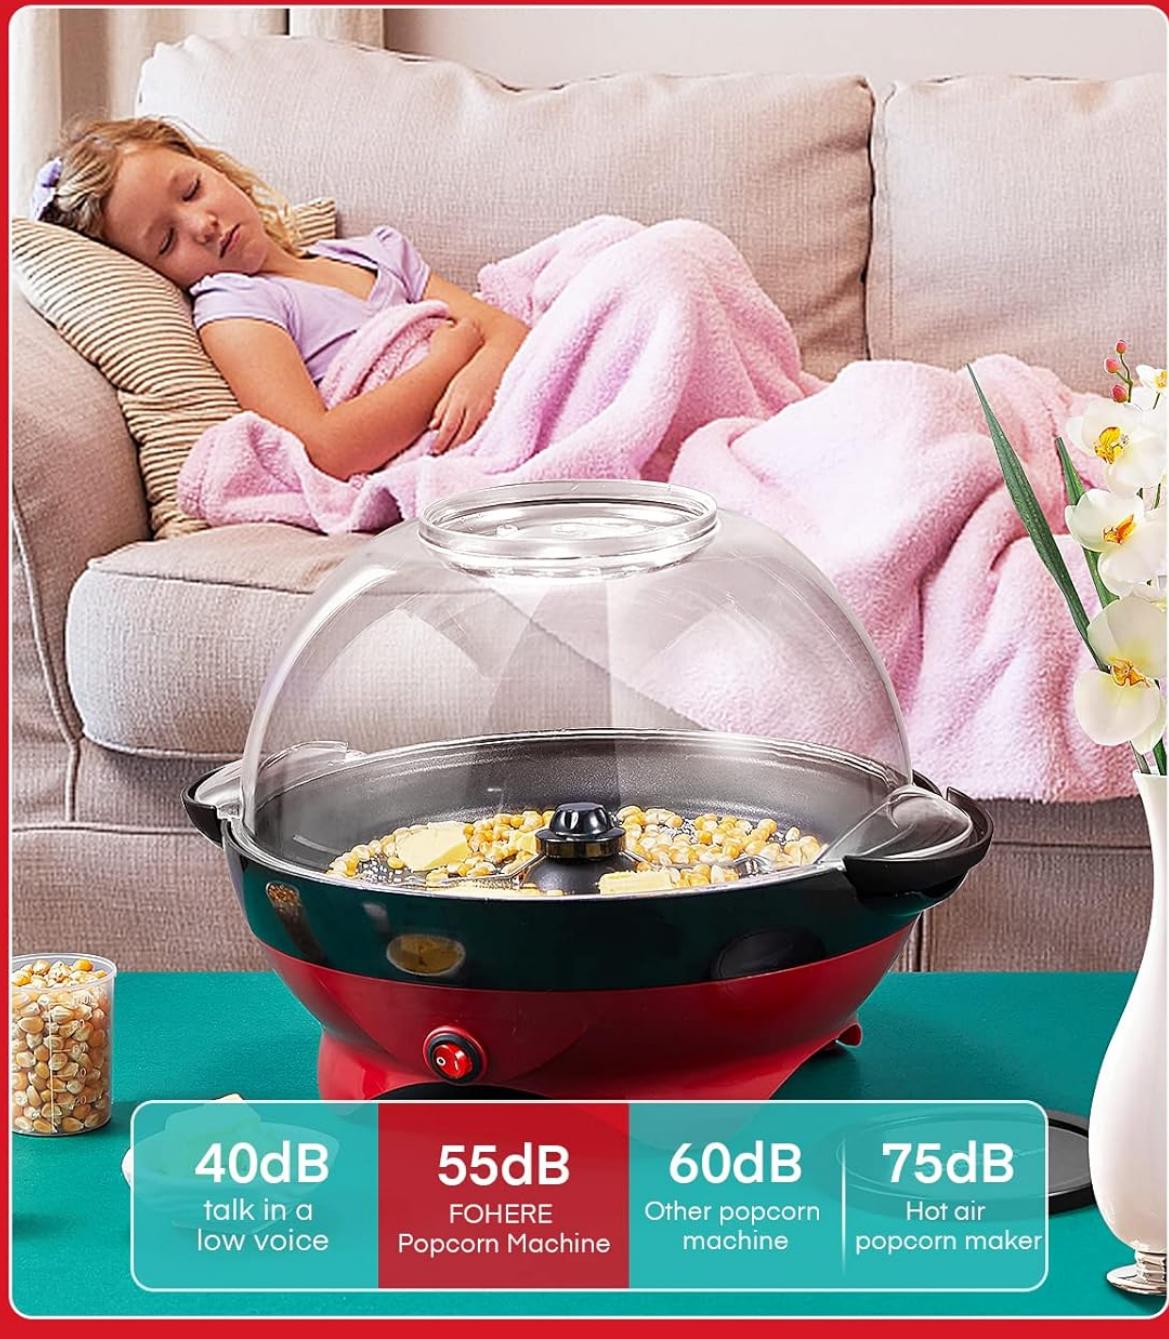

40dB

talk in a
low voice

55dB

FOHERE
Popcorn Machine

60dB

Other popcorn
machine

75dB

Hot air
popcorn maker

Image: A person demonstrating how to flip the popcorn machine to convert the transparent lid into a serving bowl.

MAINTENANCE AND CLEANING

- Unplug and Cool:** Always unplug the machine from the power outlet and allow it to cool completely before cleaning.
- Clean Popping Plate:** The detachable nonstick popping plate can be easily wiped clean with a soft, damp cloth. For stubborn residue, use mild soap and water. Ensure it is completely dry before storage.
- Clean Transparent Lid:** The transparent lid can be washed with warm, soapy water. It is also dishwasher safe.

4. **Clean Base:** Wipe the exterior of the main base with a damp cloth. Never immerse the base in water.



Image: A person cleaning the detachable nonstick popping plate with a cloth, highlighting its easy-to-clean design.

TROUBLESHOOTING

Popcorn Not Popping or Burning

- **Vent Cover:** Ensure the black vent cover is removed during popping to allow steam to escape. Steam buildup can affect popping efficiency and cause burning.
- **Timing:** Turn off the machine immediately once popping slows down significantly to prevent kernels from burning.
- **Ingredients:** Use fresh popcorn kernels and the recommended amount of oil.

Lid Not Staying On (for serving)

- Ensure the black vent cover is securely placed on the transparent lid before attempting to use it as a serving bowl. If the lid is damaged, contact customer support for a replacement.

SPECIFICATIONS

Feature	Detail
Brand	FOHERE
Model	POPCORN MACHINE
Capacity	6.3 Quarts (28 Cups)
Power	800W
Special Feature	Quiet Operation, Automatic Stirring
Material	Plastic, Nonstick Plate
Product Dimensions	13.98" L x 11.81" W x 9.76" H
Item Weight	4.82 pounds (2.19 Kilograms)
Certifications	ETL Certified

WARRANTY AND SUPPORT

FOHERE provides professional customer service and lifetime technical support for this product. For warranty claims or technical assistance, please refer to the contact information provided in your product packaging or visit the official FOHERE website.

For additional information or to explore other FOHERE products, visit the [FOHERE Store on Amazon](#).



Image: The FOHERE brand logo.