

[manuals.plus](#) /› [Sokany](#) /› [Sokany 3-in-1 Electric Griller SK-221 User Manual](#)

Sokany SK-221

Sokany 3-in-1 Electric Griller User Manual

Model: SK-221 | Brand: Sokany

INTRODUCTION

Thank you for purchasing the Sokany 3-in-1 Electric Griller, Model SK-221. This versatile appliance is designed for convenient and healthy cooking, allowing you to grill, fry, and prepare various dishes with ease. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.

- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Sokany 3-in-1 Electric Griller is designed for versatile cooking. It features a non-stick cooking surface with specialized sections for different food types.

Key Features:

- **3-in-1 Functionality:** Combines grilling, frying, and egg preparation.
- **Non-Stick Surface:** Ensures easy food release and simple cleaning.
- **Specialized Cooking Zones:** Includes heart-shaped molds for eggs and a striped section for grilling meats.
- **600W Power:** Provides efficient and consistent heating.
- **Compact Design:** Ideal for small kitchens or individual use.

Components:

- Main Griller Unit with Non-Stick Plate
- Power Switch
- Power Cord
- Included Accessories: Spatula, Brush



Image: Top view of the griller, highlighting the heart-shaped egg sections and the steak grilling area. This design allows for personalized and stylish cooking.



Image: View of the internal heating element, demonstrating the 600W large firepower for quick and efficient cooking.

TWO COLOR RENDERING

PERSONAL FASHION SELECTION

● BLUE



● RED



Image: The griller is available in two color options, blue and red, allowing for personal fashion selection.

SETUP

- Unpack:** Carefully remove the griller and all accessories from the packaging. Retain packaging for storage or future transport.
- Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
- Initial Cleaning:** Before first use, wipe the non-stick cooking plates with a damp cloth. Dry thoroughly. Wipe the exterior with a soft, damp cloth. Do not immerse the unit in water.
- Placement:** Place the griller on a stable, heat-resistant, and dry surface, away from flammable materials. Ensure there is adequate ventilation around the appliance.
- Power Connection:** Ensure your power outlet matches the voltage requirements of the appliance (600W). Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Sokany 3-in-1 Electric Griller is designed for straightforward operation.

- 1. Preheating:** Plug in the griller and turn on the power switch. The indicator light will illuminate, signaling that the griller is heating. Allow 3-5 minutes for the griller to reach optimal cooking temperature.
- 2. Cooking Eggs:** For heart-shaped eggs, crack eggs directly into the designated molds on the non-stick plate. Cook until desired doneness.
- 3. Grilling Meats/Vegetables:** Place thinly sliced meats (e.g., steak, sausages) or vegetables onto the striped grilling section. For best results, lightly brush food with oil before placing it on the griller.
- 4. General Frying:** Use the flat sections for general frying of items like tomatoes or other small ingredients.
- 5. Monitoring:** Cooking times will vary based on food type, thickness, and desired doneness. Monitor food closely to prevent overcooking or burning. The non-stick surface and consistent heating help prevent food from sticking and burning.
- 6. Serving:** Use the included spatula or a heat-resistant, non-metallic utensil to remove cooked food.
- 7. Switch Off:** After cooking, turn off the power switch and unplug the appliance from the wall outlet. Allow the griller to cool completely before cleaning.



Image: The griller in use, showing perfectly cooked steak and heart-shaped eggs. This highlights the smokeless, non-stick, and healthy cooking capabilities, preventing overcooked or burnt food.



Image: A complete meal prepared on the griller, featuring steak, eggs, and tomatoes, alongside sausages and other breakfast items. This demonstrates the versatility of the 3-in-1 design.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Sokany Electric Griller.

- 1. Cool Down:** Always ensure the griller is unplugged and completely cool before cleaning.
- 2. Cooking Plates:** Wipe the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn food residue, use a small amount of mild dish soap. Avoid abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating. The included brush can help remove crumbs.
- 3. Exterior:** Wipe the exterior housing with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- 4. Do Not Immerse:** Never immerse the main griller unit, power cord, or plug in water or any other liquid.
- 5. Storage:** Once clean and dry, store the griller in a cool, dry place. You may wrap the cord for neat storage.

TROUBLESHOOTING

If you encounter issues with your griller, refer to the following common problems and solutions:

- **Griller does not heat up:**

- Ensure the power cord is securely plugged into a working electrical outlet.

- Check if the power switch is in the 'ON' position.
- Verify that the power outlet is functional by testing it with another appliance.

- **Food sticks to the cooking plate:**

- Ensure the griller has been properly preheated before adding food.
- Lightly brush the cooking surface or the food with a small amount of cooking oil before use.
- Avoid using metal utensils that can scratch and damage the non-stick coating.

- **Uneven cooking:**

- Ensure food is spread evenly across the cooking surface.
- Allow the griller to fully preheat before adding food.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Specification	Detail
Model Number	SK-221
Brand	Sokany
Power	600 Watts
Product Dimensions	21 x 21 x 6 cm
Item Weight	2.27 Kilograms
Material	Stainless Steel (cooking plates)
Special Features	Non-stick coating, Smokeless cooking, 3-in-1 functionality
Included Components	Spatula, Brush

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact the retailer where you purchased the appliance. Keep your purchase receipt as proof of purchase.