

[Manuals.plus](#) /

› [Loncin](#) /

› Loncin G420F 16 HP 420cc Gasoline Engine User Manual

Loncin G420F

Loncin G420F 16 HP 420cc Gasoline Engine User Manual

Model: G420F

1. INTRODUCTION

This manual provides important information for the safe and efficient operation, maintenance, and troubleshooting of your Loncin G420F 16 HP 420cc gasoline engine. Please read this manual thoroughly before operating the engine to ensure proper use and to prevent injury or damage.

The Loncin G420F is a robust single-cylinder, four-stroke engine designed for demanding applications. It features a displacement of 420 cc and a maximum power output of 16 HP (11.7 kW) at 3600 rpm, with a maximum torque of 27 Nm at 2500 rpm. Its versatile design makes it suitable as a replacement engine for various equipment, including vibratory plates, tillers, beam mowers, go-karts, and single-axle machines.

2. SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions could result in serious injury or death.

- Always operate the engine in a well-ventilated area. Exhaust fumes contain carbon monoxide, which is a colorless, odorless, and deadly gas.
- Do not refuel the engine while it is running or hot. Allow the engine to cool down before adding fuel.
- Store fuel in an approved container in a cool, well-ventilated place, away from ignition sources.
- Keep hands, feet, and clothing away from moving parts of the engine.
- Wear appropriate personal protective equipment (PPE), such as safety glasses and gloves, when operating or maintaining the engine.
- Ensure the engine is securely mounted before operation.
- Do not modify the engine. Unauthorized modifications can affect performance, safety, and void the warranty.
- Keep children and pets away from the engine during operation.

3. PRODUCT OVERVIEW

The Loncin G420F engine is designed for reliability and ease of use. Key components include:

- **Fuel Tank:** 6.5-liter capacity for extended operation.
- **Air Filter:** Enlarged design for optimal air cleaning and reduced emissions.
- **Crankshaft:** Standardized 25mm diameter with keyway for versatile applications.
- **Recoil Starter:** Manual cable starter for reliable engine ignition.
- **Oil Fill Cap/Dipstick:** For checking and adding engine oil.
- **Spark Plug:** Essential for ignition.
- **Engine Stop Switch:** For quickly shutting down the engine.



Figure 1: Front-side view of the Loncin G420F engine, showing the fuel tank, air filter, and recoil starter.

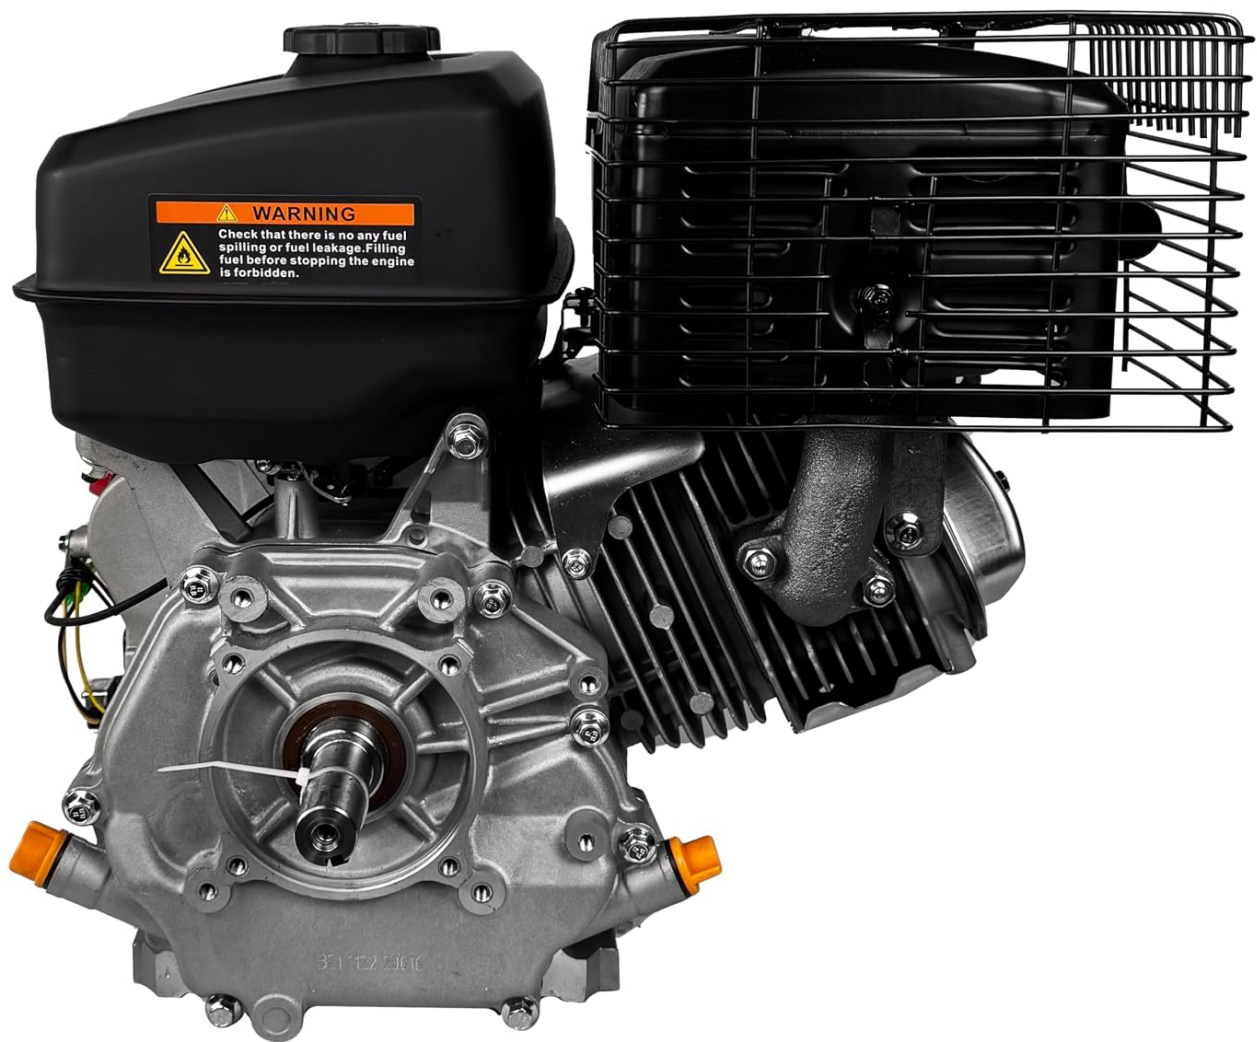
 


Figure 2: Side view of the Loncin G420F engine, highlighting the cooling fins and exhaust.



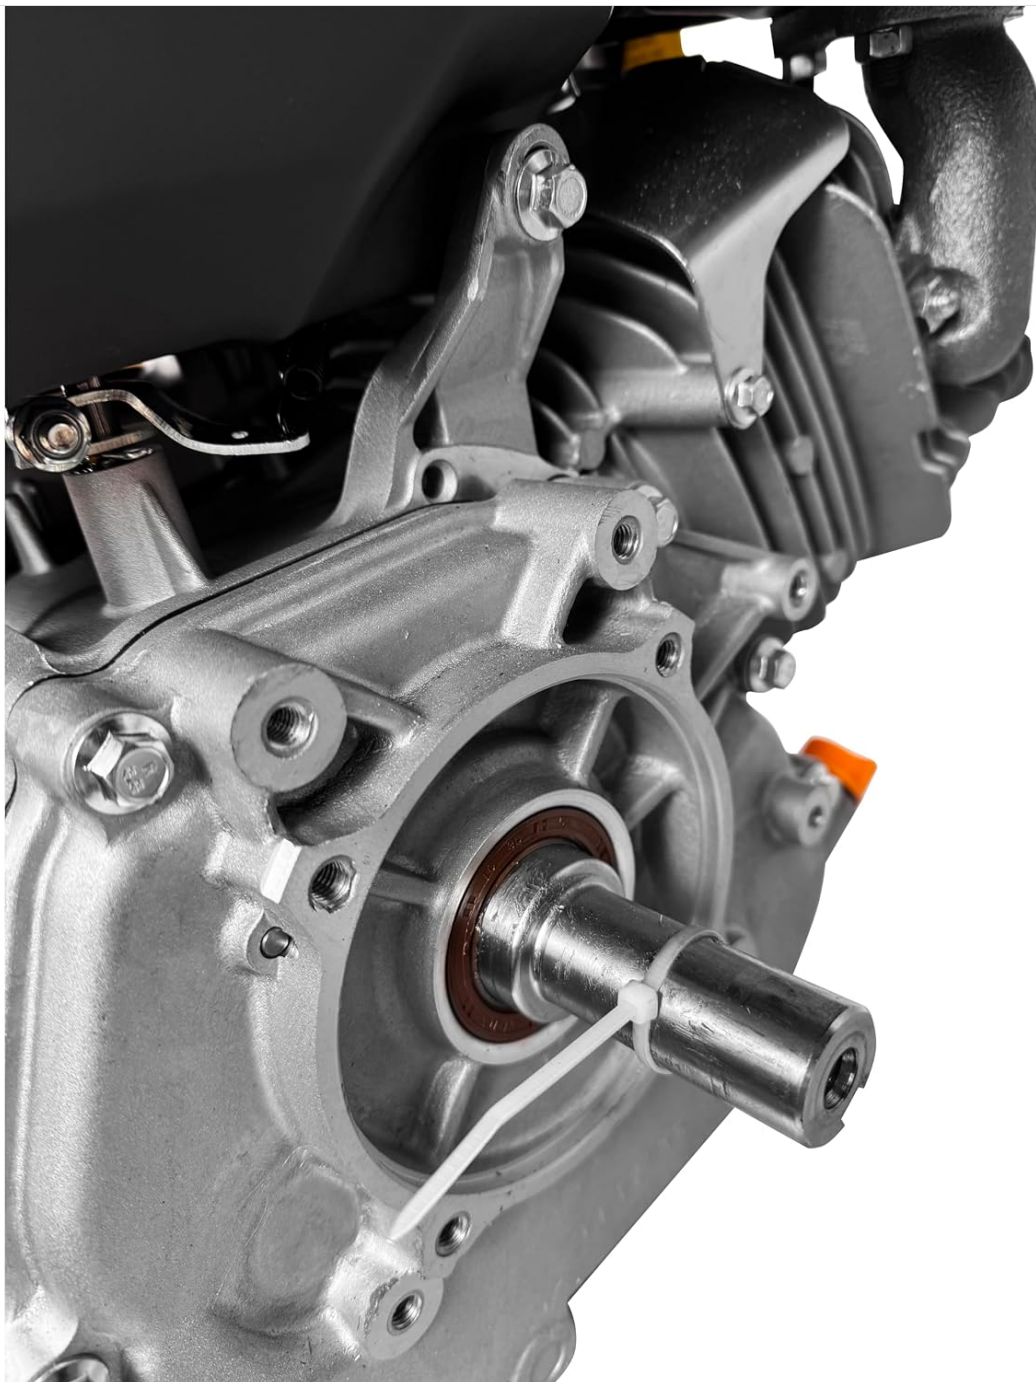


Figure 4: Detailed view of the engine's crankshaft, showing the 25mm diameter and keyway for attachment.

4. SETUP

4.1 Unpacking and Inspection

- Carefully remove the engine from its packaging.
- Inspect the engine for any signs of shipping damage. If damage is found, contact your dealer immediately.
- Ensure all included accessories, such as the key set, are present.

4.2 Mounting the Engine

The engine must be securely mounted to the equipment it will power. Use appropriate bolts and ensure the mounting surface is stable and level. The direct crankshaft output facilitates easy installation.

4.3 Adding Engine Oil

CAUTION: Operating the engine without sufficient oil will cause severe damage.

- Place the engine on a level surface.
- Remove the oil fill cap/dipstick.
- Add recommended engine oil (refer to specifications for type) up to the upper mark on the dipstick. The engine oil volume is 1.1 liters.
- Replace the oil fill cap/dipstick securely.

4.4 Adding Fuel

WARNING: Gasoline is highly flammable. Handle with extreme care.

- Ensure the engine is off and cool before refueling.
- Open the fuel tank cap.
- Fill the tank with fresh, unleaded gasoline (minimum 87 octane) up to the lower edge of the filler neck. Do not overfill. The fuel tank capacity is 6.5 liters.
- Securely close the fuel tank cap.

5. OPERATING INSTRUCTIONS

5.1 Starting the Engine

1. Ensure the engine stop switch is in the "ON" position.
2. Open the fuel valve (if equipped).
3. Move the choke lever to the "CHOKE" position (for cold starts).
4. Pull the recoil starter handle slowly until resistance is felt, then pull firmly and quickly. Do not let the rope snap back.
5. Once the engine starts, gradually move the choke lever to the "RUN" position.
6. Allow the engine to warm up for a few minutes before applying load.

5.2 Stopping the Engine

1. Reduce engine speed to idle.
2. Move the engine stop switch to the "OFF" position.
3. Close the fuel valve (if equipped) for storage or extended periods of non-use.

6. MAINTENANCE

Regular maintenance is crucial for the longevity and optimal performance of your Loncin G420F engine. Always perform maintenance with the engine off and cool.

6.1 Engine Oil Change

- Change engine oil after the first 20 hours of operation, then every 50-100 hours or annually.
- Drain old oil while the engine is warm to ensure complete drainage.
- Refill with recommended oil (1.1 liters) as described in Section 4.3.

6.2 Air Filter Cleaning/Replacement

- Inspect the air filter every 25 hours or more frequently in dusty conditions.
- Clean the air filter element with compressed air or replace it if heavily soiled or damaged. The enlarged air filter ensures optimal air cleaning.

6.3 Spark Plug Inspection

- Inspect the spark plug every 100 hours or annually.
- Clean carbon deposits and adjust the gap if necessary. Replace if electrodes are worn or insulation is cracked.

6.4 Fuel System

- Periodically check fuel lines for cracks or leaks.
- Clean the fuel filter bowl (if equipped) as needed.

7. TROUBLESHOOTING

This section provides solutions to common operational issues. For problems not listed here, contact qualified service personnel.

Problem	Possible Cause	Solution
Engine will not start	No fuel Engine stop switch OFF Low oil level Choke not set correctly Dirty spark plug	Add fuel Turn switch to ON Add oil to correct level Adjust choke Clean or replace spark plug
Engine lacks power	Dirty air filter Stale fuel Incorrect spark plug gap	Clean or replace air filter Drain and refill with fresh fuel Adjust or replace spark plug
Excessive smoke	Too much oil Wrong oil type Dirty air filter	Drain excess oil Use recommended oil Clean or replace air filter

8. SPECIFICATIONS

The Loncin G420F engine features modern OHV technology and forced air cooling for reliable operation in various conditions. It complies with EURO 5 exhaust gas standards.

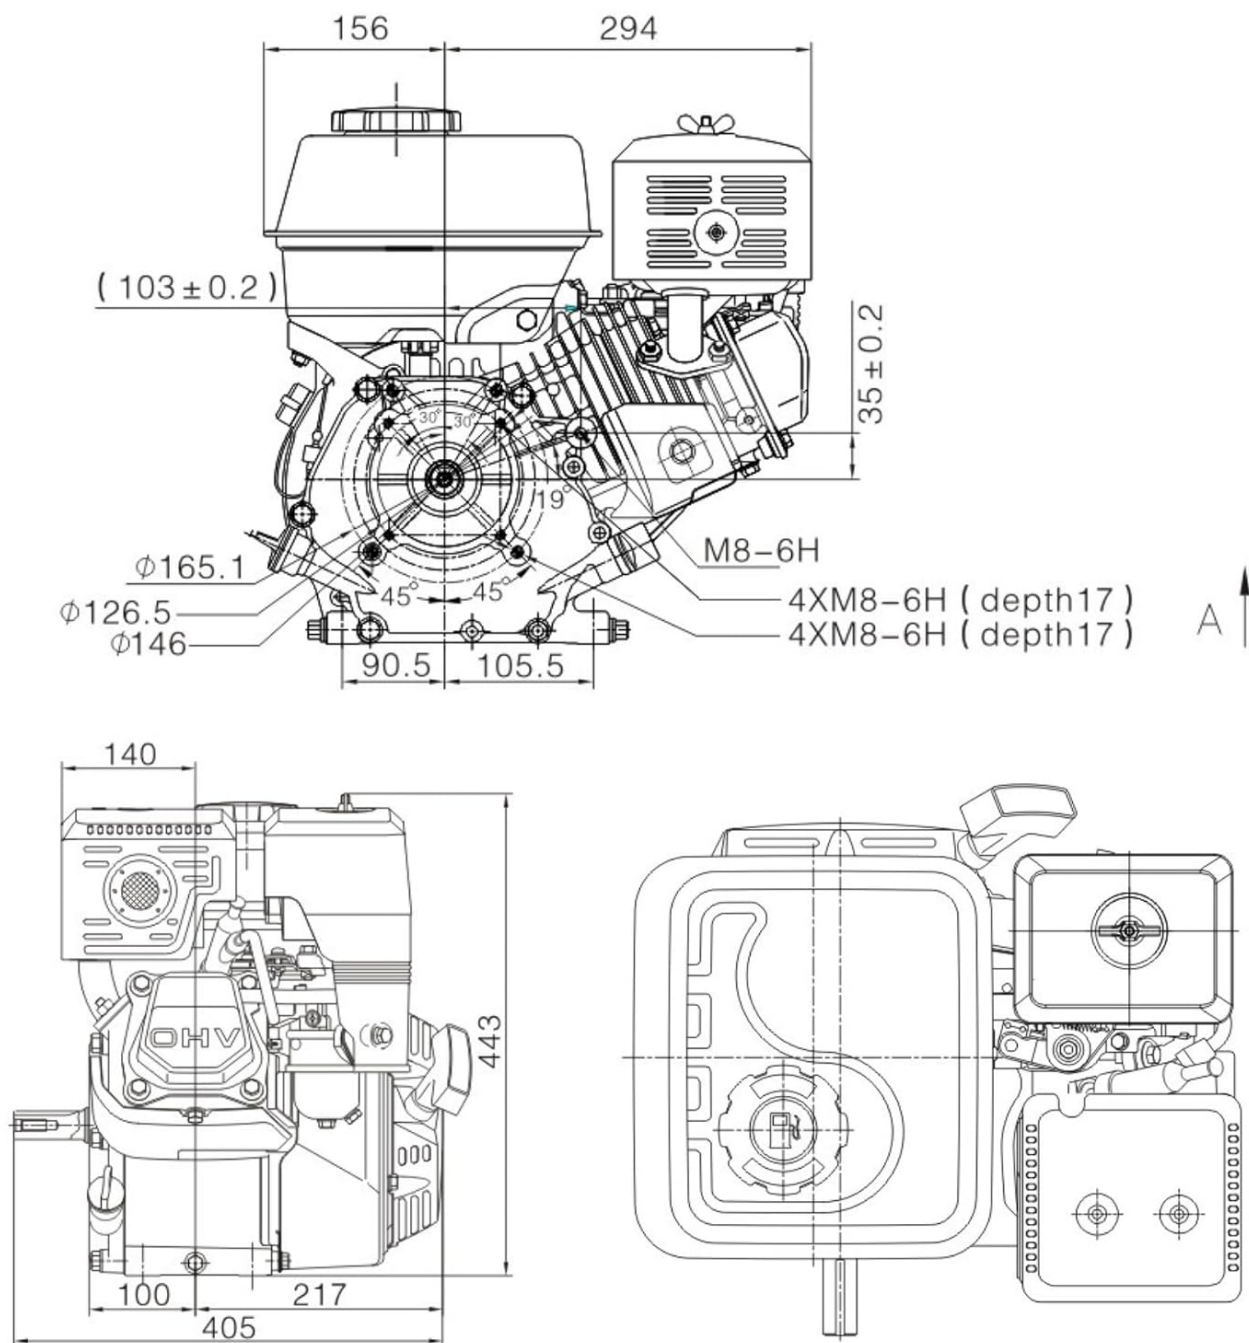


Figure 5: Technical drawing showing the overall dimensions of the Loncin G420F engine.

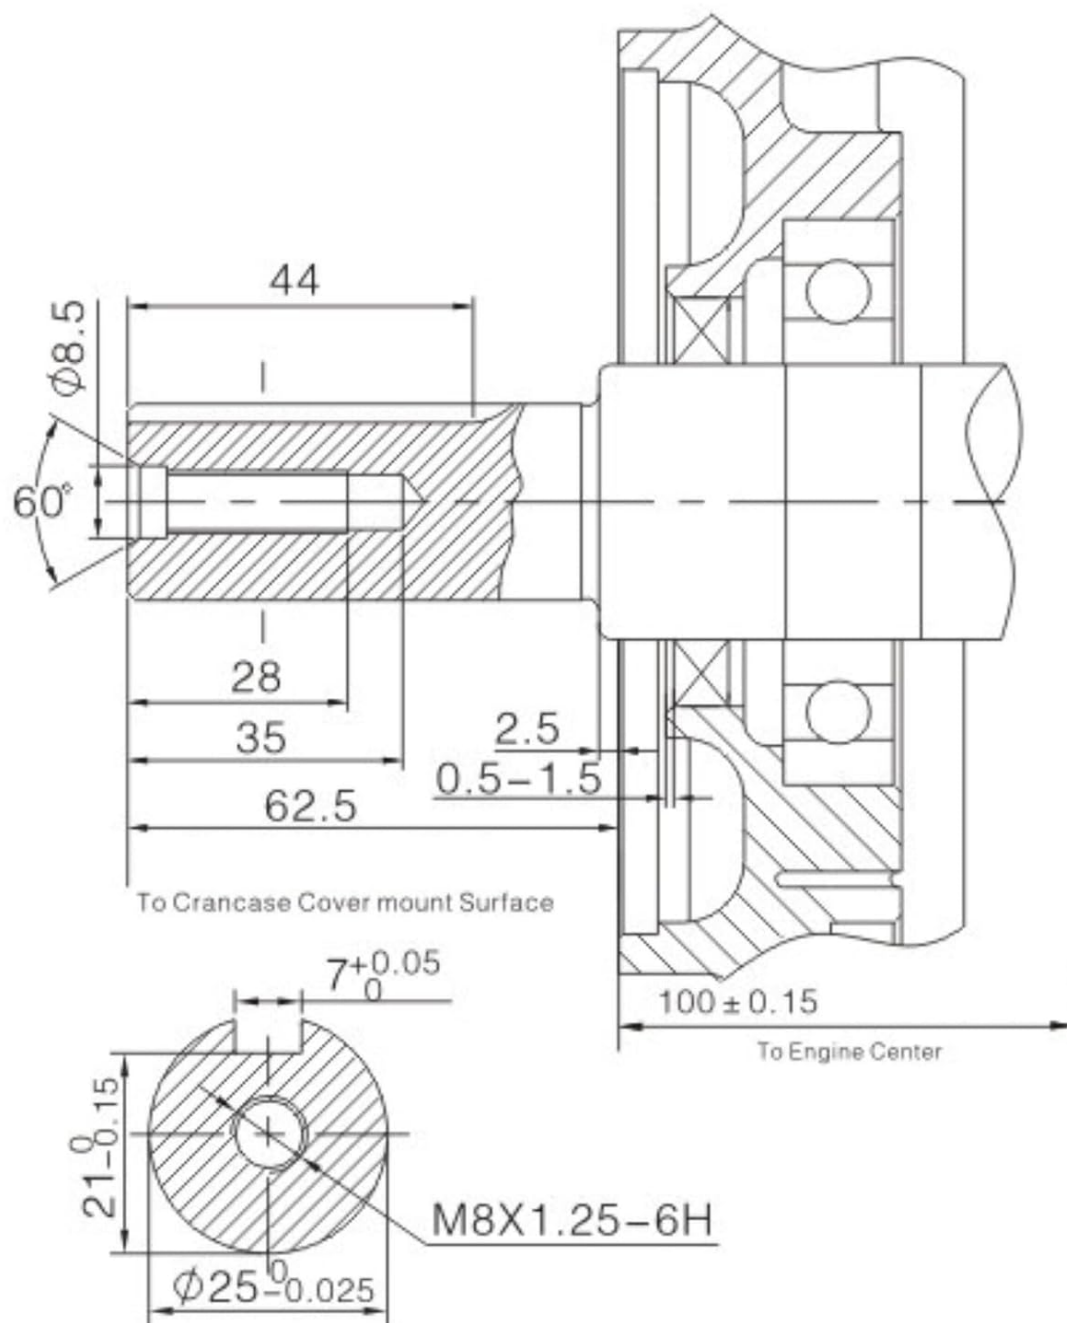


Figure 6: Technical drawing detailing the crankshaft dimensions and keyway of the Loncin G420F engine.

Specification	Value
Brand	Loncin
Model	G420F
Engine Type	Single-cylinder, 4-stroke, OHV, Forced Air-cooled
Displacement	420 cm ³
Max Power Output	16 HP (11.7 kW) at 3600 rpm
Max Torque	27 Nm at 2500 rpm
Crankshaft Diameter	25 mm

Specification	Value
Fuel Tank Capacity	6.5 Liters
Engine Oil Volume	1.1 Liters
Dimensions (L x W x H)	405 x 450 x 443 mm
Net Weight	32 kg
Starting System	Recoil Starter
Emissions Standard	EURO 5
Manufacturer Part Number	3900003021
EAN	04260614711143

9. WARRANTY AND SUPPORT

This Loncin engine is designed for durability and performance. For warranty information, please refer to the documentation provided at the time of purchase or contact your authorized Loncin dealer. Keep your purchase receipt as proof of purchase.

For technical support, spare parts, or service inquiries, please contact your dealer or an authorized service center. Always provide the engine model (G420F) and serial number when seeking assistance.

© 2023 Loncin. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B7824TG6>

More documents and user manuals: <https://manuals.plus/>