

[Manuals.plus](#) /

› [Loncin](#) /

› Loncin LC1P75F 5 HP 224cc Gasoline Engine User Manual

Loncin LC1P75F

Loncin LC1P75F Gasoline Engine User Manual

Model: LC1P75F | 5 HP | 224cc

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your Loncin LC1P75F gasoline engine. Please read this manual thoroughly before operating the engine to ensure proper use and to prevent damage or injury. Keep this manual in a safe place for future reference.



Figure 1: Top view of the Loncin LC1P75F gasoline engine, highlighting the 224cc displacement.

2. SAFETY INFORMATION

Your safety and the safety of others are very important. Always observe the following safety precautions when operating or servicing the engine.

2.1 General Safety

- Read and understand all instructions before operating the engine.
- Ensure the work area is well-ventilated to avoid carbon monoxide poisoning.
- Keep children and pets away from the engine during operation.
- Wear appropriate personal protective equipment (PPE), such as gloves and eye protection.

- Do not operate the engine if you are tired or under the influence of alcohol or drugs.

2.2 Fuel Safety

- Gasoline is highly flammable. Store fuel in approved containers in a cool, well-ventilated area.
- Refuel in a well-ventilated area with the engine off and cool.
- Do not smoke or allow open flames near the engine or fuel tank.
- Wipe up any spilled fuel immediately.

2.3 Hot Surfaces

Engine components, especially the muffler and cylinder head, become very hot during operation and remain hot for a period after the engine is shut off. Avoid contact with hot surfaces to prevent burns.



Figure 2: Caution label warning about high temperature parts on the engine.

3. SETUP AND PRE-OPERATION CHECKS

Before starting the engine, perform the following checks to ensure safe and proper operation.

3.1 Unpacking and Inspection

- Carefully remove the engine from its packaging.
- Inspect for any visible damage that may have occurred during shipping. Contact your dealer if damage is found.
- Ensure all included accessories, such as the spark plug wrench (see Figure 4), are present.

3.2 Engine Oil

Important: The engine is shipped without oil. Failure to fill the engine sump with oil before starting will result in permanent damage and void the engine warranty.



Figure 3: Critical caution tag regarding engine oil before first use.

1. Place the engine on a level surface.
2. Remove the oil filler cap/dipstick.
3. Add the recommended engine oil (refer to Specifications for type and capacity) until it reaches the upper mark on the dipstick. Do not overfill.
4. Securely replace the oil filler cap/dipstick.

3.3 Fuel

- Use fresh, unleaded gasoline with an octane rating of 87 or higher.
- Fill the fuel tank, ensuring not to overfill. Leave space for fuel expansion.
- Securely replace the fuel cap.

3.4 Air Filter

- Ensure the air filter is clean and properly installed.



Figure 4: Spark plug wrench and owner's manual included with the engine.

4. OPERATING INSTRUCTIONS

Follow these steps to start and stop your Loncin LC1P75F engine.

4.1 Starting the Engine

1. Ensure the engine is mounted securely to its application (e.g., vibratory plate, motor cultivator).
2. Open the fuel valve (if equipped).
3. Move the choke lever to the 'CHOKE' position (for cold starts). For warm starts, the choke may not be necessary.

4. Move the throttle lever to the 'FAST' position.
5. Pull the recoil starter handle slowly until resistance is felt, then pull briskly. Repeat if necessary.
6. Once the engine starts, gradually move the choke lever to the 'RUN' position as the engine warms up.
7. Adjust the throttle to the desired operating speed.

4.2 Stopping the Engine

1. Move the throttle lever to the 'SLOW' or 'IDLE' position.
2. Move the engine switch to the 'OFF' position.
3. Close the fuel valve (if equipped) for storage or extended periods of non-use.

5. MAINTENANCE

Regular maintenance is crucial for the longevity and optimal performance of your Loncin engine. Always perform maintenance with the engine off and cool.

5.1 Engine Oil Change

- Change the engine oil after the first 20 hours of operation, then every 50 hours or annually, whichever comes first.
- Drain the old oil while the engine is warm to ensure complete drainage.
- Refill with the recommended oil type and quantity (refer to Specifications).

5.2 Air Filter Cleaning/Replacement

- Inspect the air filter every 25 hours or more frequently in dusty conditions.
- Clean the foam element with warm, soapy water, rinse thoroughly, and allow to air dry. Lightly oil the foam element before reinstallation.
- Replace the paper element if it is excessively dirty or damaged.

5.3 Spark Plug Inspection

- Inspect the spark plug every 100 hours or annually.
- Clean carbon deposits with a wire brush.
- Check the electrode gap and adjust if necessary (refer to Specifications for gap setting).
- Replace the spark plug if electrodes are worn or insulation is cracked.

5.4 General Cleaning

- Keep the engine clean, especially cooling fins and air intake areas, to prevent overheating.
- Remove any debris or grass buildup.

6. TROUBLESHOOTING

This section provides solutions to common operational issues. For problems not listed here, contact authorized service personnel.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Engine will not start	No fuel No oil Choke not set correctly Spark plug fouled/damaged Engine switch OFF	Add fresh fuel Add engine oil (see Section 3.2) Adjust choke lever Clean or replace spark plug Turn engine switch to ON
Engine runs poorly	Dirty air filter Stale fuel Incorrect spark plug gap	Clean or replace air filter Drain and refill with fresh fuel Adjust or replace spark plug
Engine overheats	Low engine oil Blocked cooling fins Overloaded engine	Check and add oil Clean cooling fins Reduce load on engine

7. SPECIFICATIONS

Key technical specifications for the Loncin LC1P75F engine.

Feature	Detail
Model	LC1P75F
Manufacturer	Loncin
Engine Type	Single-cylinder, 4-stroke, forced air-cooled, OHV
Displacement	224 cc
Horsepower	5 HP
Package Dimensions	53 x 53 x 45 cm
Weight	15 kg
Recommended Oil	SAE 10W-30 (or as specified by local climate)
Fuel Type	Unleaded gasoline, 87+ octane
ASIN	B0B783HJZ4

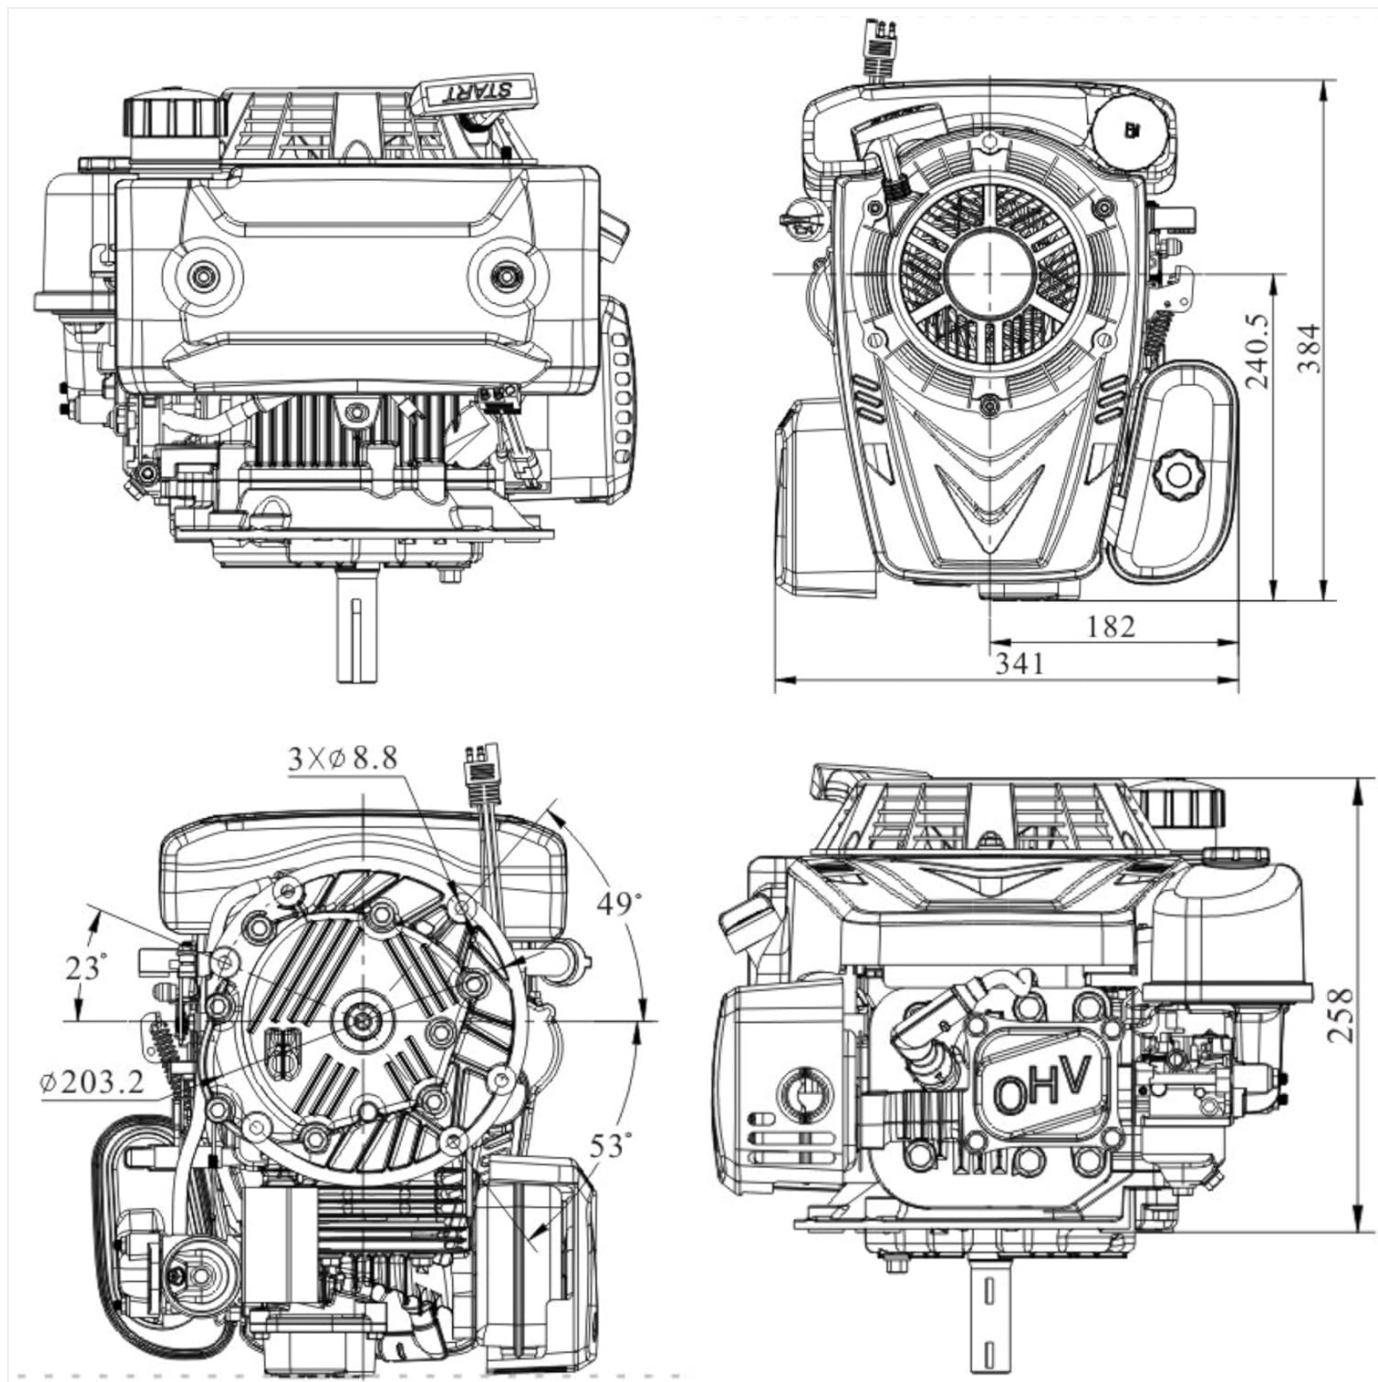


Figure 5: Engine dimensions and mounting points.

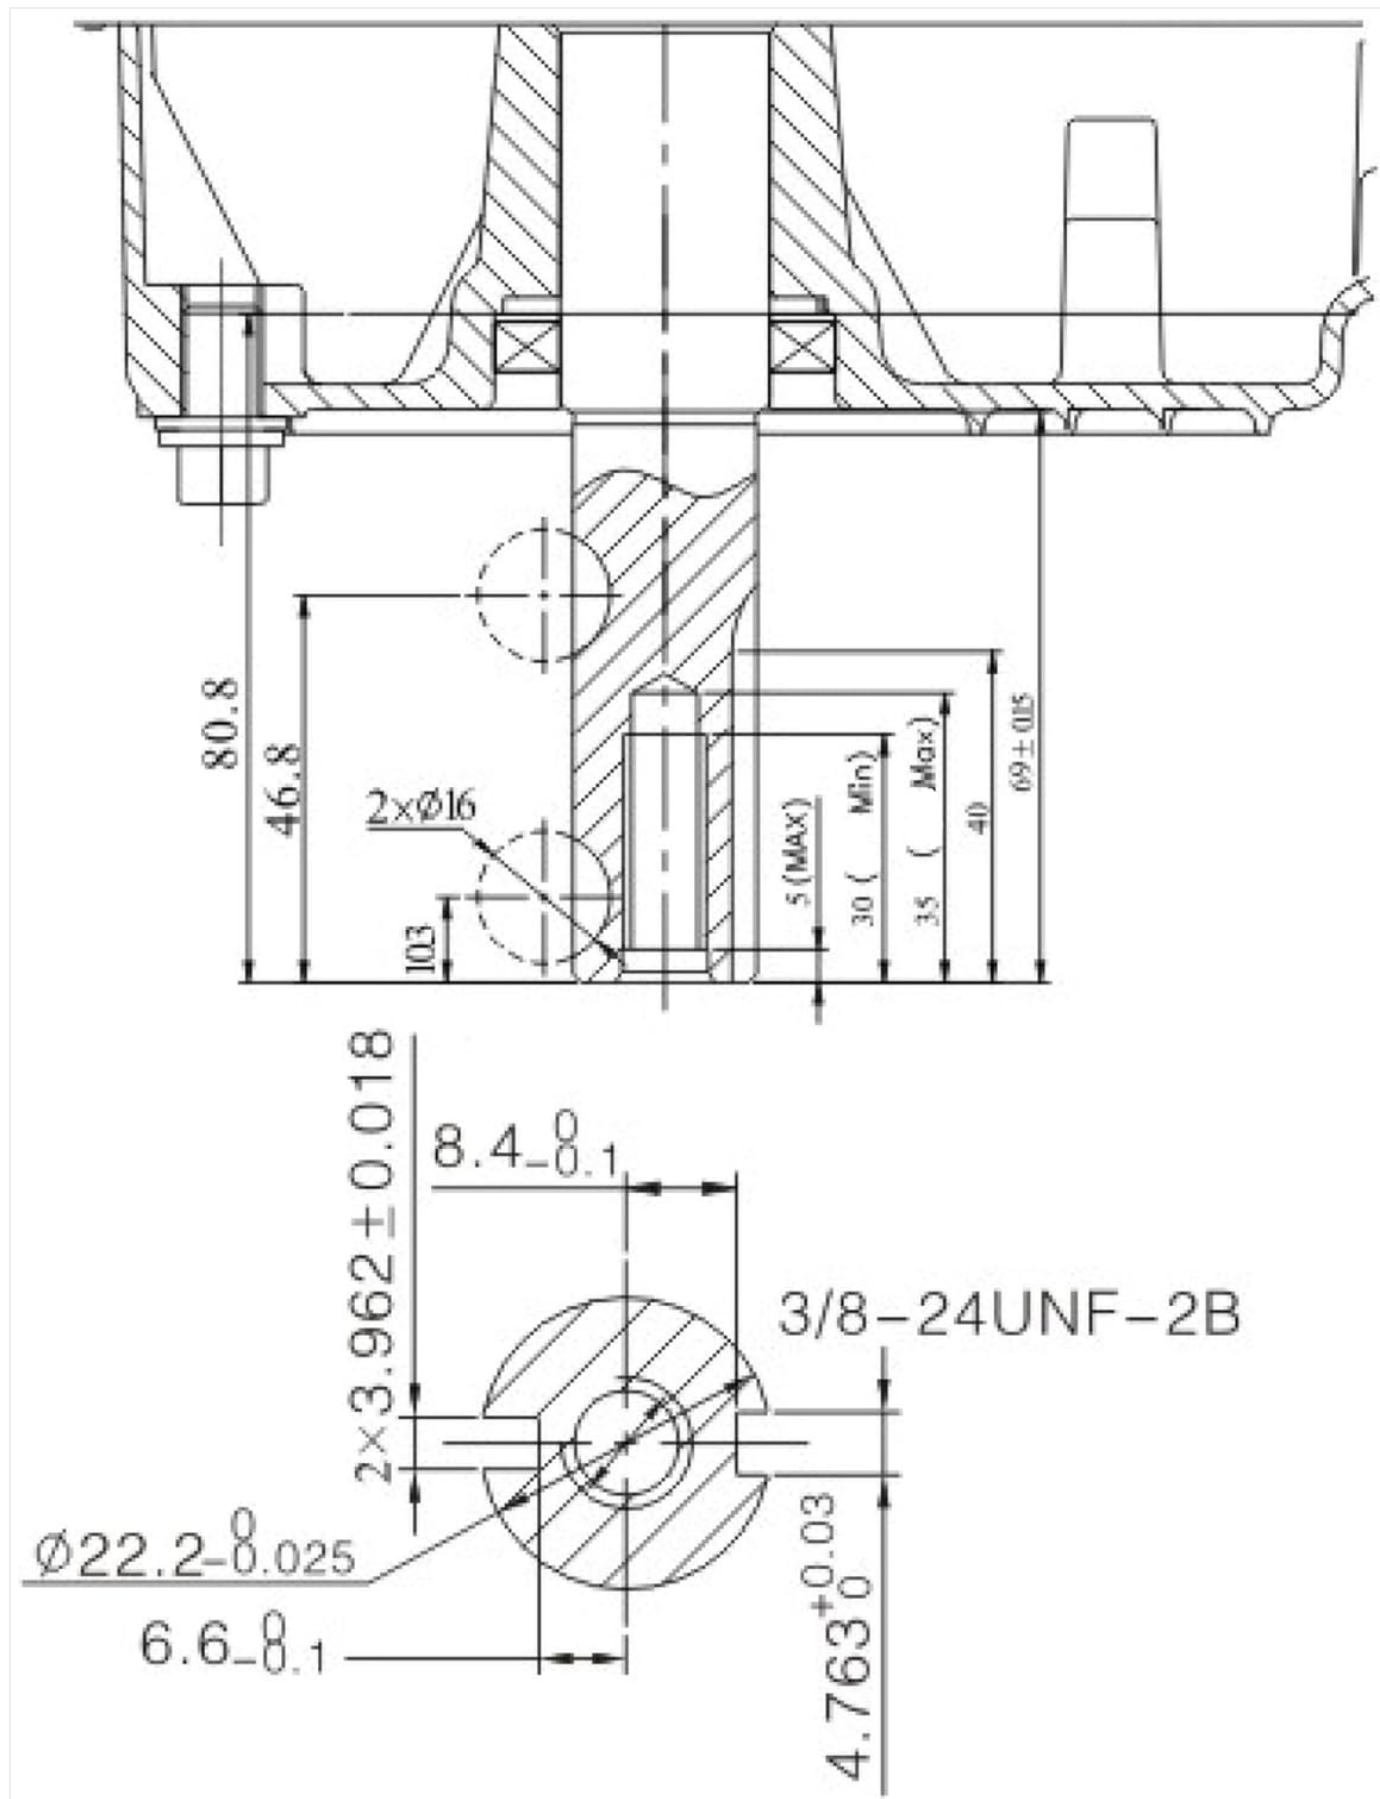


Figure 6: Detailed view of the output shaft dimensions.

8. WARRANTY INFORMATION

Loncin engines are manufactured to high-quality standards. This engine comes with a limited warranty covering defects in materials and workmanship under normal use. Please refer to the warranty card included with your product for specific

terms, conditions, and duration. Note that failure to follow the instructions in this manual, such as operating the engine without proper oil, may void your warranty.

9. CUSTOMER SUPPORT

For technical assistance, spare parts, or warranty claims, please contact your authorized Loncin dealer or visit the official Loncin website. You can also visit the [Loncin Store on Amazon](#) for more information.

© 2023 Loncin. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question