



Manuals.plus /

› Frigidaire /

› Frigidaire Beverage Center Instruction Manual

## Frigidaire FRYB4623AS

# Frigidaire Beverage Center Instruction Manual

Model: FRYB4623AS

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Frigidaire Beverage Center, Model FRYB4623AS. Please read these instructions thoroughly before using the appliance and retain them for future reference.

The Frigidaire Beverage Center is designed to store up to 138 12 oz. cans, offering precise temperature control for your beverages. Its sleek design with a stainless steel door and tinted window integrates seamlessly into various settings.

## SETUP AND INSTALLATION

---

### Unpacking

Carefully remove all packaging materials, including the foam base and any adhesive tape. Inspect the appliance for any shipping damage. Report any damage immediately to the retailer.

### Placement

- Place the beverage center on a flat, level surface strong enough to support the unit when fully loaded.
- Ensure adequate air circulation around the unit. Allow at least 2 inches (5 cm) of space at the back and sides, and 4 inches (10 cm) at the top for proper ventilation.
- Avoid direct sunlight or heat sources (e.g., stoves, radiators).
- Do not install in areas where the temperature will fall below 50°F (10°C) or rise above 90°F (32°C).



Figure 1: Product Dimensions for Placement Planning.

### Electrical Connection

Connect the appliance to a dedicated, grounded 110V AC outlet. Do not use extension cords or adapter plugs. Allow the unit to stand upright for at least 2-4 hours before plugging it in to allow refrigerating fluids to settle.

### Reversible Door Swing

The door can be installed to open from either the left or right side, depending on your installation needs. Refer to the

detailed instructions in the full manual for the door reversal procedure.

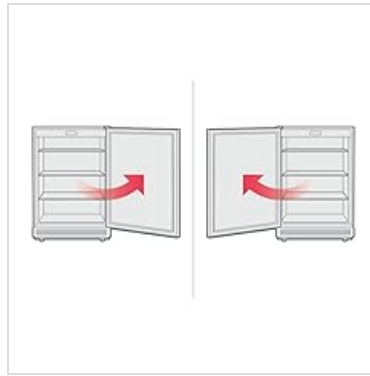


Figure 2: Reversible Door Swing Option.

## OPERATING INSTRUCTIONS

### Temperature Control

The beverage center features a Precision Electronic Temperature Control with an LED Digital Display. You can set the temperature anywhere between 33°F (0.5°C) and 50°F (10°C). The unit will maintain this temperature precisely.

- Use the temperature control buttons on the display panel to adjust the desired temperature.
- The LED display will show the current internal temperature.



Figure 3: LED Digital Temperature Display.

### Loading and Storage

The beverage center is designed to hold up to 138 12 oz. cans. The interior features adjustable glass shelves for flexible storage of various beverage sizes.



Figure 4: Interior Storage Capacity.

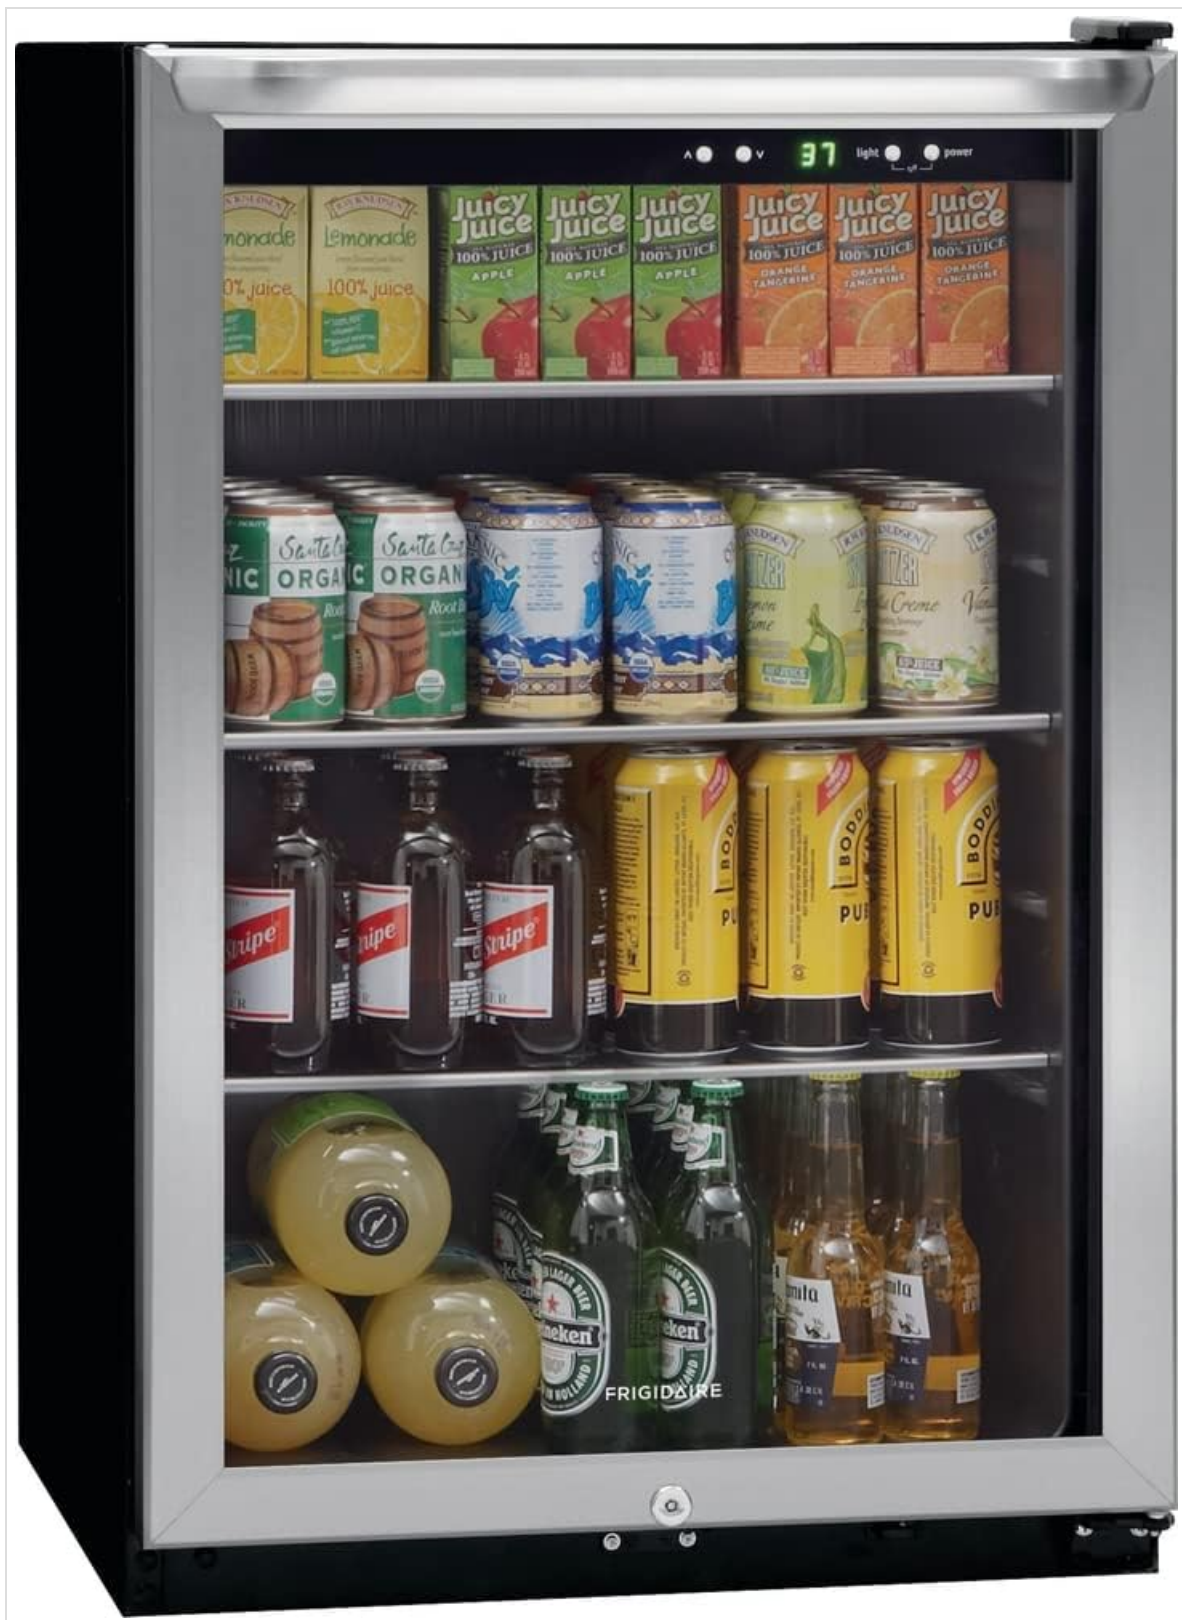


Figure 5: Empty Interior with Adjustable Shelves.

### Door Lock

The unit is equipped with a lock and a pop-out key to prevent unwanted access. Insert the key and turn to lock or unlock the door. The key automatically ejects after locking, ensuring it is not left in the door.



Figure 6: Door Lock Mechanism.

## MAINTENANCE

---

### Cleaning

- **Exterior:** Clean the exterior surfaces with a mild detergent and a soft cloth. Avoid abrasive cleaners.
- **Interior:** Wipe the interior with a solution of baking soda and water (2 tablespoons baking soda to 1 quart water). Rinse thoroughly and dry.
- **Door Gasket:** Clean the door gasket regularly to ensure a proper seal.
- **Shelves:** The glass shelves can be removed and washed with mild soap and water.

### Defrosting

This appliance features an automatic defrost system, eliminating the need for manual defrosting under normal operating conditions.

## TROUBLESHOOTING

---

Before contacting customer service, please review the following common issues and their potential solutions:

Problem	Possible Cause	Solution
Appliance does not operate.	Not plugged in; circuit breaker tripped; temperature set too high.	Ensure plug is secure; check circuit breaker; lower temperature setting.
Temperature is not cold enough.	Door opened too frequently; warm items added; poor ventilation; door gasket not sealing.	Minimize door openings; allow warm items to cool before placing inside; ensure proper clearance; check and clean door gasket.
Vibrations or unusual noise.	Appliance not level; items touching interior walls.	Adjust leveling feet; rearrange items to prevent contact.
Moisture buildup inside.	High humidity; door not closed properly; frequent door openings.	This is normal in humid conditions; ensure door is fully closed; reduce frequency of door openings.

## SPECIFICATIONS

Feature	Detail
Brand	Frigidaire
Model Number	FRYB4623AS
Capacity	4.6 Cubic Feet (approx. 138 12 oz. cans)
Dimensions (D x W x H)	24.5" x 21.5" x 34"
Item Weight	92 Pounds
Color	Silver
Installation Type	Freestanding
Defrost System	Automatic
Door Hinges	Reversible
Special Features	Door Lock, LED Display, Precision Temperature Control
Voltage	110V
Wattage	70.5 watts
Annual Energy Consumption	300 Kilowatt Hours Per Year
Included Components	Shelves, Key

## WARRANTY AND SUPPORT

This Frigidaire appliance comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, parts, or service, please contact Frigidaire Customer Support.

**Return Policy:** This product is eligible for 30-day easy returns through Amazon.com.

**Protection Plans:** Extended protection plans are available for purchase separately to cover your appliance beyond the standard warranty period. Options include 2-Year and 3-Year Protection Plans.

For the most up-to-date support information, visit the official Frigidaire website or contact their customer service line.