

[Manuals.plus](#) /

› [Angel Sar](#) /

› Angel Sar Rattan Shoe Cabinet Instruction Manual

Angel Sar RSC01

Angel Sar Rattan Shoe Cabinet Instruction Manual

Model: RSC01

Brand: Angel Sar

PRODUCT OVERVIEW

The Angel Sar Rattan Shoe Cabinet is designed to provide a stylish and space-saving storage solution for your entryway or hallway. Featuring two flip drawers with natural rattan detailing and sturdy metal legs, this cabinet combines aesthetic appeal with practical functionality. It is ideal for organizing various types of footwear and small household items, helping to maintain a tidy living space.



Image: The Angel Sar Rattan Shoe Cabinet in an entryway setting, showcasing its two flip drawers in an open position, revealing shoes neatly stored within.

SETUP AND ASSEMBLY

The Angel Sar Rattan Shoe Cabinet is designed for quick and straightforward assembly. All necessary mounting hardware is included in the package. It is recommended to follow the provided instructions carefully to ensure proper construction and stability.

- Unpack all components and verify against the parts list in the assembly manual.
- Assemble the main frame of the cabinet according to the step-by-step diagrams.
- Attach the metal legs securely to the base of the cabinet.
- Install the flip drawers and their mechanisms.
- For enhanced stability, the cabinet can be fixed against a wall using the provided hardware.

Product Dimensions



Image: A diagram illustrating the precise dimensions of the Angel Sar Rattan Shoe Cabinet, including height, width, and depth, crucial for planning placement.

Product Dimensions: 23.62"L x 6.69"W x 34.25"H (59.99 cm L x 16.99 cm W x 87 cm H).

OPERATING INSTRUCTIONS

The shoe cabinet features two flip drawers designed for easy access and efficient storage of footwear. Each drawer opens downwards to reveal multiple compartments.

- To open a drawer, gently pull the black round handle located on the front panel. The drawer will pivot downwards.
- Place shoes into the designated slots within the drawer. The design allows for shoes to be stored vertically, maximizing space.
- To close, push the drawer upwards until it clicks securely into place.
- The cabinet can also be used to store small items such as wallets, keys, or umbrellas on its top surface or within the drawers alongside shoes.



Image: A visual comparison demonstrating the effectiveness of the shoe cabinet, showing a cluttered entryway with shoes on the floor ("Before") and the same space transformed into a neat and organized area with the cabinet in place ("Now").

Capacity: The double-layer design can accommodate a family's shoes. The specific storage amount depends on the style and size of the shoes. It generally fits women's shoes up to size 9.5 and men's shoes up to size 8 comfortably. Larger shoe sizes (e.g., men's size 11/12) may fit fewer pairs or require specific placement.



Image: A detailed view of the interior of a flip drawer, highlighting the shoe storage mechanism and illustrating various shoe types (slippers, sports shoes, leather shoes, casual shoes) that can be accommodated.

MAINTENANCE

To ensure the longevity and appearance of your Angel Sar Rattan Shoe Cabinet, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the rattan and wood finish.
- **Dusting:** Regularly dust the cabinet with a dry, soft cloth to prevent dust buildup, especially on the rattan surfaces.
- **Spills:** In case of spills, wipe them immediately with a clean, dry cloth to prevent staining or water damage.
- **Sunlight Exposure:** Avoid prolonged direct exposure to sunlight, which can cause fading or damage to the wood

and rattan.

TROUBLESHOOTING

If you encounter any issues with your shoe cabinet, refer to the following common troubleshooting tips:

- **Cabinet Wobbles:**

- Ensure the cabinet is placed on a flat, level surface.
- Check that all screws and connections are tightened securely.
- If necessary, use the included wall-mounting hardware to secure the cabinet to a wall for added stability.
- Adjust the foot pads if present, or place small shims under the legs to level the cabinet on uneven floors.

- **Drawers Not Closing Properly:**

- Verify that no shoes or objects are obstructing the drawer mechanism.
- Ensure the drawer slides are correctly aligned and free of debris.
- Check that the assembly of the drawer mechanism was done correctly according to the instructions.

- **Limited Shoe Capacity:**

- The cabinet is designed for specific shoe sizes. For larger shoe sizes (e.g., men's size 11 and above), fewer pairs may fit per drawer.
- Consider storing shoes vertically or alternating shoe directions to maximize space.

SPECIFICATIONS

Feature	Detail
Brand	Angel Sar
Model Number	RSC01
Color	Natural Wood (2-tier Wood 1)
Product Dimensions (L x W x H)	59.99 cm x 16.99 cm x 87 cm (23.62" x 6.69" x 34.25")
Item Weight	24.9 kg (54.9 lbs)
Maximum Weight Capacity	55 Pounds (24.9 kg)
Material	Rattan + Metal + PB Board
Special Features	Easy Assembly, Easy Clean
Mounting Type	Floor Mount + Wall Mount
Assembly Required	Yes

WARRANTY AND SUPPORT

Specific warranty information for the Angel Sar Rattan Shoe Cabinet is not provided in the product details. For any warranty claims or technical support, please contact the manufacturer, Angel Sar, directly through their official channels or

the retailer from whom the product was purchased.

It is recommended to retain your purchase receipt as proof of purchase for any potential support inquiries.



© 2024 Angel Sar. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.