

T'nB CBTONE

T'nB Tonality Wireless Bluetooth Headphones User Manual

Model: CBTONE

INTRODUCTION

Welcome to your T'nB Tonality Wireless Bluetooth Headphones. This manual provides essential information for setting up, operating, and maintaining your headphones to ensure optimal performance and longevity. Please read this manual carefully before using your headphones.

PRODUCT OVERVIEW

Headphone Components

The T'nB Tonality headphones feature a comfortable over-ear design with integrated controls for easy management of your audio and calls.



Image: Front view of the T'nB Tonality Wireless Bluetooth Headphones, showcasing the over-ear design and brand logo.

Integrated Controls

The right earcup features intuitive controls for managing playback, volume, and calls.



Image: Close-up of the right earcup showing the integrated control buttons: Volume Up/Next Track, Play/Pause/Call, Volume Down/Previous Track, and Power On/Off.

- **Power Button:** Used for turning the headphones On/Off.
- **Play/Pause Button:** Controls music playback and call management.
- **Volume Up / Next Track Button:** Adjusts volume and skips tracks forward.
- **Volume Down / Previous Track Button:** Adjusts volume and skips tracks backward.

SETUP

Charging the Headphones

Before first use, fully charge your T'nB Tonality headphones.

- Connect the provided USB charging cable to the charging port on the headphones and to a compatible USB power source.
- The LED indicator will show the charging status (e.g., red for charging, blue for fully charged).
- A full charge provides up to 30 hours of listening time.

Bluetooth Pairing

To connect your headphones wirelessly to a device:



Image: A person wearing the T'nB Tonality headphones, with text indicating "Wireless Headphones" and "Bluetooth 5.0".

1. Ensure the headphones are turned off.
2. Press and hold the Power button for approximately 5 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "T'nB Tonality" from the list of devices.
5. Once connected, the LED indicator will flash blue slowly or turn solid blue.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds until the LED indicator lights up.
- **Power Off:** Press and hold the Power button for approximately 3 seconds until the LED indicator turns off.

Music Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Next Track:** Press and hold the Volume Up button.
- **Previous Track:** Press and hold the Volume Down button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.

Call Management

The integrated microphone allows for hands-free calling.

- **Answer/End Call:** Press the Play/Pause button once.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds.

Wired Connection (3.5mm Jack)

You can use your headphones with a wired connection, which also conserves battery life.



Image: A 120 cm long 3.5mm audio jack cable, used for wired connection to the headphones.

- Connect one end of the 3.5mm audio cable to the headphone's audio input jack.
- Connect the other end to your audio device's 3.5mm output jack.

- In wired mode, the headphones do not require battery power.

MAINTENANCE

To ensure the longevity and optimal performance of your T'nB Tonality headphones:

- Clean the earcups and headband with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the headphones in a cool, dry place when not in use. The foldable design allows for compact storage.
- Avoid exposing the headphones to extreme temperatures, humidity, or direct sunlight.
- Do not attempt to disassemble or repair the headphones yourself, as this will void the warranty.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair via Bluetooth.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing blue/red). Turn on Bluetooth on your device. Move headphones closer to the device.
No sound.	Volume too low; incorrect audio source; wired cable not fully inserted.	Increase volume on headphones and device. Check audio output settings on your device. Ensure 3.5mm cable is securely connected.
Poor sound quality.	Weak Bluetooth signal; interference.	Move closer to the connected device. Avoid obstacles between headphones and device.

SPECIFICATIONS

Feature	Detail
Model Number	CBTONE
Connectivity	Bluetooth 5.0, 3.5mm Jack (Wired)
Battery Capacity	400mAh Lithium-ion
Battery Life	Up to 30 hours (wireless)
Impedance	32 Ohms
Noise Reduction	Passive Noise Reduction
Microphone	Integrated
Material	Plastic

Feature	Detail
Special Features	Foldable, Universal Compatibility

Safety Information

- Do not use the headphones at excessively high volumes for extended periods, as this may cause hearing damage.
- Do not use the headphones while driving, cycling, or in situations where you need to hear ambient sounds.
- Keep the headphones away from water and moisture.
- Dispose of the battery responsibly according to local regulations.

Warranty and Support

Information regarding specific warranty terms and availability of spare parts for the T'nB Tonality headphones is not provided in the product details. For support or warranty inquiries, please contact your retailer or the manufacturer directly.