

[manuals.plus](#) /› [Chefman](#) /› [Chefman TurboFry 5-Quart Air Fryer Instruction Manual](#)**Chefman RJ38-5LM-V3**

Chefman TurboFry 5-Quart Air Fryer Instruction Manual

Model: RJ38-5LM-V3

INTRODUCTION

The Chefman TurboFry 5-Quart Air Fryer offers a convenient and healthy way to prepare your favorite fried foods with significantly less oil. Its intuitive design and robust features make it an essential appliance for any kitchen.



Image: The Chefman TurboFry 5-Quart Air Fryer, black, with a basket full of crispy curly fries, showcasing its primary function.

SAFETY INFORMATION

Always read all instructions before using this appliance. Basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

SETUP AND FIRST USE

Before using your Chefman TurboFry Air Fryer for the first time, ensure all packaging materials are removed. Wash the removable basket and tray with warm, soapy water. Wipe the main unit with a damp cloth. Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.

Air Frying Made Easy

5 Quart Large Capacity and 60 Minute Easy-Set Timer

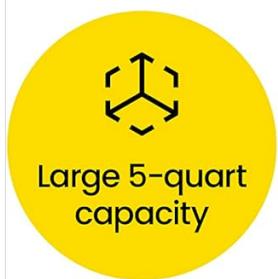

Large 5-quart capacity



Easy-set 60-minute timer



200°F to 400°F temperature dial



Rubber grip handle



Image: The Chefman TurboFry 5-Quart Air Fryer with graphical icons illustrating its large 5-quart capacity, easy-set 60-minute timer, 200°F to 400°F temperature dial, and rubber grip handle.

OPERATING INSTRUCTIONS

The Chefman TurboFry Air Fryer features simple, intuitive controls for effortless cooking.

Temperature Control

Adjust the temperature using the dial located on the top of the unit. The temperature range is from 200°F to 400°F, allowing for versatile cooking options for various foods.

Easy Set Timer

The simplified 60-minute timer design quickly starts your air frying



Image: A detailed view of the air fryer's control panel, highlighting the 60-minute timer dial for precise cooking duration.

Timer Function

Set the desired cooking time using the 60-minute easy-set timer dial on the front. The air fryer will automatically shut off once the timer completes, ensuring your food is cooked perfectly and safely.

Cooking Capacity

The large 5-quart capacity and square basket design maximize cooking space, making it ideal for family-sized meals. You can cook a variety of items, from a whole chicken to a batch of crispy fries.

Cook the Whole Bird

The spacious 5 quart family-sized capacity is perfect for making healthy weeknight dinners and desserts



Image: The Chefman TurboFry 5-Quart Air Fryer with its basket pulled out, revealing a perfectly roasted whole chicken surrounded by vegetables, demonstrating its large capacity.

Official Product Video

Your browser does not support the video tag.

Video: An official product video from Chefman showcasing the features and benefits of the TurboFry 5-Quart Air Fryer, including its cooking capabilities and ease of use.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your air fryer. The nonstick basket and tray are designed for easy cleaning.

A Fully Loaded Fryer

All the air frying accessories you'll ever need

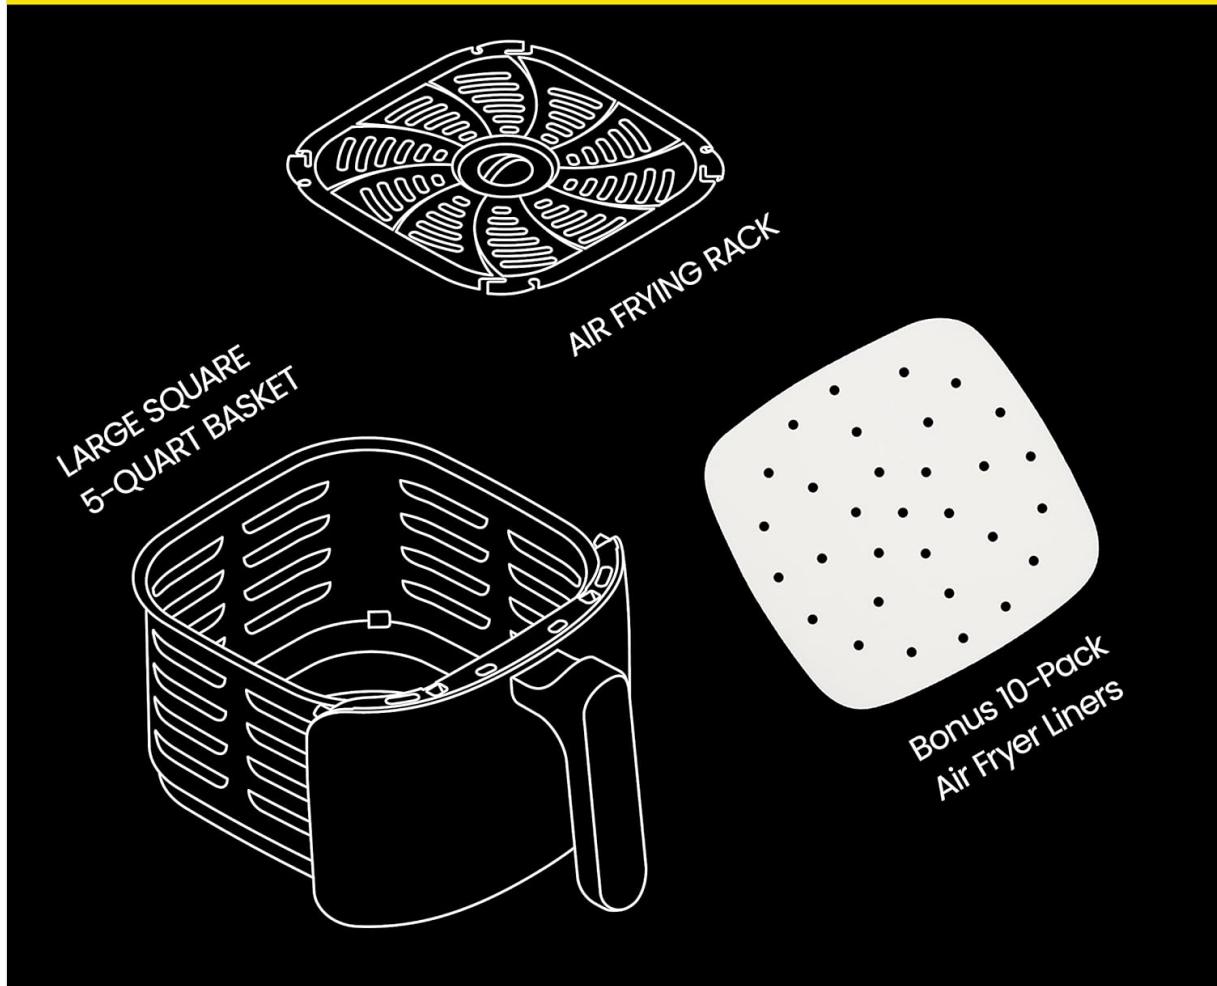


Image: A diagram illustrating the various components included with the air fryer: the large square 5-quart basket, the air frying rack, and a bonus 10-pack of air fryer liners.

Dishwasher Safe Parts

The fryer basket and tray are dishwasher safe, making cleanup simple and hassle-free. For the main unit, wipe with a damp cloth after each use.

Keep Cleanup Simple

Hassle-free dishwasher-safe accessories

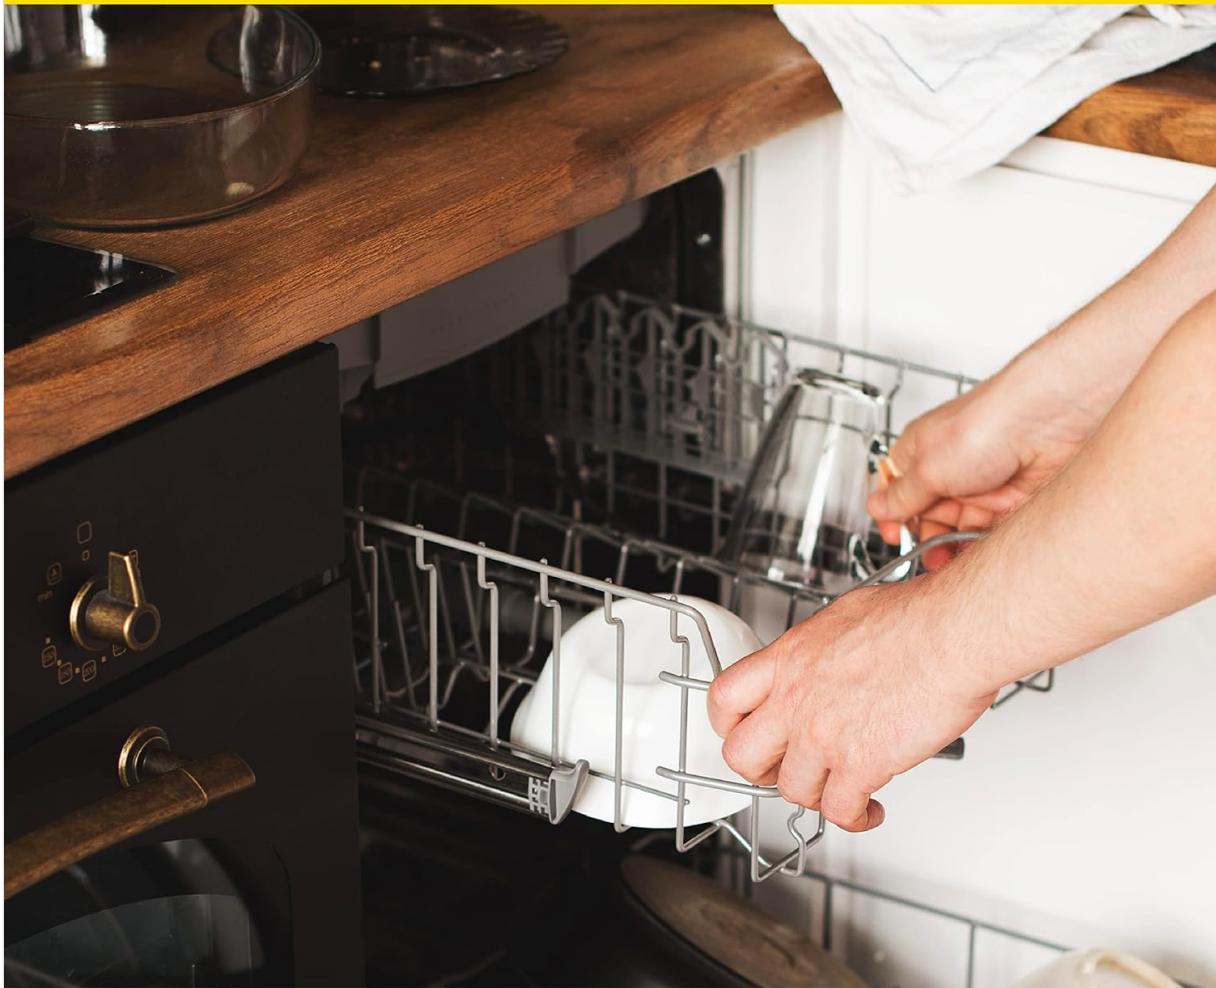


Image: A person placing the removable air fryer basket into a dishwasher, demonstrating the ease of cleaning for dishwasher-safe accessories.

TROUBLESHOOTING

If you encounter any issues with your Chefman TurboFry Air Fryer, please refer to the following common troubleshooting tips:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the timer is set to the desired cooking duration.
- **Food not cooking evenly:** Shake the basket halfway through the cooking process for items like fries or nuggets. Ensure not to overcrowd the basket; cook in smaller batches if necessary.
- **White smoke coming from the appliance:** This may indicate that fat from fatty foods is dripping into the bottom pan. Clean the pan after each use. Excessive oil residue can also cause smoke.
- **Food not crispy:** Ensure the temperature is set correctly for the food type. A light coating of oil can help achieve crispiness.

For more detailed troubleshooting or persistent issues, please contact Chefman customer support.

SPECIFICATIONS

Brand	Chefman
Model Name	Chefman 5 Quart Air Fryer, Glossy Finish
Model Number	RJ38-5LM-V3
Capacity	5 Quarts
Color	Black
Material	Plastic, Metal
Product Dimensions	12.33"D x 12.33"W x 13.99"H
Item Weight	7.8 Pounds
Wattage	1500 Watts
Voltage	120 Volts
Max Temperature Setting	400 Degrees Fahrenheit
Control Method	Touch
Nonstick Coating	Yes
Dishwasher Safe Parts	Yes
UPC	810087843595

A Perfect Fit

XL capacity for reheating large dishes



Image: The Chefman TurboFry 5-Quart Air Fryer with its compact dimensions (10"W x 13"D x 13"H) highlighted, emphasizing its space-saving design.

WARRANTY AND SUPPORT

The Chefman TurboFry 5-Quart Air Fryer comes with a 1-year assurance provided by Chefman. For product support, warranty claims, or further assistance, please refer to the official Chefman website or contact their customer service department.

Additional resources, including a PDF User Guide, may be available on the product's Amazon page or the Chefman website.

For more information, visit the [Chefman Store](#).

	<p><u>Chefman 5-Quart Air Fryer Quick Start Guide</u></p> <p>A quick start guide for the Chefman 5-Quart Air Fryer (Model RJ38-5LM-V3), covering features, before first use instructions, cleaning and maintenance, and how to cook.</p>
	<p><u>Chefman TurboFry Touch Air Fryer with Basket Divider User Guide - RJ38-SQSS-8T-D</u></p> <p>Comprehensive user guide for the Chefman TurboFry Touch Air Fryer (Model RJ38-SQSS-8T-D). Covers safety, features, operation, cooking charts, tips, troubleshooting, cleaning, and warranty. Learn how to use your 8-quart air fryer with basket divider for healthy, oil-free cooking.</p>
	<p><u>CHEFMAN TurboFry Touch Air Fryer Quick Start Guide: Features, Operation, and Cleaning</u></p> <p>A concise guide to the CHEFMAN TurboFry® Touch Air Fryer, covering features, control panel operation, setup, cooking charts, and maintenance. Learn how to use your air fryer efficiently for healthy cooking.</p>
	<p><u>Chefman TurboFry Touch Easy-View Air Fryer User Guide Model RJ38-SQPF-8TW</u></p> <p>Comprehensive user guide for the Chefman TurboFry Touch Easy-View Air Fryer (RJ38-SQPF-8TW). Learn about safety, features, operating instructions, cooking tips, troubleshooting, and warranty.</p>
	<p><u>Chefman TurboFry Touch Dual Air Fryer User Guide - Model RJ38-SQPF-45TDB</u></p> <p>Comprehensive user guide for the Chefman TurboFry Touch Dual Air Fryer (Model RJ38-SQPF-45TDB). Includes safety instructions, operating procedures, cooking charts, tips, troubleshooting, and warranty information.</p>
	<p><u>Chefman TurboFry Touch Air Fryer User Guide: Safety, Operation, and Cooking Tips</u></p> <p>Comprehensive user guide for the Chefman TurboFry Touch Air Fryer (Model RJ38-SQPF-5T). Includes detailed safety instructions, features overview, operating procedures, cooking charts, troubleshooting advice, cleaning and maintenance guidelines, and warranty information.</p>