

[Manuals.plus](#) /

› [Iceman](#) /

› Iceman Dual-Size Countertop Ice Maker Machine User Manual

Iceman RJ56-D-1

Iceman Dual-Size Countertop Ice Maker Machine User Manual

Model: RJ56-D-1

Brand: Iceman

PRODUCT OVERVIEW

The Iceman Dual-Size Ice Machine is a portable countertop appliance designed to produce ice quickly and efficiently. It offers two ice cube sizes and features indicator lights for operational status, water levels, and cleaning cycles. The unit includes a removable ice basket and a serving scoop for convenience. Its compact design makes it suitable for various settings, and it incorporates a self-cleaning function for easy maintenance.



Image: The Iceman Dual-Size Countertop Ice Maker Machine, showcasing its stainless-steel finish, black lid with control panel, and a glass of ice with a lime wedge, alongside an ice scoop.

Key Features:

- **Dual Ice Sizes:** Produces both large and small bullet-shaped ice cubes.
- **Rapid Ice Production:** Capable of making 9 ice cubes in approximately 6 minutes.
- **Portable Design:** Features a detachable carry handle for easy transport.
- **Compact Footprint:** Designed to fit conveniently on most countertops while holding 1.3 lb. of ice.
- **Sleek Aesthetics:** Stainless-steel finish with a transparent viewing window to monitor ice levels.
- **User-Friendly Controls:** Digital display with one-touch buttons for simple operation.
- **Self-Cleaning Function:** Integrated self-clean mode for effortless maintenance.
- **Indicator Lights:** Visual alerts for ice production status, low water, and full ice basket.
- **Convenient Drainage:** Equipped with a bottom drain outlet and a 5 ft power cord for easy setup and takedown.
- **Accessories:** Includes a plastic serving scoop and a removable ice basket.

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove the ice maker from its packaging. Ensure all components, including the ice basket and scoop, are present.
2. **Placement:** Place the unit on a stable, level surface away from direct sunlight and heat sources. Ensure adequate ventilation around the machine.
3. **Initial Cleaning:** Before first use, it is recommended to clean the interior of the ice maker.
 - Ensure the drain plug at the bottom is securely closed.
 - Fill the water reservoir with clean drinking water up to the MAX fill line.
 - Press the "CLEAN" button (if available) or initiate a cleaning cycle as per the operating instructions.
 - After the cleaning cycle, drain the water completely using the bottom drain outlet.
 - Wipe the interior dry with a soft cloth.
4. **Power Connection:** Plug the 5 ft power cord into a grounded electrical outlet (120V/1.7AMPS).



Image: Top-down view of the Iceman ice maker, illustrating its compact dimensions: approximately 12 inches deep, 9 inches wide, and 13 inches high, highlighting its countertop-friendly size.

OPERATING INSTRUCTIONS

1. **Fill Water Reservoir:** Open the lid and fill the water reservoir with clean, potable water up to the MAX fill line. Do not overfill.
2. **Select Ice Size:** Use the "SELECT" button on the control panel to choose between "SMALL" or "LARGE" ice cube sizes. The corresponding indicator light will illuminate.
3. **Start Ice Production:** Press the "START/STOP" button to begin the ice-making cycle. The "ICE" indicator light will turn on.
4. **Monitor Progress:** Ice cubes will begin to form and drop into the ice basket within 6-7 minutes. You can observe the process through the top viewing window.
5. **Ice Basket Full:** When the ice basket is full, the "FULL" indicator light will illuminate, and the machine will automatically pause ice production. Remove ice from the basket to resume operation.
6. **Low Water Indicator:** If the water level in the reservoir is too low, the "REFILL" indicator light will illuminate, and the machine will pause. Add more water to resume.
7. **Stop Operation:** To stop ice production at any time, press the "START/STOP" button.

Indicator Lights

Included ready, size, cleaning,
full bucket, and low water lights



Image: Close-up view of the Iceman ice maker's control panel, showing the "START/STOP" and "SELECT" buttons, along with indicator lights for "SMALL", "LARGE", "ICE", "REFILL", "CLEAN", and "FULL". The transparent viewing window is also visible.

Two Sizes, One Machine

Choose large or small ice depending on your needs



Image: Two glasses of water with ice, demonstrating the two available ice cube sizes produced by the Iceman machine: small and large bullet ice.

Makes Ice in Minutes

Creates 9 ice cubes in 7 minutes



Image: An internal view of the Iceman ice maker, showing newly formed bullet ice cubes dropping into the ice basket, illustrating the rapid ice production process.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Iceman ice maker. The machine features a convenient self-cleaning function.

Self-Cleaning Cycle:

1. Ensure the ice basket is empty.
2. Fill the water reservoir with clean water up to the MAX fill line.
3. Press the "CLEAN" button (if available) or follow the specific instructions in your detailed user guide to activate the self-cleaning cycle. The "CLEAN" indicator light will illuminate.
4. Once the cycle is complete, the machine will stop.
5. Drain all water from the reservoir using the bottom drain outlet.

6. Wipe the interior surfaces with a soft, damp cloth.

Manual Cleaning:

- Unplug the unit before cleaning.
- Remove the ice basket and wash it with mild soap and warm water. Rinse thoroughly.
- For the interior, use a soft cloth dampened with a mixture of water and a small amount of mild detergent. Avoid abrasive cleaners or solvents.
- Pay attention to areas where water circulates or ice forms.
- After cleaning, drain any remaining water and wipe all surfaces dry.
- Periodically clean the exterior with a soft, damp cloth.



Image: The Iceman ice maker with its lid open, revealing the removable ice basket filled with ice cubes. A plastic ice scoop is placed next to the basket, illustrating the machine's capacity and included accessories.

TROUBLESHOOTING

If you encounter issues with your Iceman ice maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine not making ice.	No power. Water reservoir empty. Ice basket full. Ambient temperature too high.	Check power connection. Refill water reservoir (REFILL light on). Empty ice basket (FULL light on). Move unit to a cooler environment.
Ice cubes are too small or clumpy.	Insufficient water. Water temperature too high. Air bubbles in water.	Ensure water is at MAX fill line. Use colder water. Allow water to settle before starting.
Machine is noisy.	Normal operation sounds (compressor, water pump). Unit not level.	This is normal. Ensure unit is on a flat, stable surface.
Water leaking from unit.	Drain plug not secure. Overfilled water reservoir. Internal component issue.	Check and secure drain plug. Do not exceed MAX fill line. If problem persists, contact customer support.

SPECIFICATIONS

Attribute	Detail
Brand	Iceman
Model Name	Dual-Size Ice Maker
Product Dimensions	12.2"D x 9.06"W x 12.8"H
Capacity	26 Pounds (ice production in 24 hours)
Wattage	204 watts
Voltage	120 Volts
Refrigerant	R600a
Manufacturer	Chefman
UPC	810087842796
Material	Stainless Steel
Item Weight	17.44 pounds
Item model number	RJ56-D-1
Date First Available	July 22, 2022

WARRANTY AND SUPPORT

The Iceman Dual-Size Countertop Ice Maker Machine comes with a **1-year assurance** provided by Chefman. This

assurance covers defects in materials and workmanship under normal use.
For detailed warranty information, product registration, or technical support, please refer to the official user guide or contact Chefman customer service directly.

Official User Guide (PDF): [Download PDF](#)

When contacting support, please have your model number (RJ56-D-1) and purchase information ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question