

RETLLAS 17EF

RETLLAS 17EF Security Safe Box User Manual

This manual provides essential instructions for the safe operation and maintenance of your RETLLAS 17EF Security Safe Box.

INTRODUCTION

The RETLLAS 17EF Security Safe Box is designed to protect your valuables, such as cash, jewelry, and important documents, with its robust alloy steel construction and electronic digital lock. This manual will guide you through the setup, operation, and maintenance of your new safe.

SAFETY INFORMATION

- **Do not keep emergency keys inside the safe.** Store them in a secure, separate location.
- Ensure the safe is placed on a stable, level surface or securely mounted to prevent tipping.
- Keep the safe away from excessive moisture or extreme temperatures.
- Replace batteries promptly when the low battery indicator appears to avoid being locked out.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x RETLLAS 17EF Security Safe Box
- 2x Emergency Keys
- 2x Expansion Screws (for mounting)
- 1x Soft Carpet (for interior)
- 1x User Manual



Enjoy peace of mind knowing your cash and valuables are safe and secure with the RETLLAS Steel Security Box!

PACKAGE INCLUDE

- 1*Safe Box
- 2*Emergency Keys
- 2*Mounting Bolts
- 1*User Instruction



Figure 1: Package Contents. The image displays the RETLLAS 17EF safe box along with its accessories: two emergency keys, two expansion screws, and the user manual.

SETUP

1. Installing Batteries

1. Locate the battery compartment on the inside of the safe door.
2. Open the battery cover.
3. Insert 4 AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery cover.

EASY TO OPERATE

1. REMOVE OVERRIDE KEY COVER



2. OPEN LOCK BOX WITH KEY



3. INSTALL 4 AA BATTERIES



4. PRESS RESET BUTTON TO PROGRAM A NEW PASSCODE + "E" TO CONFIRM

Figure 2: Battery Installation and Passcode Setup. This image shows the process of removing the override key cover, opening the safe with the key, installing 4 AA batteries, and pressing the reset button to program a new passcode.

2. Mounting the Safe

The safe is equipped with pre-drilled holes for secure mounting to a wall, floor, or cabinet. This helps prevent the safe from being removed.

1. Choose a suitable location for mounting.
2. Mark the drilling points through the pre-drilled holes inside the safe.
3. Drill pilot holes in the marked locations.
4. Secure the safe using the provided expansion screws or appropriate hardware for your mounting surface.

STURDY STEEL CONSTRUCTION



Figure 3: Interior with Mounting Holes. The image displays the inside of the safe, highlighting the pre-drilled holes on the back and bottom for secure installation.



6.7*6.7*9.1 inches

COMPACT SIZE FOR BUILD-IN INSTALLATION

Equipped with 2 Mounting
Bolts & Pre-Drilled Holes to Fix the Wall/Floor/Cabinet to
Prevent the Safe from Being Lifted

Figure 4: Compact Size for Installation. This image illustrates the compact dimensions of the safe (6.7"x6.7"x9.1") and its suitability for discreet, built-in installations, emphasizing the mounting bolts and pre-drilled holes.

OPERATING INSTRUCTIONS

1. Opening with Emergency Key

In case of battery failure or forgotten passcode, use the emergency key:

1. Remove the override key cover on the electronic panel.
2. Insert the emergency key into the keyhole.
3. Turn the key clockwise while simultaneously turning the knob clockwise to open the safe door.

DUAL-METHOD TO OPEN THE SAFE BOX

Override Key+Knob



Password+"E"+Knob



**Please Keep the EMERGENCY
OVERRIDE KEYS in a Secure Place
OUT OF THE SAFE BOX!!!**



Figure 5: Dual Opening Methods. This image clearly shows how to open the safe using the emergency override key and knob, and also how to open it using the electronic passcode and knob. A warning reminds users to keep emergency keys outside the safe.

2. Setting/Changing Passcode

To set a new passcode:

1. With the safe door open, locate the red reset button inside the safe, usually near the battery compartment.
2. Press the reset button. The indicator light on the keypad will flash.
3. Enter your desired 3-8 digit passcode on the keypad.
4. Press the "E" button to confirm. The indicator light will stop flashing, confirming the new passcode is set.
5. Test the new passcode with the door open before closing it.

3. Opening with Passcode

To open the safe using your passcode:

1. Enter your 3-8 digit passcode on the keypad.
2. Press the "E" button. The green indicator light will illuminate.
3. Within 5 seconds, turn the knob clockwise to open the safe door.

4. Dual Warning Alarm System

The safe features an alarm system for enhanced security:

- **Incorrect Passcode Alarm:** If an incorrect passcode is entered 3 consecutive times, the alarm will activate.
- **Vibration Alarm:** If the safe experiences violent vibration or tampering, the alarm will activate.
- To silence the alarm, enter the correct passcode or use the emergency key.



Figure 6: Dual Warning Alarm System. This image illustrates the safe's alarm system, which activates after three failed passcode attempts or detection of violent vibration, indicated by a flashing red light and sound waves.

MAINTENANCE

- Clean the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners.
- Regularly check battery levels and replace them when the low battery indicator lights up.
- Ensure the emergency keys are stored safely and accessible outside the safe.

Troubleshooting

Problem	Possible Cause	Solution
Safe does not open with passcode.	Incorrect passcode entered; batteries are low or dead.	Re-enter the correct passcode. Replace batteries. Use emergency key to open.
Keypad does not respond.	Batteries are dead or incorrectly installed.	Check battery polarity and replace batteries.
Alarm sounds unexpectedly.	Multiple incorrect passcode entries; physical shock to the safe.	Enter correct passcode or use emergency key to disarm.
Door does not close properly.	Obstruction in the door frame; locking bolts are extended.	Clear any obstructions. Ensure locking bolts are retracted before closing.

Specifications

Feature	Detail
Model Number	17EF
Capacity	0.23 Cubic Feet
Material	Alloy Steel
Exterior Dimensions	6.7" (H) x 9.1" (W) x 6.7" (D)
Interior Dimensions	6.5" (H) x 8.9" (W) x 6.5" (D)
Mounting Type	Floor Mount, Wall Mount
Control Type	Push Button Electronic Keypad
Power Source	4 AA Batteries (not included)
Locking Mechanism	Electronic Digital Lock with Emergency Key Override

PRODUCT SIZE AND ACCESSORIES

compact size and flexible use



Emergency Key



Expansion Screw



Soft Carpet



User Manual

Figure 7: Product Dimensions. This image provides a visual representation of the safe's exterior dimensions, indicating its compact size.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official RETLLAS website. Keep your purchase receipt as proof of purchase.

© 2023 RETLLAS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question