

Manuals.plus /
› Edillas /
› Edillas Kids Digital Watch Model 8206 Instruction Manual

Edillas 8206

Edillas Kids Digital Watch Instruction Manual

Model: 8206
Brand: Edillas

1. PRODUCT OVERVIEW

The Edillas Kids Digital Watch is designed for children aged 4-12, offering a range of features including time display, date, alarm, stopwatch, and a backlight. It is built with water resistance suitable for daily activities.





Figure 1: Front view of the Edillas Kids Digital Watch.

Watch Components

Familiarize yourself with the watch buttons and their functions:



50M Waterproof



12/24H Display



Stopwatch



Color Light



Alarm



Date And Time

Figure 2: Watch components and button labels.

- **LIGHT Button:** Activates the backlight.
- **MODE Button:** Cycles through display modes (Time, Alarm, Stopwatch).
- **START Button:** Used to start/stop stopwatch, adjust settings.
- **RESET Button:** Used to reset stopwatch, confirm settings.

2. SETUP AND INITIAL CONFIGURATION

Before using your watch, it is recommended to set the correct time and date.

2.1 Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds will begin to flash.
2. Press the **RESET** button to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day of Week.
3. While a value is flashing, press the **START** button to adjust the value. Hold the **START** button to change values faster.
4. After setting all desired values, press the **MODE** button once to exit the setting mode and return to the normal time display.

2.2 12/24 Hour Format Selection

In the time setting mode (seconds flashing), press the **START** button when the hour is flashing to toggle between 12-hour (with 'AM'/'PM' indicator) and 24-hour formats.

3. OPERATING INSTRUCTIONS

3.1 Using the Backlight

Press the **LIGHT** button to illuminate the watch face for a few seconds, making it visible in low-light conditions.



Figure 3: Normal display mode vs. EL Light display mode.

3.2 Setting and Using the Alarm

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The hour will flash.

2. Press the **START** button to adjust the hour.
3. Press the **RESET** button to switch to minute setting. The minutes will flash.
4. Press the **START** button to adjust the minutes.
5. Press the **MODE** button to exit alarm setting mode.
6. To turn the alarm ON/OFF: In normal time display, press and hold the **RESET** button, then press the **START** button. The alarm icon will appear/disappear.

3.3 Using the Stopwatch

1. From the normal time display, press the **MODE** button once to enter stopwatch mode. The display will show 00:00:00.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. While paused, press the **RESET** button to reset the stopwatch to 00:00:00.
5. Press the **MODE** button to exit stopwatch mode and return to the normal time display.

4. MAINTENANCE AND CARE

4.1 Water Resistance

This watch is rated for 30M (3ATM) water resistance, meaning it is suitable for daily use, hand washing, splashes, and brief immersion in water. It is not recommended for swimming, diving, or hot water activities like showering or sauna, as steam and hot water can damage the seals.

30M 3ATM
Water-Resistant



Wash Hand



Take a Shower



In the rain

Figure 4: Water resistance guidelines for the watch.

- Do not press any buttons while the watch is submerged in water.
- Avoid exposing the watch to extreme temperatures (hot or cold).
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.

4.2 Cleaning

Wipe the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the watch's finish or seals.

4.3 Battery Replacement

When the display becomes dim or stops functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.

5. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Time is incorrect:** Re-set the time following the instructions in Section 2.1. Ensure the correct 12/24 hour format is selected.
- **Alarm does not sound:** Ensure the alarm is turned ON (alarm icon visible). Check if the alarm time is set correctly.
- **Watch is not water resistant after battery change:** Ensure the watch was properly sealed after battery replacement. This often requires professional service.
- **Buttons are unresponsive:** Try pressing the buttons firmly. If still unresponsive, a full reset might be needed (consult a professional if no external reset button is available).

6. SPECIFICATIONS

Feature	Specification
Model Number	8206
Brand	Edillas
Water Resistance	30M (3ATM)
Functions	Time, Date, Day of Week, Alarm, Stopwatch, EL Backlight
Case Diameter	32mm
Case Thickness	10mm
Band Width	14mm
Band Length	210mm / 8.26in
Min Fit Wrist	140mm / 5.5in
Max Fit Wrist	190mm / 7.48in
Product Weight	21g
Manufacturer	Yadelai
Date First Available	October 21, 2022



Figure 5: Physical dimensions and weight of the watch.

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where the product was purchased or visit the official Edillas brand store online. Keep your purchase receipt as proof of purchase.

Edillas Brand Store: <https://www.amazon.com/stores/Edillas/page/B71FB916-5214-4D13-8F35-5D6CF8BC3697>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B7DSNZ4Q>

More documents and user manuals: <https://manuals.plus/>