

[Manuals.plus](#) /

› [Audecook](#) /

› Audecook 1.8L Electric Hot Pot with Steamer User Manual

Audecook

Audecook 1.8L Electric Hot Pot with Steamer User Manual

Model: AC800

1. INTRODUCTION

The Audecook 1.8L Electric Hot Pot with Steamer is a versatile and portable cooking appliance designed for convenience and efficiency. It combines the functions of a hot pot, quick cooker, and steamer, making it ideal for preparing a variety of meals in small kitchens, offices, dormitories, or while traveling.

This multifunctional cooker features a non-stick interior for easy cleaning, dual power settings for precise temperature control, and a safety protection system to prevent dry burning and overheating.





Figure 1.1: Audecook 1.8L Electric Hot Pot with Steamer, showcasing its compact design and included steamer basket.

2. SAFETY PRECAUTIONS

To ensure safe operation and prevent damage to the appliance, please read and adhere to the following safety guidelines:

- Always read all instructions before using the appliance.
- Do not immerse the main pot unit, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and pets.
- Use the appliance only on a stable, flat, and heat-resistant surface.
- Unplug the appliance from the power outlet when not in use, before cleaning, or before adding/removing parts.
- Exercise extreme caution when handling hot surfaces, steam, or hot liquids. Use the ergonomic wooden handle and lid knob.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been

damaged in any way. Contact customer support for assistance.

- Ensure the power outlet voltage matches the appliance's requirements (120V AC).
- Do not block the heat dissipation holes located at the bottom of the unit during operation.
- The appliance features automatic dry burn and overheating protection. If activated, allow the unit to cool down before resuming use and ensure adequate liquid is present.

3. PRODUCT COMPONENTS

The Audecook Electric Hot Pot with Steamer includes the following main components:

- **Main Pot Unit:** Features a non-stick interior, integrated heating element, control knob, and a comfortable wooden handle.
- **Glass Lid:** Transparent lid with a wooden knob and a steam vent for visibility and pressure release.
- **Stainless Steel Steamer Plate:** Designed for steaming food simultaneously with cooking in the main pot.
- **Detachable Power Cord:** For connecting the appliance to a power source.



Figure 3.1: Key components and design features of the Audecook Electric Hot Pot, including the visual glass cover, non-slip handle, detachable power cord, and heat dissipation holes.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport if desired.
2. **Clean:** Before first use, wash the interior of the main pot, the glass lid, and the stainless steel steamer plate with warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the exterior of the main pot unit.
3. **Placement:** Place the main pot unit on a stable, flat, and heat-resistant surface, ensuring adequate ventilation around the unit.
4. **Connect Power:** Insert the detachable power cord into the appliance's power inlet, then plug the other end into a standard 120V AC electrical outlet.
5. The appliance is now ready for use.

5. OPERATING INSTRUCTIONS

The Audecook Electric Hot Pot offers dual power settings for various cooking needs.

5.1 Power Control

The appliance features a control knob on the front for power adjustment:

- **OFF:** Turn the knob to the far left to switch off the appliance.
- **250W Mode:** Rotate the knob to the first setting (indicated by a single flame icon) for lower power cooking. This mode is suitable for delicate tasks such as making eggs, oatmeal, or simmering soups.
- **600W Mode:** Rotate the knob to the second setting (indicated by two flame icons) for higher power cooking. This mode is ideal for rapid boiling, searing steaks, cooking noodles, or preparing fondue.



Dual Power Temperature Control

MODE 1 🔥 **250W**



Egg



Oatmeal



Soup

MODE 2 🔥🔥 **600W**



Noodles



Steak



Hot pot

Figure 5.1: The control knob for selecting between 250W and 600W power modes.

5.2 Cooking Functions

This electric hot pot is designed for a variety of cooking methods:

- **Boiling:** Ideal for ramen noodles, pasta, eggs, or hot beverages. Fill with desired liquid and ingredients, select appropriate power mode, and cover with the lid.
- **Stewing/Simmering:** Perfect for soups, oatmeal, or slow-cooked dishes. Use the 250W mode for gentle simmering.
- **Stir-Frying/Searing:** The non-stick surface allows for stir-frying vegetables or searing small cuts of meat like steak. Use the 600W mode for higher heat.
- **Steaming:** Place the stainless steel steamer plate inside the pot above the water level. Add water to the main pot, place food on the steamer plate, cover with the lid, and select the desired power mode. This allows for simultaneous cooking and steaming.



Figure 5.2: The Adecook Hot Pot's versatility for preparing various dishes, including soup, steak, eggs, pasta, oatmeal, and broccoli.

5.3 Official Product Video

Your browser does not support the video tag.

Video 5.1: Adecook 1.8L Electric Hot Pot with Steamer Portable Pot. This video demonstrates the Adecook 1.8L Electric Hot Pot with

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Audecook Electric Hot Pot.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Interior:** The non-stick interior of the pot is easy to clean. Use a soft sponge or cloth with mild dish soap and warm water. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating. Rinse thoroughly.
3. **Clean Exterior:** Wipe the exterior of the main pot unit with a damp cloth. Do not immerse the main unit in water or run it under a faucet, especially near the power inlet.
4. **Clean Lid and Steamer:** The glass lid and stainless steel steamer plate can be washed by hand with warm, soapy water. They are not dishwasher safe.
5. **Dry Thoroughly:** Ensure all parts are completely dry before storing or next use.
6. **Storage:** Store the appliance in a dry place, away from direct sunlight and moisture.

**Non-stick coating
is easy to clean**



Figure 6.1: Demonstrating the ease of cleaning the non-stick interior of the Audecook Hot Pot.

7. TROUBLESHOOTING

If you encounter any issues with your Audecook Electric Hot Pot, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly; Power outlet malfunction; Power cord damaged.	Ensure the power cord is securely plugged into both the appliance and a working electrical outlet. Test the outlet with another device. If the cord is damaged, do not use and contact customer support.

Problem	Possible Cause	Solution
Food is not heating or cooking properly.	Incorrect power mode selected; Insufficient liquid; Overloaded pot.	Ensure the control knob is set to the desired power mode (250W or 600W). Add sufficient liquid for boiling/simmering. Do not overfill the pot beyond its maximum capacity.
Appliance automatically shuts off during operation.	Dry burn protection activated; Overheating.	This is a safety feature. Unplug the appliance and allow it to cool down completely. Check liquid levels and add more if necessary before resuming operation.
Steam escaping excessively from lid.	Lid not properly seated; Pot overfilled.	Ensure the lid is securely placed on the pot. Do not overfill the pot; leave adequate space for steam.

8. SPECIFICATIONS

Feature	Detail
Brand	Audecook
Model Number	AC800
Capacity	1.8 Liters
Material	Metal (with Non-Stick interior)
Wattage	250W / 600W (Dual Power)
Voltage	120V AC
Control Method	Rotary Knob
Operation Mode	Automatic
Special Feature	Keep Warm Setting, Dry Burn Protection, Overheating Protection
Item Weight	1.24 kg (2.73 lbs)
Product Dimensions (D x W x H)	19.6"D x 19.6"W x 23.3"H
Dishwasher Safe	No

9. WARRANTY AND SUPPORT

Audecook is committed to providing high-quality products and excellent customer service.

For any questions, concerns, or assistance regarding your Audecook Electric Hot Pot, please do not hesitate to contact our customer service team. We aim to provide all necessary assistance within 12 hours.

Please refer to your purchase documentation or the retailer's website for specific warranty details and terms applicable to

your product.

© 2024 Audecook. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B7FHK2H7>

More documents and user manuals: <https://manuals.plus/>