

Owigoft 110.28102310, 110.28103310

Washer Water Inlet Valve User Manual

Model: 110.28102310, 110.28103310 and compatible models

Brand: Owigoft

1. INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your new Owigoft Washer Water Inlet Valve. This component is designed as an aftermarket replacement part for various Whirlpool, Maytag, and Kenmore top-load washer models, including those in the Kenmore 700 Series.

The valve controls the flow of hot and cold water into your washing machine, ensuring proper fill levels and temperature for wash cycles. Replacing a faulty inlet valve can resolve issues such as water leaks, improper filling, or no water supply to the washer.

2. COMPATIBILITY

This water inlet valve is compatible with a wide range of washer models. Please verify your washer's model number against the list below to ensure proper fit and function. You can typically find your model number on a label inside the washer's lid, on the back of the machine, or on the frame near the door opening.

Compatible Model Numbers:

- 11028102310
- 11028103310
- 7MMVWB950AG0
- MVWB300WQ2
- MVWB450WQ2
- MVWB455YQ0
- MVWB700BW0
- MVWB725BG0
- MVWB725BW0
- MVWB750WB2
- MVWB750WL2
- MVWB750WQ2
- MVWB750WR2

- MVWB750YW0
- MVWB755YL0
- MVWB755YQ0
- MVWB755YR0
- MVWB850YG0
- MVWB850YG1
- MVWB850YW0
- MVWB850YW1
- MVWB880BW0
- MVWB950YG0
- MVWB950YG1
- MVWB950YW0
- MVWB950YW1
- MVWB980BG0
- MVWB980BW0

If you are unsure about compatibility, please contact the seller for assistance before installation.

3. SAFETY INFORMATION

Always prioritize safety when working with appliances. Failure to follow these safety guidelines may result in property damage, personal injury, or death.

- **DANGER:** Before beginning any repair or replacement, always disconnect the washer from its electrical power supply by unplugging it or turning off the circuit breaker.
- **WARNING:** Turn off both hot and cold water supply valves to the washer before disconnecting any water lines.
- Wear appropriate personal protective equipment, such as gloves and safety glasses.
- Ensure the work area is well-lit and free of obstructions.
- If you are not comfortable performing the repair, consult a qualified appliance technician.

4. PACKAGE CONTENTS

Your package should contain the following item:

- 1x Owigift Washer Water Inlet Valve (as pictured)



Figure 1: Top view of the Owigift Washer Water Inlet Valve, showing the blue plastic body with multiple solenoid coils and electrical terminals.

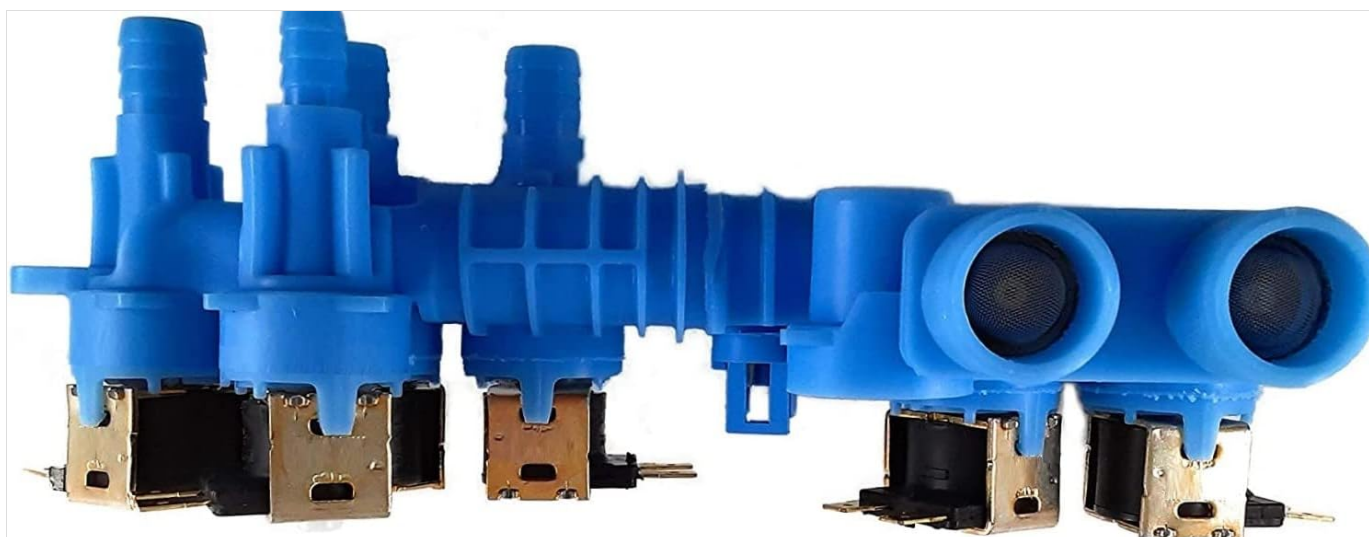


Figure 2: Side view of the Owigift Washer Water Inlet Valve, highlighting the water outlets and the overall compact design.



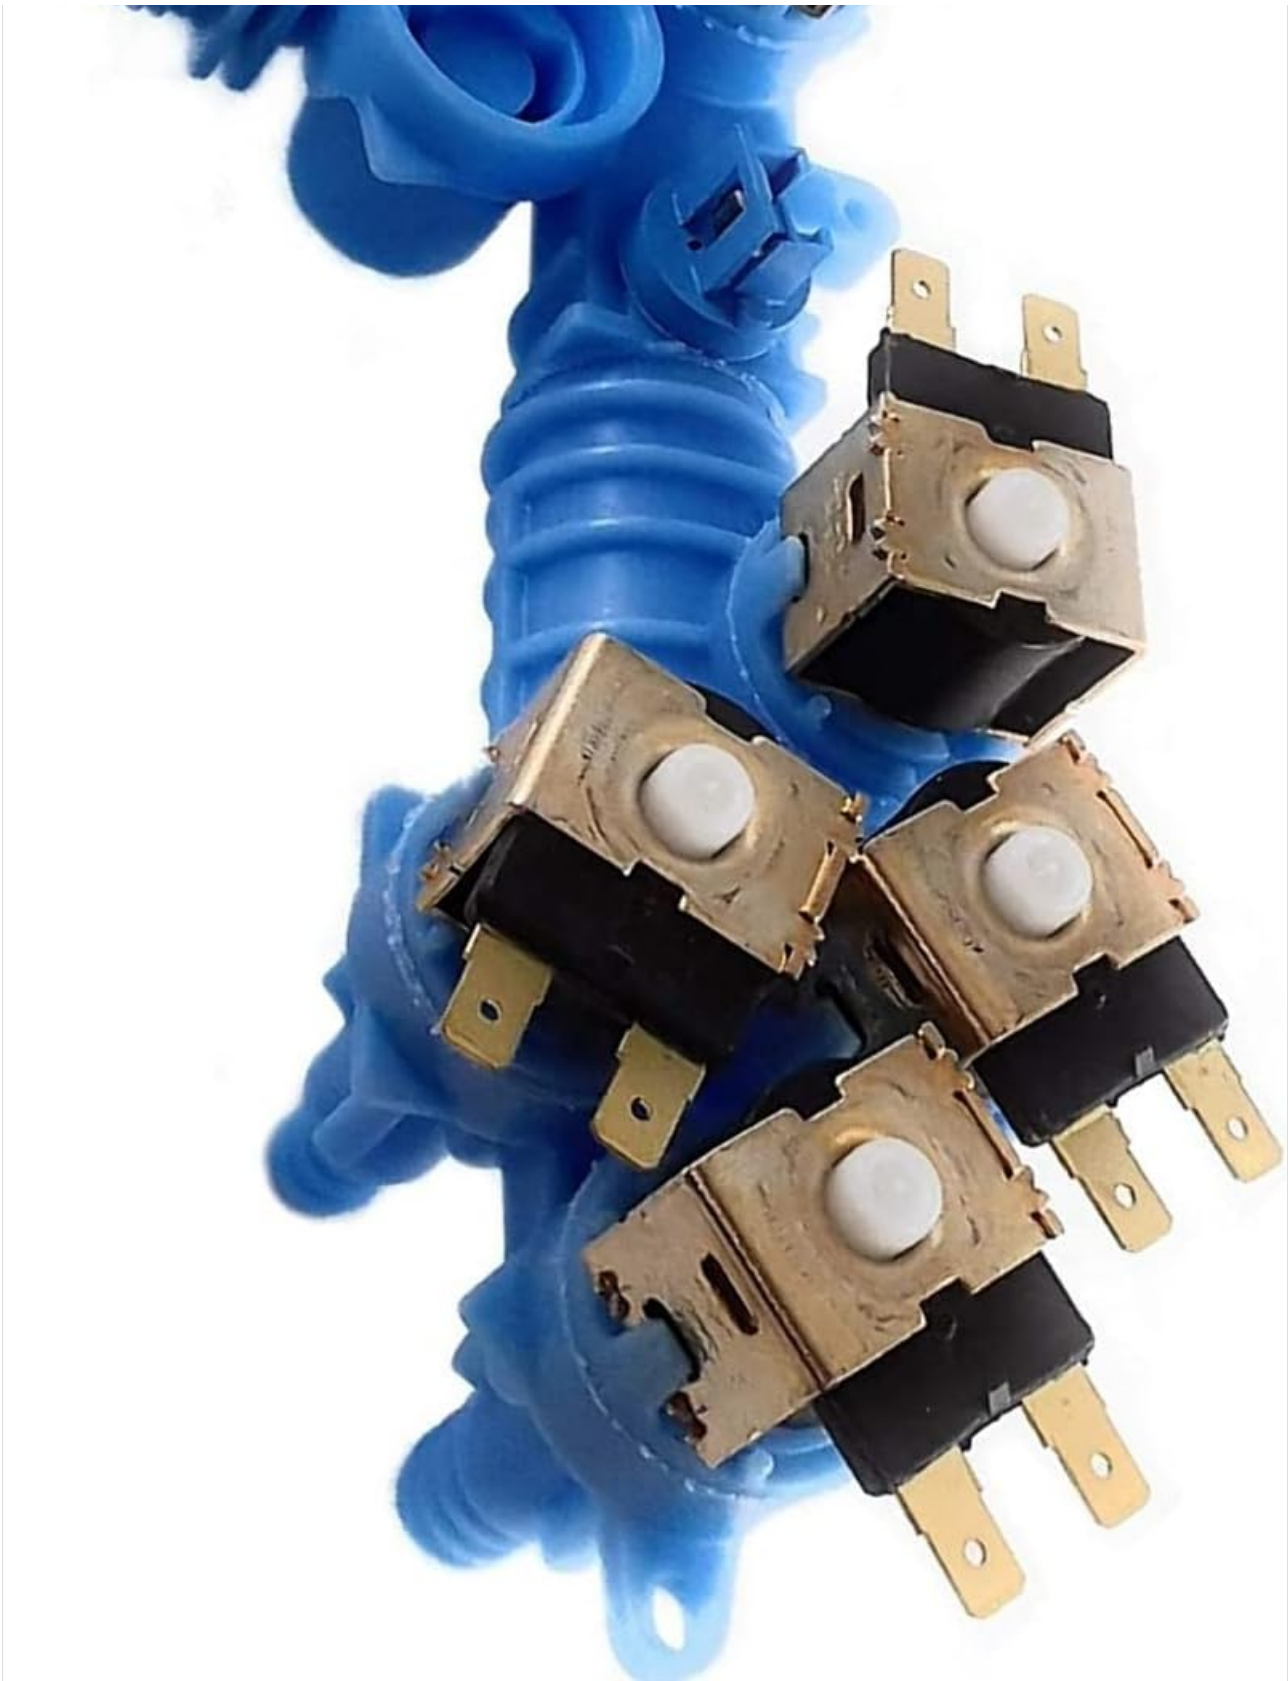


Figure 3: Angled view of the Owigift Washer Water Inlet Valve, showing the threaded inlet ports and the arrangement of the solenoid valves.

5. INSTALLATION INSTRUCTIONS

This section outlines the general steps for replacing a washer water inlet valve. Specific procedures may vary slightly depending on your washer model. It is recommended to consult a service manual for your specific washer model or search for model-specific repair videos online (e.g., on YouTube) for detailed visual guidance.

Tools and Materials Required:

- Adjustable wrench or pliers
- Screwdriver set (Phillips and flathead)
- Bucket and towels (for water spills)
- New Owigift Washer Water Inlet Valve

Step-by-Step Replacement:

1. **Safety First:** Unplug the washer from the electrical outlet. Turn off both the hot and cold water supply valves at the wall.
2. **Drain Water:** Disconnect the hot and cold water supply hoses from the back of the washer. Have a bucket and towels ready to catch any residual water.
3. **Access the Valve:** Depending on your washer model, you may need to remove the back panel or the top panel of the washer to access the water inlet valve. Refer to your washer's service manual for specific access instructions.
4. **Disconnect Wiring:** Carefully disconnect the electrical wiring harnesses from the old water inlet valve. Note their positions or take a photo for reassembly.
5. **Remove Old Valve:** Disconnect the internal hoses from the old valve. Unscrew or unclip the mounting screws/clips that secure the valve to the washer frame. Remove the old valve.
6. **Install New Valve:** Position the new Owigift water inlet valve in place and secure it with the mounting screws/clips.
7. **Reconnect Hoses and Wiring:** Reconnect the internal hoses to the new valve, ensuring they are securely fastened. Reconnect the electrical wiring harnesses to their correct terminals.
8. **Reassemble Washer:** Replace the back or top panel of the washer.
9. **Reconnect Water Supply:** Reconnect the hot and cold water supply hoses to the new valve's threaded inlet ports. Ensure connections are tight to prevent leaks.
10. **Restore Power and Water:** Slowly turn on the hot and cold water supply valves at the wall. Check for any leaks around the connections. Plug the washer back into the electrical outlet.
11. **Test Operation:** Run a short wash cycle to confirm proper water filling and operation of the new valve. Check for leaks again during the cycle.

6. OPERATION

The Owigift Washer Water Inlet Valve operates automatically in conjunction with your washing machine's control board. It opens and closes to allow the correct amount of hot and cold water into the wash tub based on the selected wash cycle and temperature settings. No direct user interaction with the valve itself is required during normal operation.

7. MAINTENANCE

The water inlet valve itself is a sealed unit and generally requires no routine maintenance. However, to ensure its longevity and proper function, consider the following:

- **Inspect Water Hoses:** Periodically check the water supply hoses connected to the valve for cracks, bulges, or leaks. Replace worn hoses as needed.
- **Clean Inlet Screens:** Most water inlet valves have small screens at the inlet ports to filter out sediment from the water supply. If water flow is restricted, turn off water and power, disconnect hoses, and clean these screens.
- **Water Quality:** If you have hard water, mineral deposits can build up over time. A whole-house water softener can help extend the life of your appliance components, including the inlet valve.

8. TROUBLESHOOTING

If you experience issues after replacing the water inlet valve, consider these common troubleshooting steps:

Problem	Possible Cause	Solution
Washer not filling with water.	Water supply valves are off. Inlet screens are clogged. Electrical connection to valve is loose.	Ensure hot and cold water supply valves are fully open. Turn off water/power, disconnect hoses, and clean inlet screens. Check and secure electrical connections to the valve.
Washer filling slowly.	Partially closed water supply valves. Partially clogged inlet screens.	Fully open water supply valves. Clean inlet screens.
Water leak at valve connections.	Loose hose connections. Damaged hose washers.	Tighten water supply hose connections. Replace rubber washers in water supply hoses if they are worn or cracked.
Washer overfilling or continuously filling.	Faulty water inlet valve (rare for new part). Pressure switch issue (washer component).	If the issue persists after confirming proper installation, the problem may lie with another washer component, such as the pressure switch or main control board. Consult a professional technician.

If troubleshooting steps do not resolve the issue, it is recommended to contact a qualified appliance repair technician.

9. SPECIFICATIONS

Brand	Owigift
Material	Metal (internal components), Plastic (body)
Exterior Finish	Metal
Number of Ports	2 (Inlet)
Valve Type	Globe Valve
Inlet Connection	1/2 inch Threaded Inlet
Outlet Connection	3/4 inch NPT Outlet
UPC	718997216594

10. WARRANTY AND SUPPORT

For any questions regarding compatibility, installation, or product performance, please contact Owigift customer support. While specific warranty details are not provided in this manual, most aftermarket replacement parts come with a limited

warranty against manufacturing defects.

Contact Information:

- Refer to your purchase documentation or the seller's contact information on the platform where you purchased this product.
- The seller commits to resolving problems within 24 hours.

© 2024 Owigift. All rights reserved. This manual is for informational purposes only. Owigift is not affiliated with Whirlpool, Maytag, or Kenmore.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question