

Manuals.plus /
› ESR /
› ESR iPhone 14 Pro Case Instruction Manual

ESR iPhone 14 Pro

ESR iPhone 14 Pro Case Instruction Manual

Model: iPhone 14 Pro | Brand: ESR

This manual provides essential information for the proper use and maintenance of your ESR iPhone 14 Pro Case. It covers installation, features, and care instructions.

INTRODUCTION

The ESR iPhone 14 Pro Case is designed to provide robust protection for your device while maintaining full functionality and compatibility with MagSafe accessories. Crafted from durable, yellowing-resistant acrylic, this case features military-grade shock absorption and raised edges to safeguard your screen and camera.



Image: Front and back view of the clear ESR iPhone 14 Pro case, highlighting the MagSafe ring and camera cutouts.

Video playback not supported. This video provides an overview of the ESR Magnetic Case with HaloLock for iPhone 14 Pro, showcasing its design and features.

COMPATIBILITY

This case is specifically designed for the **iPhone 14 Pro**. It is not compatible with iPhone 14, iPhone 14 Plus, or iPhone 14 Pro Max models. Ensure your device model matches for proper fit and protection.



Image: Visual guide indicating compatibility solely with iPhone 14 Pro.

SETUP

Installing the Case

1. Ensure your iPhone 14 Pro is clean and free of dust or debris.
2. Align the top edge of your iPhone with the top edge of the case.
3. Gently press your iPhone into the case, starting from the top corners, then working your way down to secure the

bottom corners.

4. Verify that all edges of the case are securely fitted around your iPhone and that all buttons and ports are accessible.

OPERATING INSTRUCTIONS

MagSafe Functionality

The integrated HaloLock magnetic ring ensures seamless compatibility with all MagSafe accessories. Simply align your MagSafe charger or accessory with the magnetic ring on the back of the case for a secure and efficient connection.



Image: Demonstrating MagSafe wireless charging with the case.

Screen and Camera Protection

Raised edges defend against scratches



Image: Examples of MagSafe accessories used with the case.

Button and Port Access

The case features precise cutouts for all ports, speakers, and the charging port, ensuring unhindered access. The button covers are designed to be responsive, providing tactile feedback for volume and power controls.

Compatible with All MagSafe Accessories



Image: Detailed view of the case's precise port cutouts.

PROTECTION FEATURES

Military-Grade Drop Protection

This case is engineered with shock-absorbing Air-Guard corners, providing military-grade protection against drops and impacts. The design disperses shock effectively to minimize damage to your iPhone 14 Pro.

Military-Grade Protection

Protected by shock-absorbing Air-Guard corners



Image: Illustration of the case's military-grade drop protection with Air-Guard corners.

Screen and Camera Protection

Raised edges around the screen and a 0.5mm raised camera guard provide essential defense against scratches and direct impact when the device is placed on flat surfaces.

Tough Acrylic Back

Enhanced scratch resistance for a flawless look



Image: Visual representation of raised screen and camera edges for enhanced protection.

Yellowing Resistance

The case is constructed from tough acrylic material that is yellowing resistant, ensuring the clear aesthetic of your iPhone is preserved over time.

Stronger Magnetic Lock

Powerful built-in magnets ensure secure attachment



Magnetic strength



Image: The tough acrylic back of the case, designed for clarity and yellowing resistance.

MAINTENANCE

Cleaning Instructions

To clean your ESR iPhone 14 Pro Case, gently wipe it with a soft, damp cloth. For stubborn stains, a small amount of mild soap can be used. Avoid harsh chemicals or abrasive materials, as these may damage the case's finish.

Storage

Store the case in a cool, dry place away from direct sunlight when not in use to maintain its material integrity and prevent discoloration.

TROUBLESHOOTING

Dust or Debris Under the Case

If dust or debris accumulates between the case and your iPhone, carefully remove the case, clean both the phone and the inside of the case with a microfiber cloth, and then re-install the case following the setup instructions.

MagSafe Alignment Issues

Ensure that your MagSafe accessory is properly aligned with the magnetic ring on the back of the case. If issues persist, check for any obstructions or debris on the magnetic surfaces.

SPECIFICATIONS

- **Product Dimensions:** 5.98 x 3.07 x 0.55 inches
- **Item Weight:** 1.13 ounces
- **Material:** Acrylic
- **Compatible Phone Models:** iPhone 14 Pro
- **Special Features:** Camera Protector, Shock-Absorbent, MagSafe Compatible

WARRANTY AND SUPPORT

For any product-related inquiries or support, please refer to the official ESR website or contact their customer service. Specific warranty details may vary and are typically available on the manufacturer's official channels.

Visit the [ESR Store](#) for more information and product updates.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B7H7CKB3>

More documents and user manuals: <https://manuals.plus/>