

[Manuals.plus](#) /

› [PTHTECHUS](#) /

› PTHTECHUS Replacement Remote Control for Samsung 4K QLED UHD TVs (Model 1328)

PTHTECHUS 1328

PTHTECHUS Replacement Remote Control for Samsung 4K QLED UHD TVs

Model: 1328

INTRODUCTION

This manual provides essential instructions for the PTHTECHUS Replacement Remote Control, designed for various Samsung Smart TVs. This remote offers full functionality comparable to original Samsung remotes, ensuring a seamless user experience. It operates using infrared technology and requires no complex setup.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 1: Battery compartment with AAA batteries. Ensure correct polarity when inserting batteries.

2. Initial Use

No configuration or pairing is necessary. Once batteries are installed, the remote control is ready for immediate use with

compatible Samsung TVs. Simply point the remote towards your television and begin operation.

OPERATING INSTRUCTIONS

This remote control provides access to all standard functions of your Samsung TV. Familiarize yourself with the button layout for optimal use.



Figure 2: Remote control layout with microphone button highlighted. This button activates voice control features on compatible TVs.

Basic Functions

- **Power Button:** Located at the top, turns the TV on or off.
- **Volume Control (+/-):** Adjusts the TV volume.
- **Channel Control (Up/Down arrows):** Changes TV channels.
- **Navigation Pad (Directional buttons and Enter):** Used to navigate menus and select options.
- **Return Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's Smart Hub or main menu.
- **Play/Pause, Fast Forward, Rewind:** Controls media playback.

Special Features

- **Voice Control Button:** Press the microphone button (Figure 2) to activate voice commands on compatible Samsung Smart TVs. Speak clearly into the remote.
- **Quick Access Buttons:** Dedicated buttons for popular streaming services like Netflix, Prime Video, and a general WWW button for web browsing (Figure 3).



Figure 3: Dedicated app buttons for quick access to streaming services and web browsing.

Infrared Operation

This remote control operates using infrared (IR) technology. Ensure there are no obstructions between the remote's IR emitter (located at the top front) and the TV's IR receiver for proper signal transmission. The effective range is approximately 10 meters (33 feet).



Figure 4: Visual representation of voice command functionality and signal transmission.

MAINTENANCE

Battery Replacement

Replace the AAA batteries when the remote control's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's IR receiver.
 - Ensure you are within the operating range (approximately 10 meters) and pointing the remote directly at the TV.
- **Voice control not working:**
 - Verify that your Samsung TV model supports voice control functionality with a replacement remote.
 - Ensure there are no loud background noises interfering with the microphone.
 - Speak clearly and directly into the remote's microphone.
- **Specific buttons not working:**
 - Some advanced features or specific app buttons may require your TV to be connected to the internet or have the corresponding app installed and updated.

SPECIFICATIONS

Brand	PTHTECHUS
Model Number	1328
Compatible Samsung Remote Models	BN59-01274A, BN59-01300J, BN59-01298H, and others listed in product description.
Compatible Devices	Samsung 4K QLED UHD TVs (e.g., QA55Q8CNAK, QA75Q9FNAK, QE65Q7FNAU, etc.)
Connectivity Technology	Infrared (IR)
Frequency	433 MHz
Remote Control Range	Approximately 10 meters (33 feet)
Battery Type	2 x AAA batteries (not included)
Material	ABS
Dimensions (L x W x H)	23 x 4.7 x 2.4 cm (approx. 9.06 x 1.85 x 0.94 inches)
Weight (with packaging)	Approximately 107.2 g (3.78 oz)



Figure 5: Design and form factor of the PTHTECHUS remote control.

SUPPORT AND WARRANTY

For any issues or questions not covered in this manual, please contact the manufacturer or your retailer for assistance. Information regarding warranty coverage is typically provided at the point of purchase or on the product packaging.

© 2023 PTHTECHUS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B7HFJK1D>

More documents and user manuals: **<https://manuals.plus/>**