

[Manuals.plus](#) /

› [whall](#) /

› whall 2-Slice Stainless Steel Toaster User Manual

whall KST075GU

User Manual

whall 2-Slice Stainless Steel Toaster (Model: KST075GU)

1. PRODUCT OVERVIEW

The whall 2-Slice Stainless Steel Toaster is designed for efficient and even toasting of various bread types. It features a durable stainless steel exterior, wide slots, and multiple functions to cater to individual preferences.



Figure 1: Front view of the whall 2-Slice Stainless Steel Toaster with bread inserted.

Key Features:

- **Evenly Baking & Safety:** Bidirectional surround heating technology ensures uniform toasting.
- **1.5-Inch Extra-Wide Slots:** Accommodates various bread types, including waffles and thick artisanal bread.
- **Defrost, Bagel, & Cancel Functions:** Specialized settings for different toasting needs.
- **6 Gear Adjustments:** Customizable browning levels from light (1) to dark (6).
- **High Lift Lever:** Allows for easy removal of smaller items.
- **Removable Crumb Tray:** Simplifies cleaning and maintenance.

2. SETUP

Before first use, ensure the toaster is placed on a stable, heat-resistant surface away from flammable materials. Unpack all components and remove any packaging materials from inside the toaster slots.

1. Uncoil the power cord completely and plug it into a standard 120V~60Hz electrical outlet.
2. For the first use, it is recommended to operate the toaster without bread on a medium browning level (e.g., 3 or 4) to burn off any manufacturing residues and odors. Ensure the area is well-ventilated.



Figure 2: Toaster with wide slots, suitable for various bread sizes.

3. OPERATING INSTRUCTIONS

Follow these steps for optimal toasting results:

1. **Insert Bread:** Place the bread slices into the toaster slots. The 1.5-inch wide slots can accommodate various bread types.
2. **Select Browning Level:** Use the browning control knob to select your desired shade from 1 (light) to 6 (dark).

- For a single slice or slightly dry bread, select a lower setting (1 or 2).
- For multiple slices or thick bread, use a higher setting.
- For first use, a medium browning level (3 or 4) is recommended.

3. **Lower Lever:** Press the bread push rod down until it locks into place. The indicator light will illuminate, and toasting will begin.
4. **Automatic Pop-Up:** Once toasting is complete, the bread will automatically pop up, and the indicator light will turn off.

Operation Flow Presentation



Figure 3: Visual guide to the toaster's operation flow.

Special Functions:

- **DEFROST:** Press the DEFROST button to toast frozen bread. This function extends the toasting time by 8%-12% compared to the normal setting, allowing frozen bread to thaw and toast evenly.
- **BAGEL:** Press the BAGEL button for bagel toasting. This function toasts the cut side of the bagel while gently warming the outer side.

- **CANCEL:** Press the CANCEL button at any time to stop the toasting process and immediately eject the bread.
- **REHEAT:** To reheat toast for an additional 30 seconds, press the REHEAT button after selecting your desired function.

Operation panel display

It's easy quick and doesn't hurt your hands



CANCEL
Stop heating
at any time



BAGEL
Bagel circle
baking one side



DEFROST
The defrost
function



Figure 4: Detailed view of the operation panel and special function buttons.

4. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Always Unplug:** Before cleaning or moving the toaster, always switch it off, unplug the power cord, and allow the toaster to cool down completely.
2. **Crumb Tray:** The toaster is equipped with a removable crumb tray located at the bottom. Pull out the tray to remove accumulated bread crumbs. Clean the tray regularly to prevent fire hazards.
3. **Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the stainless steel finish.

4. **Do Not Immerse:** Never immerse the toaster or its power cord in water or any other liquid. Do not drip any liquids on the toaster to avoid the risk of electric shock and damage.



Figure 5: Easy access to the removable crumb tray for cleaning.

5. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bread not toasting or toasting too lightly.	Browning level set too low; toaster coils weakening over time.	Increase the browning level. If coils appear weak after extended use, consider contacting customer support.
Bread is burnt.	Browning level set too high; toasting a single slice on a high setting.	Decrease the browning level. When toasting only one slice, select a lower gear (1 or 2).

Problem	Possible Cause	Solution
Uneven toasting.	Inconsistent bread thickness; toasting only one slice when designed for two.	Ensure bread slices are of similar thickness. For best results, toast two slices at a time. If toasting one, use a lower setting.
Toaster does not power on.	Not properly plugged in; power outlet issue.	Check if the power cord is securely plugged into a working outlet. Try a different outlet.
Lever does not stay down.	Toaster is not plugged in; internal mechanism issue.	Ensure the toaster is plugged in. If the issue persists, contact customer support.

Note: It is normal for the outside surface to become hot during operation. Avoid touching hot surfaces directly; use handles or knobs.

6. SPECIFICATIONS

- **Model Number:** KST075GU
- **Rating Voltage:** 120V~60Hz
- **Nominal Power:** 850W
- **Number of Slices:** 2
- **Material:** Stainless Steel
- **Color:** Stainless Steel
- **Product Dimensions:** 13.7 x 14.41 x 7.8 inches
- **Item Weight:** 4.18 pounds
- **UPC:** 850041827407, 850041827643

7. WARRANTY AND SUPPORT

whall provides a 12-month guarantee for this product. If you receive defective products or are not satisfied, please contact customer service for assistance. We offer 24-hour customer friendly service.

For further support, please refer to the official user manual available at:[User Manual \(PDF\)](#)

© 2023 whall. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question