

[Manuals.plus](#) /

› [Feihe](#) /

› Feihe 22 Inch TV User Manual

Feihe ATSC-22

Feihe 22 Inch TV User Manual

Model: ATSC-22

INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Feihe 22 Inch LED Widescreen HDTV. Please read this manual thoroughly before using the television to ensure proper functionality and safety.

PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- 1 x Feihe 22 inch TV
- 1 x AC Adapter cable
- 1 x Car Charger Adapter
- 1 x Remote control
- 1 x User Manual (this document)



Image: The Feihe 22 Inch TV with its remote control, AC adapter, and car charger adapter, representing the typical package contents.

SETUP

1. Assembling the Stand (Optional)

If you intend to place the TV on a flat surface, attach the included stand feet to the bottom of the television using the provided screws. Ensure the stand is securely fastened before placing the TV.

2. Wall Mounting (Optional)

The Feihe 22 Inch TV supports VESA wall mounts with a 100mm x 100mm pattern. Use appropriate wall mounting hardware (not included) and follow the instructions provided with your wall mount. Ensure the mounting surface can support the weight of the television.

Feihe 22 inch ATSC TV Product Details

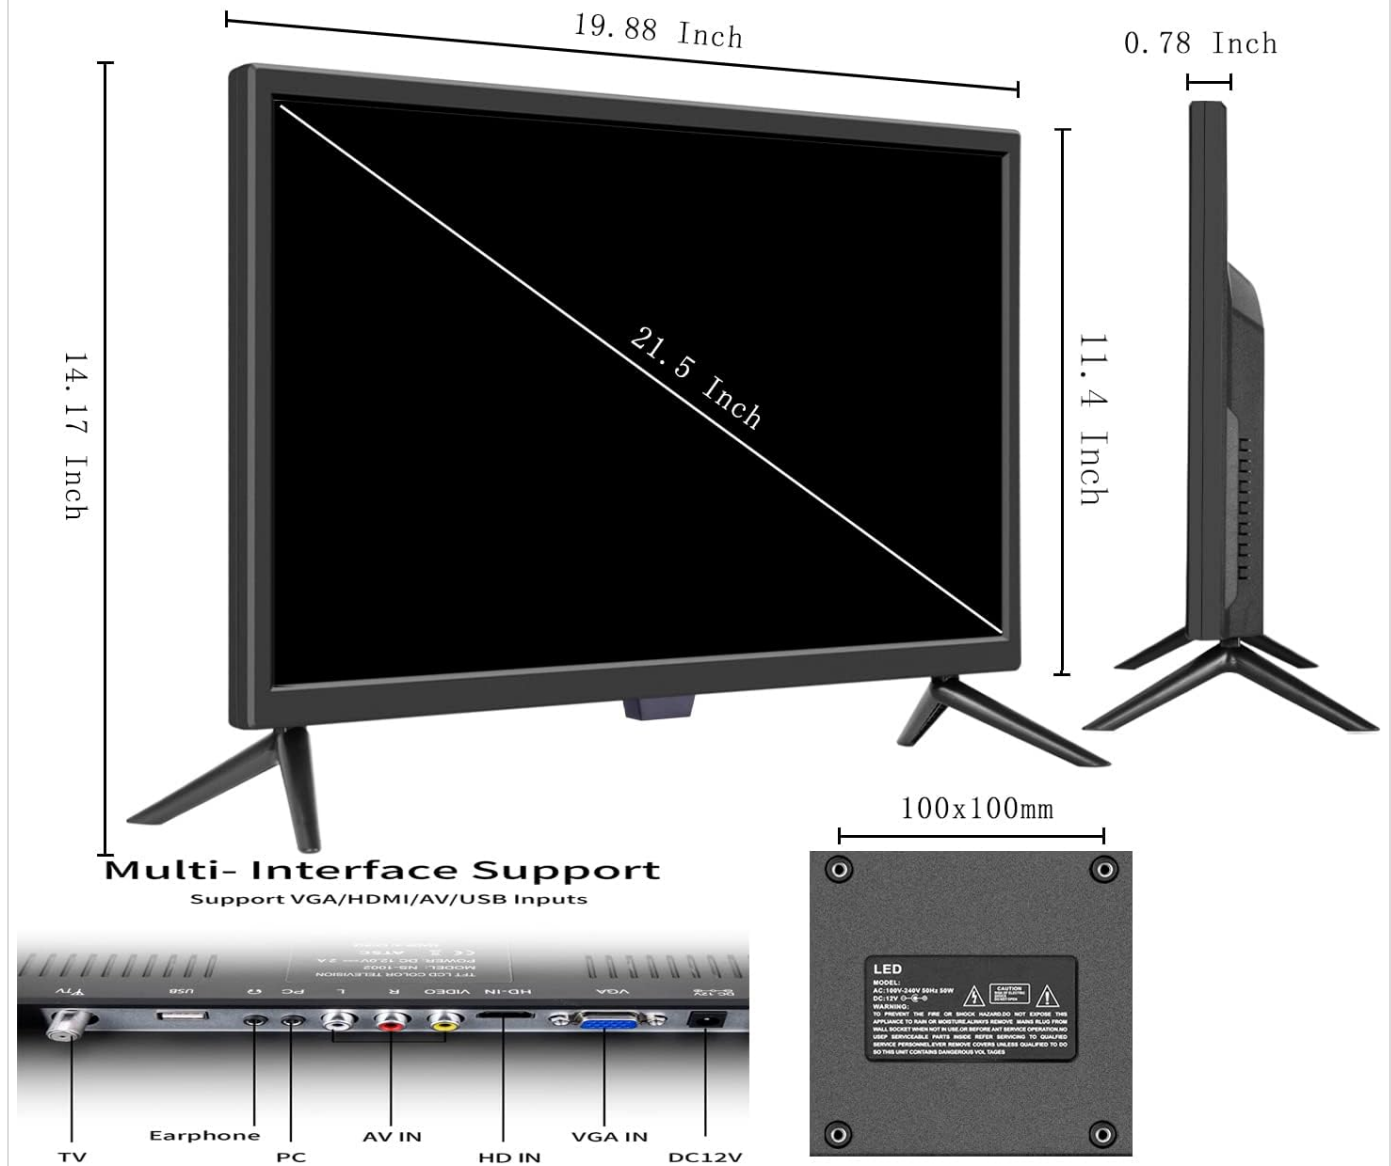 


Image: A diagram illustrating the dimensions of the Feihe 22 Inch TV and the location of the 100mm x 100mm VESA mounting holes on the back panel.

3. Connecting Peripherals

The TV features multiple input ports for various devices. Refer to the diagram below for port locations and descriptions:

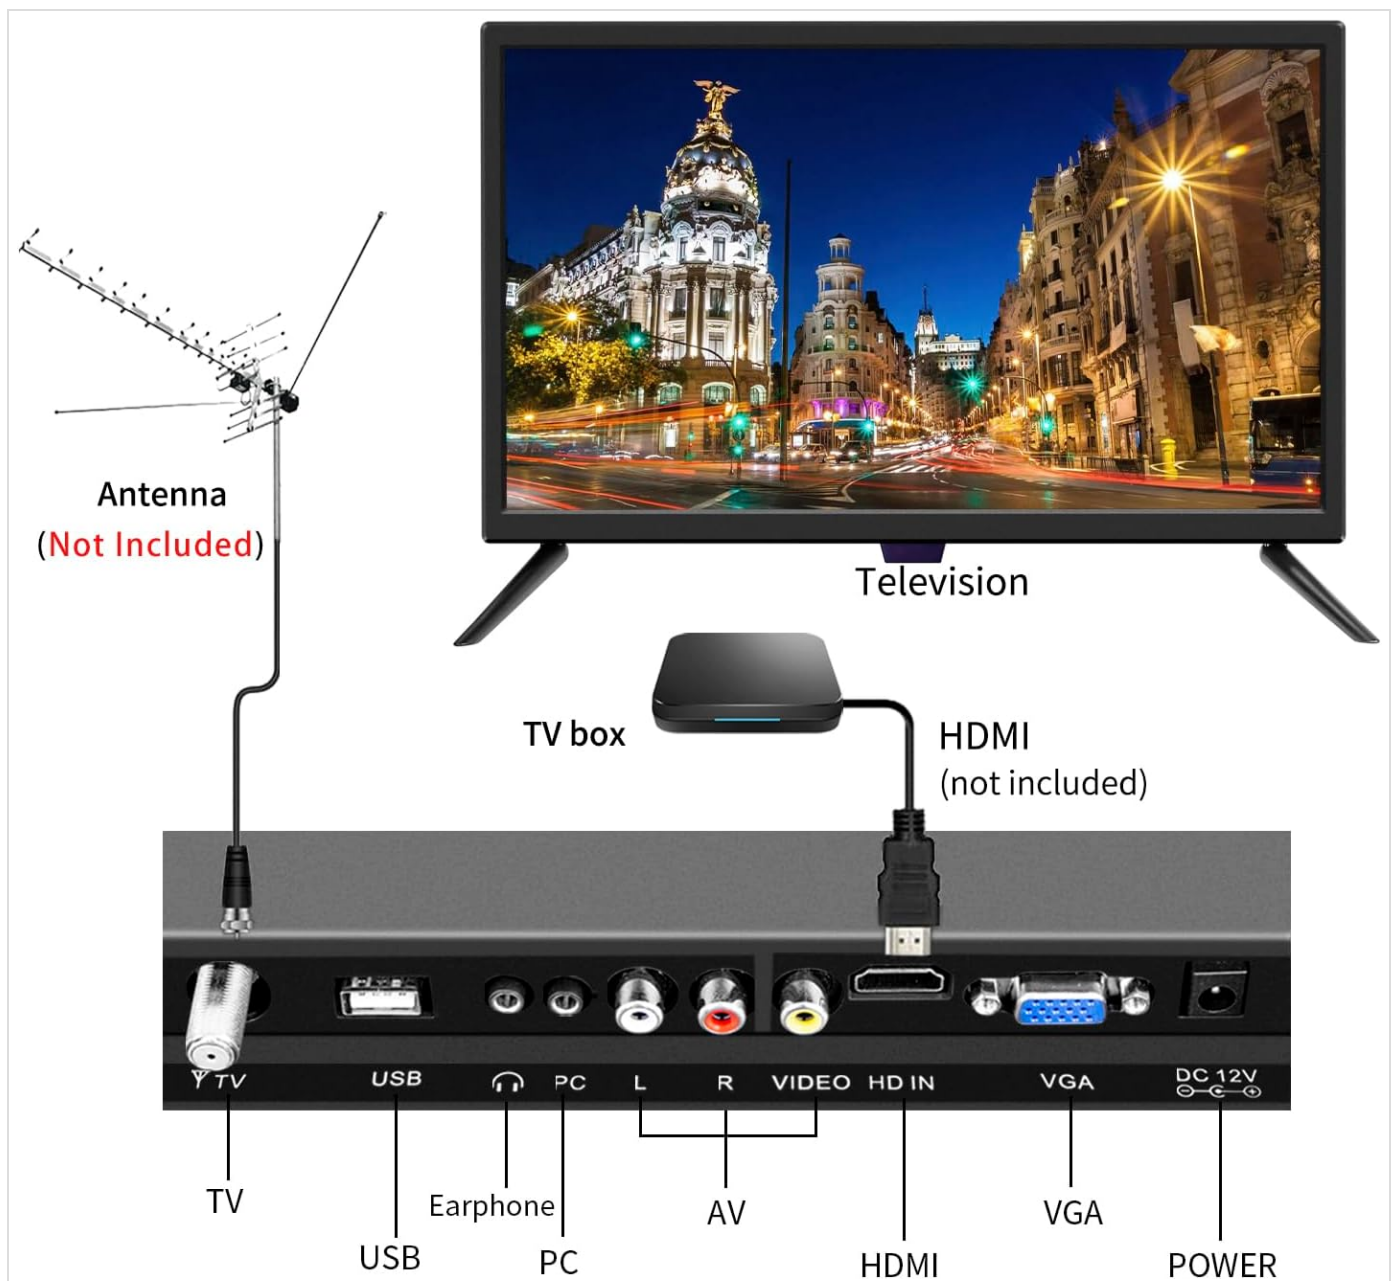


Image: A detailed view of the TV's rear panel, highlighting the TV (Antenna), USB, Earphone, PC (VGA Audio), AV (Audio/Video), HDMI, VGA, and DC 12V power input ports.

- **HDMI:** Connect devices such as DVD players, game consoles, or streaming sticks for high-definition audio and video.
- **VGA:** Connect a computer for use as a monitor.
- **AV (Audio/Video):** Connect older devices like VCRs or some DVD players using RCA cables.
- **USB:** Insert a USB drive to play compatible media files.
- **RF In (Antenna):** Connect an external antenna for receiving digital ATSC broadcast channels.
- **Headphone Jack:** Connect headphones for private listening.
- **DC 12V Power:** Connect the included AC adapter or car charger adapter. This TV is designed for 12 Volt DC power, making it suitable for RVs, campers, and other mobile applications.



Image: The Feihe 22 Inch TV displayed in a living room setting, with an illustration of an outdoor antenna on a rooftop, demonstrating the connection for receiving broadcast signals.

4. Powering On

Connect the AC adapter to the DC 12V input on the TV and then to a standard wall outlet. Alternatively, use the car charger adapter for 12V DC power sources in vehicles. Press the Power button on the TV or the remote control to turn on the television.



(9.8Ft)

12-Volt Powered TV

Perfect Television for RVs, Campers,
Trailers, Boat and More



Image: The Feihe 22 Inch TV positioned outdoors with an RV in the background, illustrating its capability to be powered by a 12-volt source, ideal for mobile use.

OPERATING INSTRUCTIONS

1. Remote Control Usage

The included remote control is specifically designed for this Feihe 22 Inch TV. Familiarize yourself with its buttons for power, volume, channel selection, input source, and menu navigation. **Note:** This TV's remote control code is unique and is generally not compatible with universal remotes or cable service provider remotes (e.g., Xfinity, Direct TV, Comcast, Verizon). You may need to use two remote controls if integrating with a cable box.

Feihe 22 inch TV ONLY WORK WITH THE INCLUDED REMOTE

Note: Because every remote control code is different, Feihe 22" TV not compatible with any cable service provided remote or universal remotes!



Image: A visual comparison showing the Feihe TV's dedicated remote control alongside several common cable TV remotes (Cox, Xfinity, Direct tv, Verizon, Spectrum, Dish Network, Fire tv, ROKU), indicating their incompatibility with the Feihe TV.

2. Input Source Selection

Press the "Source" or "Input" button on the remote control to cycle through available input sources (HDMI, VGA, AV, USB, TV). Select the appropriate input for the device you wish to use.

Multiple Connections

Equipped with a variety of connecting types,
you can connect multiple devices at the same time to play more functions.



Image: The Feihe 22 Inch TV screen displaying a city skyline, surrounded by icons representing various connectable devices such as a computer, speaker, U disk, TV box, outdoor antenna, DVD player, and game console, illustrating its versatile connectivity.

3. Channel Scanning (ATSC Tuner)

If using an antenna, navigate to the TV's menu and select the "Channel Scan" or "Auto Tune" option. This will scan for available digital broadcast channels in your area. The TV is equipped with a digital ATSC tuner.

4. Picture and Sound Settings

Access the TV's menu to adjust picture settings (brightness, contrast, color, aspect ratio) and sound settings (volume, equalizer, sound mode). The TV features a 1920x1080 resolution, 16:9 aspect ratio, and a 170° viewing angle for clear visuals.

178° Wide Viewing Angle




Note: Because the remote control code is different, 22 inch TV is not compatible with Xfinity/Direct tv/Comcast/Verizon/Spectrum remotes. Require user to have Two remote controls to operate TV.

Image: A Feihe 22 Inch TV displaying a vibrant autumn tree scene, with an overlay indicating a 178° wide viewing angle, emphasizing the consistent picture quality from various perspectives.

OUTSTANDING SOUND DESIGN

TV built-in clear and detailed sound box speaker

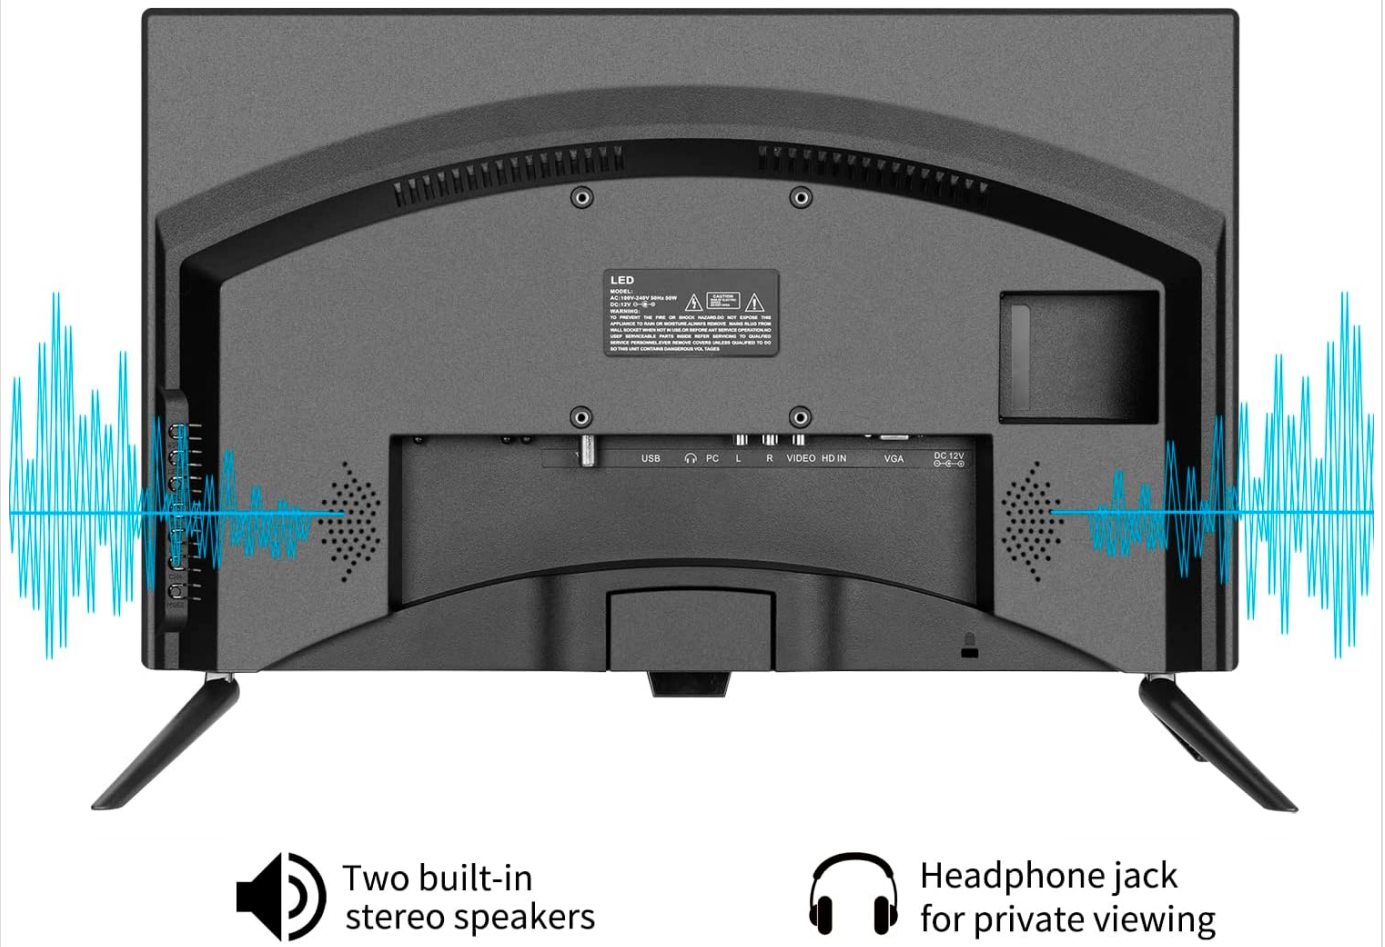

Two built-in
stereo speakers



Headphone jack
for private viewing

Image: The rear view of the Feihe 22 Inch TV, with visual representations of sound waves emanating from the two built-in stereo speakers and an icon for the headphone jack, highlighting its audio features.

MAINTENANCE

1. Cleaning the TV

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials. For the TV casing, use a soft, dry cloth.

2. General Care

- Keep the TV away from direct sunlight and heat sources.
- Ensure adequate ventilation around the TV to prevent overheating.
- Avoid placing heavy objects on top of the TV.
- Disconnect the power cable during lightning storms or when the TV will be unused for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power / TV does not turn on.	Power cable not connected; power outlet issue; faulty adapter.	Ensure power cable is securely connected. Test the outlet with another device. Try a different power adapter if available.
No picture / "No Signal" message.	Incorrect input source selected; device not connected properly; antenna issue.	Press the "Source" button on the remote to select the correct input. Check all cable connections (HDMI, AV, VGA). If using an antenna, ensure it is connected and perform a channel scan.
No sound.	Volume is muted or too low; incorrect audio output setting; faulty cable.	Increase volume. Check if mute is active. Ensure audio cables are connected correctly. If using HDMI, ensure the source device is sending audio.
Remote control not working.	Batteries are dead or incorrectly inserted; remote not pointed at TV; remote is incompatible.	Replace batteries, ensuring correct polarity. Point the remote directly at the TV's IR sensor. Remember that universal remotes or cable provider remotes are generally not compatible with this TV.
Cannot receive cable channels.	TV is designed for ATSC digital antenna broadcasts, not direct cable box connection without an external tuner.	This TV is primarily designed for use with an antenna for over-the-air digital broadcasts. For cable TV, you will need a cable box provided by your service provider, connected via HDMI or AV. The TV's internal tuner is for ATSC (over-the-air) signals only.

SPECIFICATIONS

Feature	Detail
Brand	Feihe
Model Number	ATSC-22
Screen Size	21.5 Inches (55 cm diagonal)
Display Technology	LED
Resolution	1080p (1920x1080)
Refresh Rate	60 Hz
Aspect Ratio	16:9
Viewing Angle	170°
Connectivity	HDMI, VGA, USB, AV IN, Earphone, Coaxial (RF In)
Speaker Type	Built-In Stereo Speakers
Power Supply	12 Volts (DC)
Item Weight	7.39 pounds

Feature	Detail
Product Dimensions (DxWxH)	0.78" x 19.88" x 14.17"
Special Feature	RV TV compatible

Safety Information

This television is only suitable for 12 Volt DC power sources, typically found in RVs, campers, boats, trucks, and trailers. Ensure the power source matches the TV's requirements to prevent damage. Do not expose the TV to rain or moisture to reduce the risk of fire or electric shock.

Warranty and Support

For information regarding warranty coverage, please refer to the documentation provided at the time of purchase or contact your retailer. For technical assistance or further inquiries, please consult the official Feihe website or contact their customer support channels if available. Please note that some third-party universal remote controls or cable provider remotes may not be compatible with this television.

© 2024 Feihe. All rights reserved.

Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

