

[Manuals.plus](#) /

› [Bomann](#) /

› Bomann Built-in Electric Oven and Ceramic Hob Set (Model 779340) Instruction Manual

Bomann 779340

Bomann Built-in Electric Oven and Ceramic Hob Set (Model 779340) Instruction Manual

Your guide to safe and efficient operation

1. INTRODUCTION

Thank you for choosing the Bomann Built-in Electric Oven and Ceramic Hob Set, Model 779340. This appliance combines a versatile electric oven with a high-performance ceramic hob, designed for seamless integration into your kitchen. This manual provides essential information for the safe installation, operation, and maintenance of your new appliance. Please read it thoroughly before first use and keep it for future reference.



Image 1.1: The Bomann Built-in Electric Oven and Ceramic Hob Set, showcasing the integrated design with the oven below and the ceramic hob on top.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- **Electrical Safety:** Ensure the appliance is correctly installed by a qualified electrician and connected to a properly grounded power supply. Do not use adapters or extension cords.
- **Child Safety:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. The hob features an integrated child lock.
- **Hot Surfaces:** The oven and hob surfaces become very hot during operation and remain hot for some time after use. Always use oven mitts and exercise caution.

- **Ventilation:** Ensure adequate ventilation around the appliance as specified in the installation instructions.
- **Cleaning:** Disconnect the appliance from the power supply before cleaning. Do not use abrasive cleaners or sharp metal scrapers on the oven door glass or ceramic hob surface.
- **Flammable Materials:** Do not store flammable materials in or near the oven.

3. PRODUCT OVERVIEW

The Bomann Built-in Electric Oven and Ceramic Hob Set features a 60-liter capacity oven and a ceramic hob with four cooking zones. The control panel includes rotary knobs for oven function and temperature selection, and touch controls for the digital timer and hob settings.

3.1 Oven Components

- **Oven Interior:** 60-liter usable capacity.
- **Oven Door:** Double-glazed, full-glass door, removable for easier cleaning and installation.
- **Accessories:** Includes side racks, a standard baking sheet, and a grill rack.



Image 3.1: The oven interior showing the included side racks, standard baking sheet, and grill rack. The usable capacity is 60 liters.

3.2 Ceramic Hob

- **Cooking Zones:** Four zones in total, including two single cooking zones, one double-circle zone, and one roasting zone.
- **Controls:** Energy controls for each zone and a residual heat indicator.

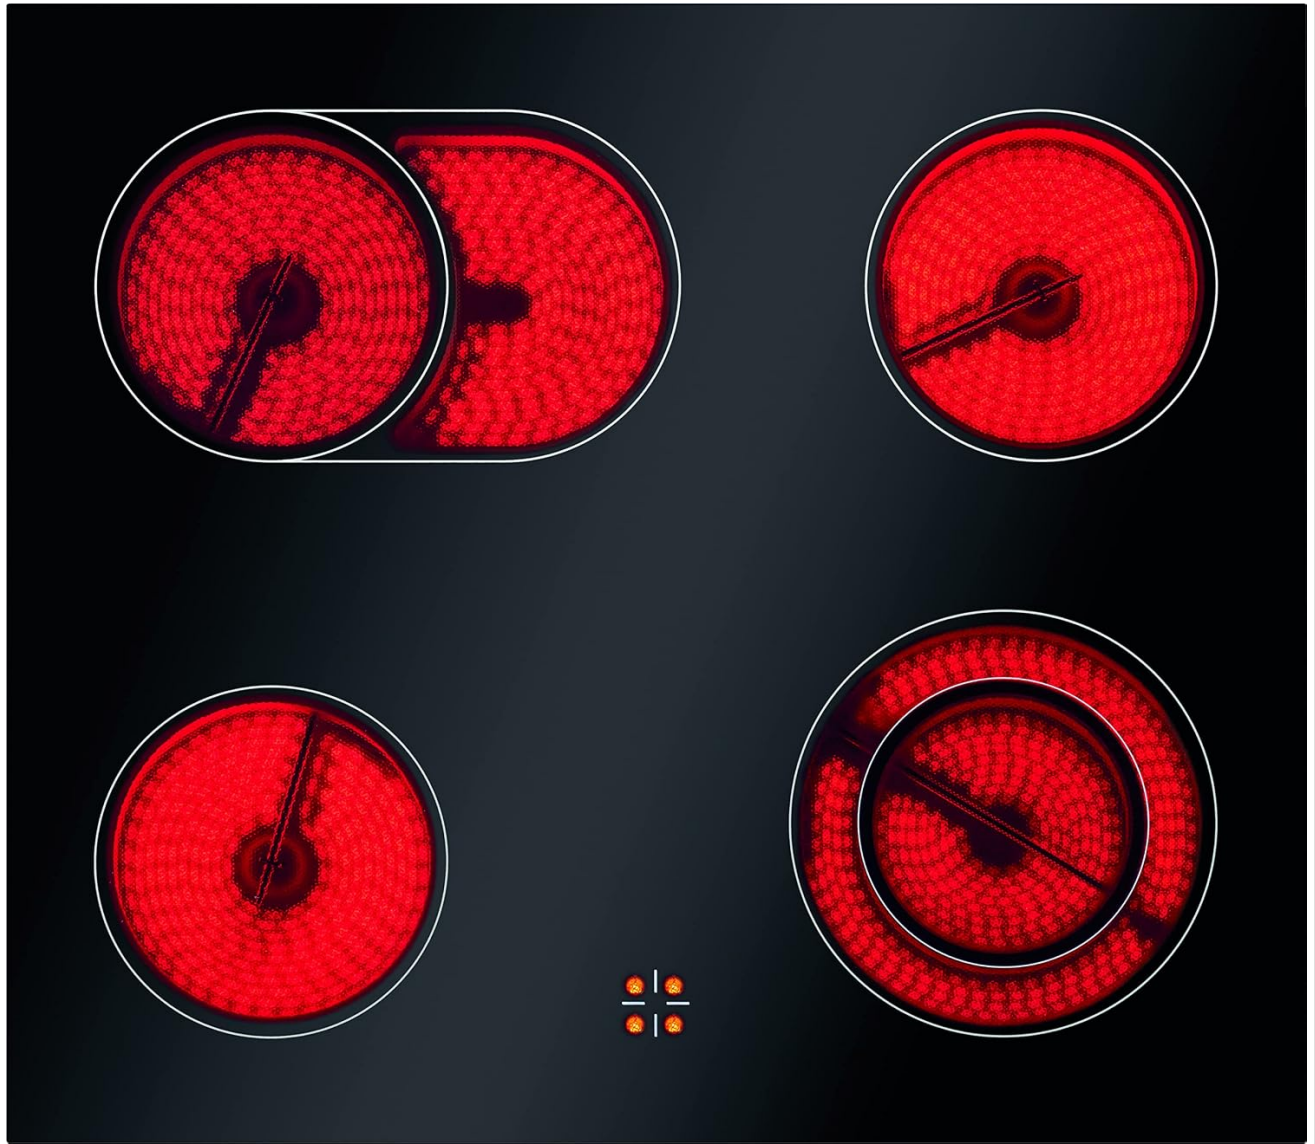


Image 3.2: Close-up view of the ceramic hob, illustrating the four cooking zones, including the double-circle and roasting zones.

3.3 Control Panel

- **Rotary Knobs:** For selecting oven functions and temperature. These are retractable for a sleek finish.
- **Digital Timer:** LED display with touch control for setting cooking times and other timer functions.



Image 3.3: A hand interacting with the digital timer and touch controls on the oven's control panel.



Image 3.4: A hand demonstrating the retractable control knobs, which can be pushed in for a flush surface.

4. SETUP AND INSTALLATION

The Bomann Built-in Electric Oven and Ceramic Hob Set is designed for integration into standard kitchen cabinetry. Professional installation is recommended.

4.1 Dimensions

Ensure your cabinet opening meets the required dimensions for proper fit and ventilation.

- **Oven Dimensions (H x W x D):** 59.0 cm x 56.0 cm x 55.0 cm
- **Hob Dimensions (W x D):** 56.0 cm x 49.0 cm



EINBAUMAßE (AUSSCHNITT)

Kochmulde: 56.0 x 49.0 cm (B x T)
Backofen: 59.0 x 56.0 x 55.0 cm (H x B x T)

Image 4.1: Diagram illustrating the precise installation dimensions for both the oven and the ceramic hob.

4.2 Oven Door Removal

For easier installation or cleaning, the oven door can be removed. Refer to the detailed instructions in the full manual for the correct procedure to detach and reattach the door safely.

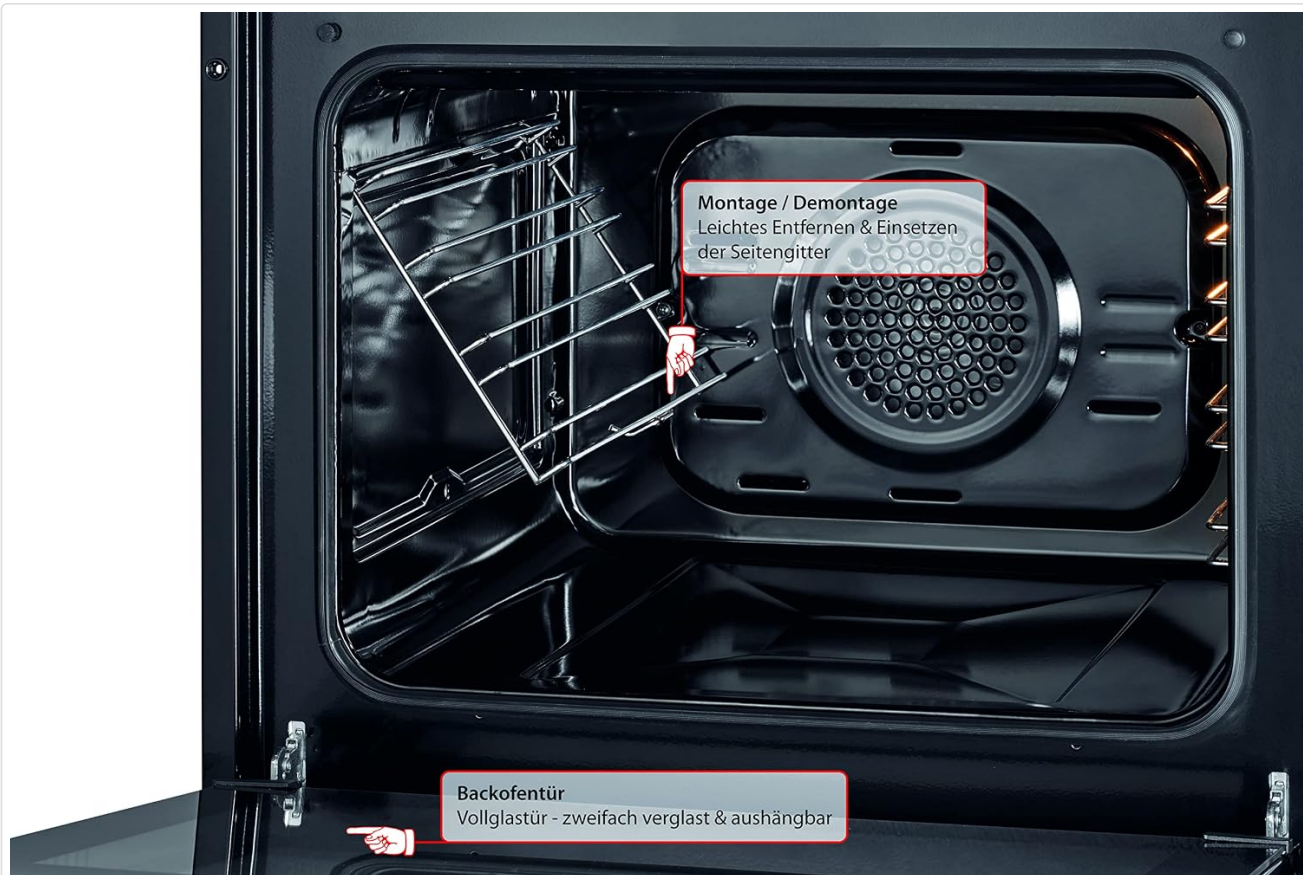


Image 4.2: The oven interior, highlighting the removable side racks and the double-glazed, full-glass oven door which can also be detached.

5. OPERATING INSTRUCTIONS

5.1 Oven Operation

The oven offers 8 functions and a temperature range of 40°C to 240°C.

1. **Select Function:** Use the left rotary knob to select the desired cooking function. Available functions include: Top/Bottom Heat, Convection, Hot Air, Defrosting, Steam Cleaning, Grill, Convection Grill, and 3D Hot Air.
2. **Set Temperature:** Use the right rotary knob to set the desired temperature between 40°C and 240°C.
3. **Preheating:** Allow the oven to preheat to the set temperature before placing food inside.
4. **Digital Timer:** Use the touch controls on the LED display to set cooking duration or a delayed start.



Image 5.1: The oven in operation, with food cooking inside, demonstrating the internal lighting and viewing window.

5.2 Ceramic Hob Operation

The ceramic hob features four cooking zones with individual energy controls.

1. **Activate Zone:** Turn the corresponding rotary knob for the desired cooking zone to activate it and select the heat level.
2. **Heat Levels:** Adjust the knob to select the required heat intensity.
3. **Residual Heat Indicator:** An indicator light will remain on after use until the zone has cooled down to a safe temperature.
4. **Child Lock:** Engage the child lock feature to prevent accidental activation of the hob. Refer to the full manual for specific instructions on activating and deactivating the child lock.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

- **Oven Cleaning:** The oven features a self-clean function and a steam cleaning mode. For manual cleaning,

ensure the oven is cool. The removable oven door and side racks facilitate easier access to the interior. Use non-abrasive oven cleaners.

- **Ceramic Hob Cleaning:** Clean the ceramic hob surface with a soft cloth and a specialized ceramic hob cleaner after each use, once it has cooled down. Avoid abrasive sponges or harsh chemicals.
- **Exterior Cleaning:** Wipe exterior surfaces with a soft, damp cloth and mild detergent.

7. TROUBLESHOOTING

If you encounter issues with your Bomann appliance, consult the following common troubleshooting tips. For persistent problems, contact customer support.

- **Appliance Not Turning On:** Check the power supply and ensure the appliance is properly plugged in. Verify that the circuit breaker has not tripped.
- **Oven Not Heating:** Ensure the function and temperature knobs are correctly set. Allow sufficient preheating time.
- **Hob Not Heating:** Check if the child lock is active. Ensure the correct cooking zone is selected and the heat level is set.
- **Error Codes:** If an error code appears on the digital display, refer to the comprehensive troubleshooting section in the full user manual for specific meanings and solutions.

8. SPECIFICATIONS

Detailed technical specifications for the Bomann Built-in Electric Oven and Ceramic Hob Set, Model 779340.

Feature	Specification
Brand Name	Bomann
Model Info	779340
Product Dimensions (Oven)	57 x 60 x 60 cm (H x W x D)
Item Weight	41 kg
Energy Efficiency Class	A
Oven Capacity	60 Liters
Energy Consumption (Conventional)	0.74 kWh/cycle
Energy Consumption (Hot Air)	0.70 kWh/cycle
Installation Type	Built-in
Oven Cooking Modes	Defrosting, Top/Bottom Heat, Recirculation, Hot Air, Steam Cleaning, Recirculation Grill, Grill, 3D Hot Air
Hob Burner Type	Halogen (Ceramic)
Heating Elements (Hob)	4 (2 single, 1 double-circle, 1 roasting zone)
Color	Black

Feature	Specification
Control Console	Touch and Rotary Knobs
Voltage	415 Volts
Wattage	8300 watts
Fuel Type	Electric
Material Type	Ceramic
Special Features	Self Clean, Digital Timer, Removable Oven Door

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical assistance, please refer to the warranty card included with your purchase or visit the official Bomann website. Keep your proof of purchase for any warranty claims.

Bomann Customer Service: Please refer to the contact details provided in your product packaging or on the official Bomann website for support in your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question