

[Manuals.plus](#) /

› [BUYDEEM](#) /

› BUYDEEM K821 Electric Gooseneck Kettle Instruction Manual

BUYDEEM K821

BUYDEEM K821 Electric Gooseneck Kettle Instruction Manual

Model: K821

INTRODUCTION

Thank you for choosing the BUYDEEM K821 Electric Gooseneck Kettle. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new kettle. Please read these instructions thoroughly before first use and retain them for future reference.



Image: The BUYDEEM K821 Electric Gooseneck Kettle in Cozy Greenish color, showcasing its sleek design.

IMPORTANT SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Always place the kettle on a stable, flat, heat-resistant surface.
- Do not operate the kettle if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.
- Keep the appliance out of reach of children.
- Do not fill above the maximum fill line or below the minimum fill line to prevent boiling dry or overflow.
- The kettle features a British STRIX thermostat and NTC temperature sensor for automatic shut-off when water boils or when the kettle is empty. Do not attempt to bypass these safety features.
- Always ensure the lid is securely closed during operation.
- Exercise caution when pouring hot water to avoid burns.

- Unplug the kettle from the outlet when not in use and before cleaning.

PRODUCT COMPONENTS

The BUYDEEM K821 Electric Gooseneck Kettle consists of the following main parts:

- **Kettle Body:** 0.8L capacity, 18/8 pro-grade stainless steel interior, matte finish exterior.
- **Gooseneck Spout:** Designed for precise pour-over control.
- **Lid:** PP plastic for soft opening.
- **Handle:** Cool-touch ABS plastic, ergonomic design.
- **Power Base:** Features British STRIX thermostat, digital display, control knob, and buttons.



Image: Exploded view illustrating the kettle's components, including the PP plastic lid, 18/8 pro-grade stainless steel interior, cool-touch ABS plastic handle, matte touch exterior, and the power base with British Strix Thermostat.

SETUP

1. **Unpack:** Carefully remove all packaging materials from the kettle and its components.
2. **Initial Cleaning:** Before first use, fill the kettle with water to the MAX line, boil it, and then discard the water. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, and stable surface. Ensure the power cord is not dangling or in contact with hot surfaces.
4. **Connect Power:** Plug the power cord into a standard 110V electrical outlet.

OPERATING INSTRUCTIONS

1. Filling the Kettle

Remove the kettle from its base and open the lid. Fill the kettle with fresh water, ensuring the water level is between the MIN (300ml) and MAX (800ml) internal markings. Do not overfill or underfill. Securely close the lid before placing the kettle back on the power base.



Image: Close-up of the kettle's interior showing the built-in scale lines for MIN (300ml) and MAX (800ml) water levels.

2. Setting Temperature and Starting

The control panel is located on the power base.



Customized Temp
(104-212°F)



Mute Mode



Keep Warm
90 Min



Timer for Brewing



British Strix
Thermostat

Image: Detailed view of the control panel on the kettle's base, showing the temperature display, control knob, and buttons for Mute, °F/°C, and Timer.

- **Power On:** Place the kettle on the base. The display will show the current water temperature.
- **Select Temperature:** Rotate the control knob to adjust the desired temperature between 104°F and 212°F (40°C and 100°C). The display will show the selected temperature.
- **Start Heating:** Press the control knob once to start the heating process. The display will show the water heating up to the set temperature.
- **Temperature Unit:** Press the "°F/°C" button to switch between Fahrenheit and Celsius.

3. Keep Warm Function

Once the target temperature is reached, the kettle will automatically enter the "Keep Warm" mode, maintaining the set temperature for up to 90 minutes. This function is ideal for extended brewing sessions or multiple servings.



Image: The BUYDEEM K821 kettle on a counter, highlighting the Mute Mode and Hold Temp Function for up to 90 minutes.

4. Mute Mode

To silence the kettle's beeping alerts, press the "Mute" button on the control panel. Press it again to re-enable the sound.

5. Brewing Timer

The built-in brewing timer can be used to track steeping or pour-over times. Press the "Timer" button to activate and start the timer. Refer to the display for the elapsed time.

6. Precise Pouring

The gooseneck spout is designed for controlled and steady pouring, essential for pour-over coffee and delicate teas. Pour slowly and steadily to achieve optimal saturation.

Precise Gooseneck

Spout for optimal pour-over flow rate




Image: The kettle demonstrating precise gooseneck pouring into a pour-over coffee dripper, highlighting the 90-degree angle for optimal flow rate.

Better Precision, Smoother Pouring

Complete control over pour speed at a low & sturdy flow

Gooseneck Design

Gives you complete control
when pouring water

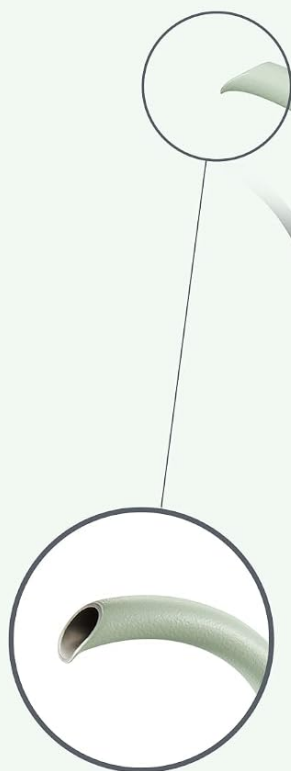

Special Spout Design

Prevent the water stream
from spreading



Image: A close-up view of the gooseneck spout, emphasizing its design for complete control over pour speed and preventing water stream spreading.



Image: The ergonomic handle of the kettle, designed for a comfortable and secure grip during pouring, with a safe handle tail for stability.

MAINTENANCE

1. Cleaning

- Always unplug the kettle and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior of the kettle and power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior:** The kettle features a wide opening for easy cleaning. Hand wash the interior with warm, soapy water and a soft sponge or brush. Rinse thoroughly.
- Do not immerse the power base or the exterior of the kettle in water.

Your Perfect Brewing Partner

Use BUYDEEM pour over coffee dripper to enjoy a more flavorful morning coffee.



Image: The kettle shown with its lid removed, illustrating the wide opening designed for easy access and cleaning of the interior.

2. Descaling

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. This can affect performance and taste. Descale your kettle regularly (e.g., monthly or bi-monthly depending on water hardness).

1. Fill the kettle with a solution of equal parts white vinegar and water, or use a commercial descaling agent according to its instructions.
2. Bring the solution to a boil and let it stand for at least 30 minutes, or longer for heavy buildup.
3. Pour out the solution and rinse the interior thoroughly several times with fresh water.
4. Boil fresh water in the kettle 2-3 times and discard to remove any residual vinegar taste or descaling agent.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; kettle not properly seated on base; no water; power outage.	Ensure plug is firmly in outlet. Place kettle correctly on base. Fill with water above MIN line. Check power supply.
Water does not reach desired temperature.	Incorrect temperature setting; limescale buildup.	Verify temperature setting on display. Descale the kettle as per maintenance instructions.
Kettle switches off prematurely.	Kettle boiled dry (safety feature); lid not closed properly.	Ensure water level is above MIN line. Allow kettle to cool before refilling. Ensure lid is securely closed.

Problem	Possible Cause	Solution
Unusual taste in water.	First use residues; limescale buildup; improper cleaning.	Perform initial cleaning steps again. Descale the kettle. Ensure thorough rinsing after cleaning.
Flaking or discoloration inside kettle.	Mineral deposits (limescale) or natural discoloration of stainless steel.	This is typically limescale. Descale the kettle. If discoloration persists after descaling and cleaning, and you suspect a material defect, contact customer support.

SPECIFICATIONS

Model: K821

Brand: BUYDEEM

Capacity: 0.8 Liters (0.8 Quarts)

Material: 18/8 Pro-Grade Stainless Steel (interior), ABS Plastic (handle), PP Plastic (lid)

Color: Cozy Greenish (variant shown)

Voltage: 110 Volts

Wattage: 1000 Watts

Temperature Range: 104-212°F (40-100°C)

Keep Warm Function: Up to 90 minutes

Dimensions (L x W x H): 9.48" x 11.3" x 6.1"

Item Weight: 4.3 Pounds

Special Features: Programmable Temperature Control, Gooseneck Spout, Auto Shut-off (STRIX thermostat, NTC sensor), Mute Mode, Built-in Brewing Timer.

Care Instructions: Hand Wash

UPC: 810059970564

WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or any questions regarding your BUYDEEM K821 Electric Gooseneck Kettle, please contact BUYDEEM customer service. Refer to the product packaging or the official BUYDEEM website for current contact details.

Website: [Visit the BUYDEEM Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question