

- Manuals.plus /
- › [ASHATA](#) /
 - › ASHATA Voice Recorder Watch User Manual

ASHATA ASHATA7svt2uqmkp15173

ASHATA Voice Recorder Watch

USER MANUAL

1. Introduction

The ASHATA Voice Recorder Watch is a versatile and discreet digital audio recording device designed for convenience and high-quality sound capture. With its integrated 16GB storage and long battery life, it is ideal for recording lectures, meetings, interviews, and personal notes. This manual provides detailed instructions on how to set up, operate, and maintain your device.

Recorder Watch

Wristband recorder, fashionable and convenient, with display (not always bright, need to click the button to light up the screen), can display the time and working status.



Figure 1.1: The ASHATA Voice Recorder Watch, a fashionable and practical wristband recorder with a display for time and operational status.

2. Setup

2.1 Package Contents

- ASHATA Voice Recorder Watch
- USB Charging/Data Cable
- Wired Earphones
- OTG Adapter (for Android phones)
- User Manual (this document)



Figure 2.1: The ASHATA Voice Recorder Watch and its accessories, including the USB cable, earphones, and OTG adapter.

2.2 Initial Charging

Before first use, fully charge the device. Connect the USB charging/data cable to the watch's USB port and the other end to a computer's USB port or a standard USB wall adapter (not included). The display will indicate charging status. A full charge takes approximately 2-3 hours and provides up to 13 hours of recording time.



Figure 2.2: Side view of the watch, highlighting the USB port for charging and data transfer.

2.3 Powering On/Off

To power on the device, long press the power button (usually labeled 'REC/FF' or similar, refer to button layout in Operating section). To power off, long press the same button until the display turns off.

3. Operating Instructions

3.1 Button Functions

The watch features several buttons for easy operation:

- **REC/FF Button:** Long press to power on/off. Short press to start/stop recording. Also used for fast forward during playback.
- **PLAY Button:** Short press to play/pause recordings.
- **TIME/D Button:** Short press to display time or navigate menus. Also used for rewind during playback.



Figure 3.1: Close-up of the watch's side, showing the REC/FF, PLAY, and TIME/D buttons.

3.2 Recording Audio

To start recording, ensure the device is powered on. Long press the REC/FF button. The display will show a recording indicator. To stop recording, short press the REC/FF button again. Recordings are automatically saved to the internal 16GB storage.



Figure 3.2: The watch is designed for easy operation, allowing quick initiation of recording with a simple button press.

3.3 Noise Cancellation

The ASHATA Voice Recorder Watch utilizes intelligent noise reduction technology and a professional chip to produce high-quality recordings with a stereo sound experience. This feature automatically filters out ambient noise, ensuring clear and crisp audio capture.

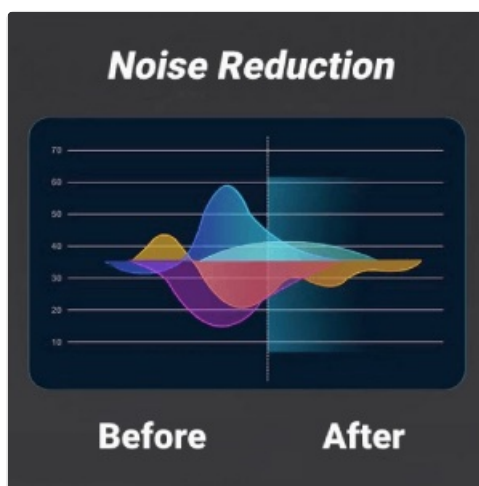


Figure 3.3: Visual representation of the noise reduction technology, showing improved audio clarity.

3.4 Playback Options

You can listen to your recordings using several methods:

- **Wired Earphones:** Connect the included earphones to the watch's audio jack for direct playback.
- **Android Phone (OTG):** Use the provided OTG cable to connect the watch to a compatible Android phone and play recordings directly from your phone's file manager.
- **Computer:** Connect the watch to a computer using the USB data cable. The watch will appear as a removable disk, allowing you to transfer and play audio files.



Figure 3.4: The watch offers flexible playback options, including direct connection to a smartphone.

3.5 Display Functionality

The watch features a display that shows the current time and operational status. The display is not always on; you need to click a button (e.g., TIME/D) to activate the screen and view information.

4. Maintenance

4.1 Cleaning

Wipe the watch body and strap with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid submerging the device in water.

4.2 Storage

Store the device in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

4.3 Resetting the Device

If the device becomes unresponsive, you may need to perform a reset. Locate the small 'RESET' pinhole (often near the USB port) and gently insert a paperclip or similar thin object to press the reset button inside. This will restart the device without erasing data.



Figure 4.1: The watch's side, indicating the location of the USB port and the small reset pinhole.

5. Troubleshooting

If you encounter issues with your ASHATA Voice Recorder Watch, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not power on.	Low battery; device frozen.	Charge the device for at least 30 minutes. If still unresponsive, perform a reset (see Section 4.3).

Problem	Possible Cause	Solution
Poor recording audio quality.	Microphone obstructed; excessive background noise; device too far from source.	Ensure microphone is clear. Record in a quieter environment. Place the watch closer to the audio source.
Cannot play recordings.	Incorrect playback method; file corruption.	Ensure earphones are properly connected or OTG/USB connection is stable. Try playing on a computer to check file integrity.
Display shows unreadable characters (e.g., Chinese).	Incorrect language setting.	Access the device's settings menu. Navigate through the options (even if unreadable) to find the language setting. Typically, language settings are represented by a globe icon or a list of languages. Select English. If unable to navigate, a factory reset might be necessary (consult support).
Device not recognized by computer.	Faulty USB cable; driver issue; incorrect connection.	Try a different USB port or cable. Ensure the watch is powered on when connected. Restart your computer.

6. Specifications

Brand	ASHATA
Model Number	ASHATA7svt2uqmkp15173
Storage Capacity	16 GB
Battery Life (Recording)	Up to 13 hours
Compatible Devices	Personal Computer, Android Phones (via OTG)
Audio Format	MP3 audio, WAV
Microphone Mode	Noise Cancellation
Interface	USB, 3.5mm Audio Jack (for earphones)

7. Warranty and Support

For any questions or issues regarding your ASHATA Voice Recorder Watch, please contact the seller or manufacturer directly. ASHATA is committed to providing high-quality products and customer satisfaction. If you have any questions before or after the sale, you can reach out via email for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B7L3PF3B>

More documents and user manuals: <https://manuals.plus/>