

[manuals.plus](#) /

› [WORKPRO](#) /

› [WORKPRO Pink Cordless Drill Driver Set User Manual](#)

WORKPRO W122061

WORKPRO Pink Cordless Drill Driver Set User Manual

Model: W122061 | Brand: WORKPRO

1. INTRODUCTION

Thank you for choosing the WORKPRO Pink Cordless Drill Driver Set. This 12V electric power drill is designed for household tasks, offering versatility and ease of use for various DIY projects. Its lightweight design and adjustable settings make it suitable for tasks such as hanging pictures, assembling furniture, and tightening screws.



Image: The WORKPRO Pink Cordless Drill Driver Set, showcasing the drill, various drill bits, and the Type-C charging cable.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electric tools to reduce the risk of fire, electric shock, and personal injury.

- Wear appropriate personal protective equipment, including eye protection (safety glasses or goggles) and hearing protection.
- Keep your work area clean and well-lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- Avoid accidental starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the tool.
- Use the correct tool for your application. Do not force the tool.
- Maintain tools with care. Keep cutting tools sharp and clean.

- Disconnect the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.

3. COMPONENTS AND PACKAGE CONTENTS

Your WORKPRO Pink Cordless Drill Driver Set includes the following items:

- 1 x WORKPRO 12V Cordless Drill Driver
- 6 x Drill Bits (various sizes)
- 1 x Type-C Charge Cable



Image: A detailed diagram of the WORKPRO Pink Cordless Drill, highlighting its key components such as the keyless chuck, torque adjustment collar, variable speed switch, LED light, and Type-C charging port. The included drill bits and screwdriver bits are also shown.

4. SETUP

4.1 Attaching Drill Bits / Screwdriver Bits

The drill features a 3/8-inch keyless chuck for quick and easy bit changes. To attach a bit:

1. Ensure the drill is off and the forward/reverse switch is in the neutral (locked) position.
2. Twist the chuck counter-clockwise to open the jaws.
3. Insert the desired drill bit or screwdriver bit into the chuck, ensuring it is seated firmly.
4. Twist the chuck clockwise to tighten the jaws securely around the bit. The automatic spindle lock assists in one-handed tightening.

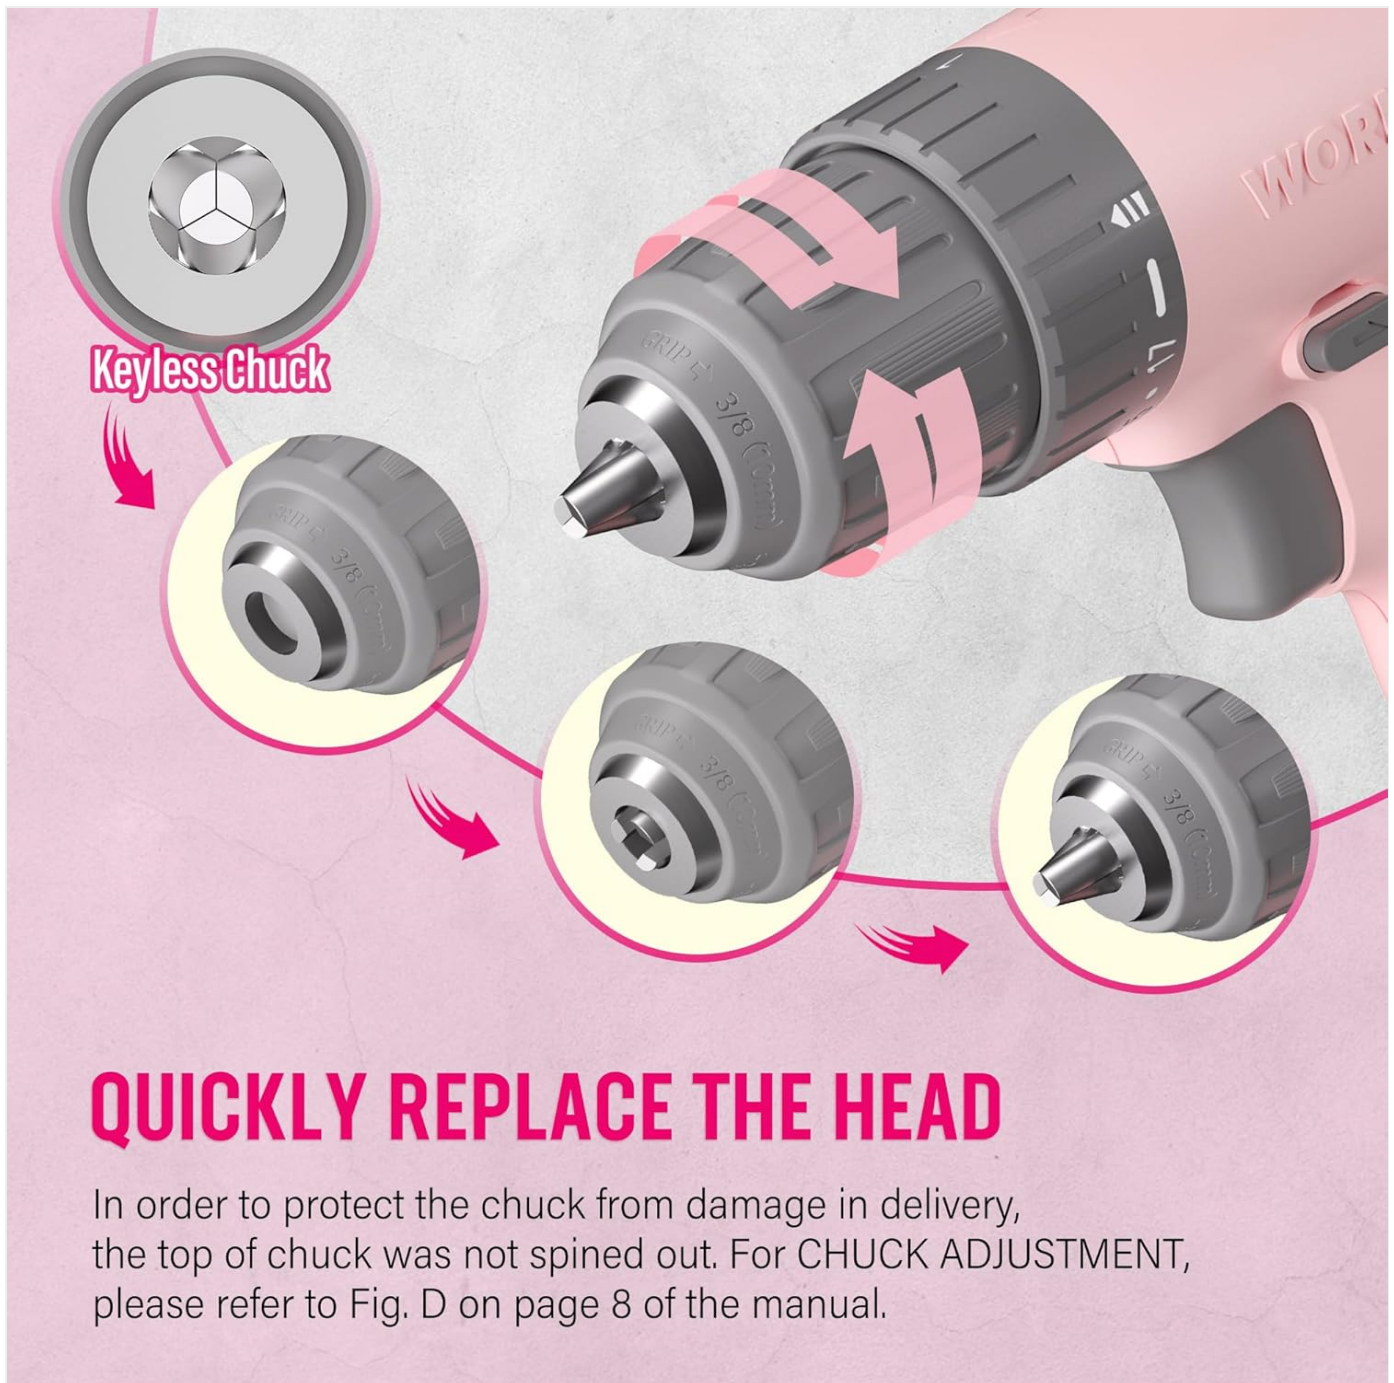


Image: A close-up illustration demonstrating the operation of the keyless chuck, showing how to open and close it to quickly replace drill or screwdriver bits.

4.2 Charging the Battery

The drill is equipped with an integrated 12V Lithium-Ion battery and charges via a Type-C USB cable. Use a 5V/1A charger for

optimal charging.

- Connect the Type-C end of the charging cable to the drill's charging port.
- Connect the USB-A end of the cable to any compatible USB power source (e.g., computer, power bank, USB wall adapter, car charger).
- Monitor the battery capacity indicator lights on the drill to check the charging status.
- A blinking light indicates the battery needs recharging. Multiple solid lights indicate charge level.



Image: The WORKPRO Pink Cordless Drill connected to a laptop via its Type-C charging cable, illustrating its USB rechargeable feature.

5. OPERATING INSTRUCTIONS

5.1 Variable Speed Control

The drill features a variable speed trigger, allowing you to control the rotational speed from 0 to 750 RPM based on the pressure applied.

- **Light Pressure:** For slower speeds, ideal for starting holes or driving screws precisely.

- **Heavy Pressure:** For faster speeds, suitable for drilling into materials.
- Releasing the trigger will automatically stop the drill.



Image: A hand holding the WORKPRO Pink Cordless Drill, illustrating how the variable speed switch operates based on trigger pressure (0-750 RPM).

5.2 Torque Settings (17+1)

The 17+1 torque adjustable design allows you to select the appropriate torque for different tasks and materials, preventing over-driving screws or damaging surfaces. The maximum torque can reach 19 Newton Meters (168 IN-LBS).

1. Rotate the torque adjustment collar located behind the chuck to select the desired setting.
2. Lower settings are for driving small screws or working with soft materials.
3. Higher settings are for driving larger screws or drilling into harder materials like wood, PVC, or metal.
4. The "+1" setting is for drill mode, providing maximum torque for drilling applications.



Image: A close-up view of the WORKPRO Pink Cordless Drill's 17+1 torque settings, indicating suitable materials like brick, wood, PVC, and metal for different torque levels.

5.3 Forward/Reverse Switch

The forward/reverse switch allows you to change the direction of rotation for driving or removing screws and bits.

- Push the switch to the left for forward rotation (driving screws/drilling).
- Push the switch to the right for reverse rotation (removing screws/bits).
- Center the switch to lock the trigger and prevent accidental operation.

5.4 LED Work Light

The integrated LED light activates when the trigger is pressed, illuminating the work area for improved visibility in dark or confined spaces.



LED WORK LIGHT

Makes work in dark environments easier

Image: The WORKPRO Pink Cordless Drill in use, with its LED work light brightly illuminating the area, making it easier to work in dark environments.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your drill.

- **Cleaning:** Regularly wipe down the drill with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Keep ventilation openings clear of dust and debris.
- **Storage:** Store the drill in a dry place, away from direct sunlight and extreme temperatures. Ensure the battery is partially charged before long-term storage.
- **Battery Care:** Avoid fully discharging the battery frequently. Recharge the battery before it is completely depleted to prolong its lifespan.
- **Chuck Maintenance:** Periodically clean the chuck jaws to ensure proper gripping of bits.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drill does not turn on.	Battery is depleted. Forward/reverse switch is in the locked (center) position.	Charge the battery using the provided Type-C cable. Move the forward/reverse switch to the forward or reverse position.
Reduced power or speed.	Low battery charge. Incorrect torque setting for the task.	Recharge the battery. Adjust the torque collar to a higher setting or switch to drill mode.
Bit slips in chuck.	Chuck not tightened sufficiently. Bit shank is dirty or damaged.	Retighten the chuck firmly. Clean or replace the bit.

8. SPECIFICATIONS

Feature	Detail
Brand	WORKPRO
Model Number	W122061
Power Source	Battery Powered
Voltage	12 Volts
Maximum Rotational Speed	750 RPM
Maximum Torque	19 Newton Meters (168 IN-LBS)
Torque Settings	17 + 1 (Drill Mode)
Chuck Size	3/8 Inches (Keyless)
Battery Type	Lithium Ion (Included)
Charging Port	Type-C USB (5V-9V input)
Special Features	Variable Speed, LED Work Light
Material	ABS Plastic + TPE
Item Weight	1.37 Kilograms (approx. 3.01 lbs)
Product Dimensions	9.37 x 2.87 x 9.92 inches

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official WORKPRO website. Keep your purchase receipt as proof of purchase.

WORKPRO Tools is committed to quality and customer satisfaction. Additionally, a portion of this product's purchase supports the NATIONAL BREAST CANCER FOUNDATION, INC., aiding in early detection, education, and support services.



