

[Manuals.plus](#) /

› [KANBIT](#) /

› KANBIT KB-2207 Digital Travel Alarm Clock User Manual

KANBIT KB-2207

KANBIT KB-2207 Digital Travel Alarm Clock User Manual

Model: KB-2207

PRODUCT OVERVIEW

The KANBIT KB-2207 is a compact, battery-operated digital alarm clock designed for travel and desk use. It features a large LCD display showing time, date, day of the week, and temperature. Its portable design includes a flexible cover that protects the screen and doubles as a stand.



Image: Front view of the KANBIT KB-2207 Digital Travel Alarm Clock, displaying the time, day, date, and temperature clearly on its large LCD screen.

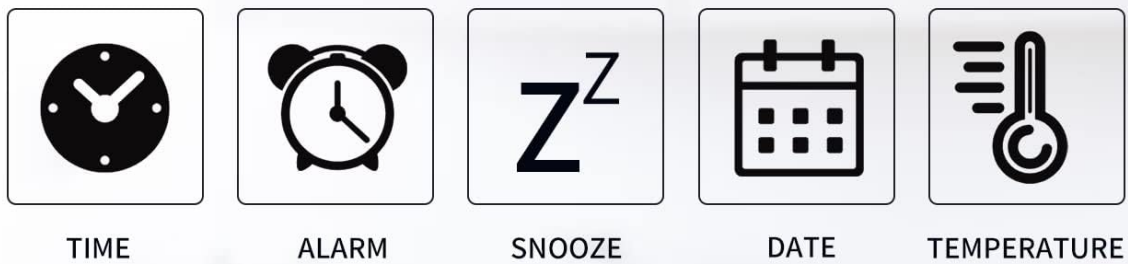 


Image: Visual representation of the clock's key functions: Time, Alarm, Snooze, Date, and Temperature display.

 
SETUP

1. Battery Installation

The clock requires one CR2025 button battery, which is included, along with an extra battery for replacement. To install or replace the battery:

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert the CR2025 battery with the positive (+) side facing up.
4. Close the battery compartment cover securely.

Product Information

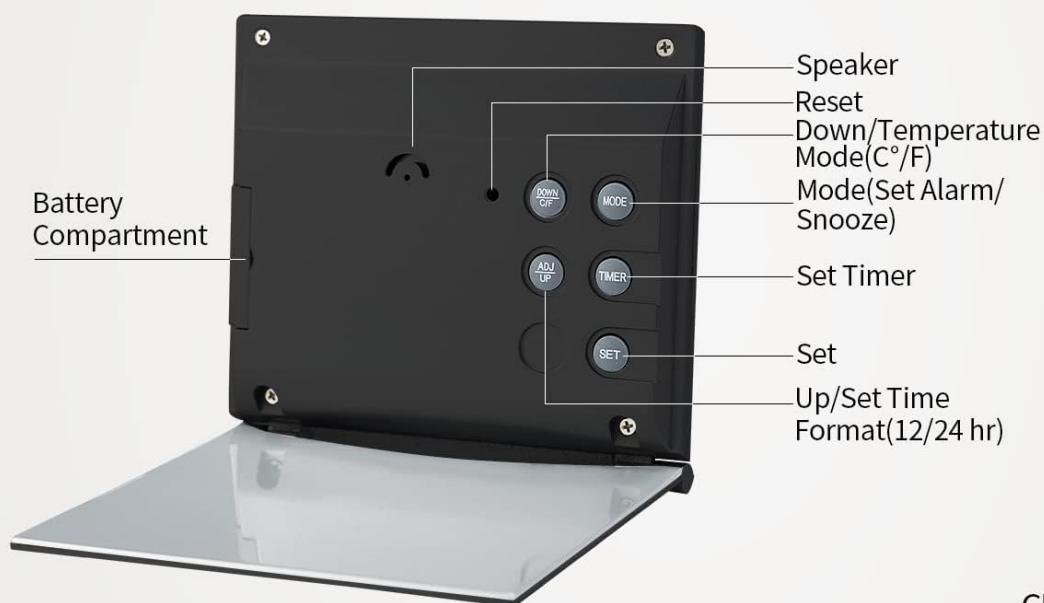

Replacement Battery



CR2025 Battery Included



Size: 3.4 inch x 3.1 inch x 0.47 inch

Thickness: 0.47 inch

Weight: 71g

Battery: 2 button batteries

Image: Rear view of the clock, highlighting the battery compartment and the five control buttons.

2. Initial Time and Date Setting

After battery installation, the clock will power on. Follow these steps to set the correct time and date:

1. Press the **MODE** button to cycle through Time, Alarm, and Timer modes. Stop when the time display is active.
2. Press and hold the **SET** button until the hour digit flashes.
3. Use the **UP** or **DOWN** buttons to adjust the hour. Pay attention to AM/PM indicators if in 12-hour format.
4. Press **SET** again to move to minutes, then use **UP** or **DOWN** to adjust.
5. Continue pressing **SET** to cycle through Year, Month, and Date settings, adjusting each with **UP** or **DOWN**. Ensure the correct year is set for accurate day of the week display.
6. Press **SET** one last time to exit setting mode.

OPERATING INSTRUCTIONS

1. Display Modes

The clock displays time, date, day of the week, and temperature. You can switch between 12-hour and 24-hour time formats by pressing the **UP/SET** button while in time display mode (not setting mode).

2. Setting the Alarm

1. Press the **MODE** button until the alarm time is displayed (usually indicated by an alarm icon).
2. Press and hold the **SET** button until the alarm hour flashes.
3. Use the **UP** or **DOWN** buttons to set the desired alarm hour.
4. Press **SET** again to move to alarm minutes, then adjust with **UP** or **DOWN**.
5. Press **SET** to confirm.
6. To activate/deactivate the alarm, press the **UP** button while in alarm display mode. An alarm icon will appear/disappear on the screen.



Alarm Clock

Snooze Mode & Wake up Music

★ Pick one of 8 musics you like to wake you up easily!

Image: The clock positioned on a bedside table, illustrating its use as an alarm clock.

3. Alarm Sound Selection

The clock offers 8 different alarm melodies. While in alarm setting mode (after setting the alarm time), press the **DOWN** button to cycle through the available alarm sounds.

4. Snooze Function

When the alarm sounds, press the **MODE** button (often labeled 'SNZ' or 'Snooze') to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes.

5. Timer Function

The clock includes a countdown timer:

1. Press the **MODE** button until 'TIMER' or a timer icon is displayed.
2. Press and hold the **SET TIMER** button until the timer digits flash.
3. Use the **UP** or **DOWN** buttons to set the desired countdown time (hours, minutes, seconds).
4. Press **SET TIMER** to start the countdown.
5. To pause/resume, press **SET TIMER**. To reset, press the **RESET** button.

Timer Mode Count Down



Study



Kitchen

Image: The clock demonstrating its timer function for both study and kitchen use.

6. Temperature Display

The clock displays temperature in either Celsius or Fahrenheit. To switch between units, press the **DOWN/TEMP** button while in time display mode.

MAINTENANCE

1. Battery Replacement

When the display dims or functions become erratic, it's time to replace the battery. Refer to the 'Battery Installation' section under Setup for instructions. Always use a CR2025 battery.

2. Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, which can damage the display or casing.

3. Flexible Cover Care

The flexible cover protects the screen from scratches. Ensure it is properly closed when transporting the clock. When used as a stand, position it firmly on a flat surface.



Image: Illustration of the clock's flexible cover, demonstrating how it folds to act as a stable display stand.

TROUBLESHOOTING

- **Clock not working or display is blank:** Check battery installation. Ensure the CR2025 battery is correctly inserted with the positive side up. Replace with a new battery if necessary.
- **Incorrect time or date:** Re-enter the time and date settings as described in the 'Initial Time and Date Setting'

section. Ensure the correct year is set.

- **Alarm is too quiet or not sounding:** The alarm is designed to be gentle. Ensure the alarm is activated (alarm icon visible). If the sound is still insufficient, consider the clock's intended use as a gentle wake-up device.
- **Temperature reading is inaccurate or frozen:** The clock is designed for indoor use and may not function optimally in extreme temperatures, particularly freezing conditions. If exposed to freezing temperatures, remove and reinsert the battery to reset.

SPECIFICATIONS

Brand	KANBIT
Model Number	KB-2207
Display Type	Digital LCD
Dimensions	3.1" W x 3.4" H (0.47" Thickness)
Weight	2.12 ounces
Power Source	1 x CR2025 Battery (included, plus 1 extra)
Material	Plastic
Special Features	Alarm, Silent Clock, Temperature Display, Date, Day of Week, 12/24H Format, Timer

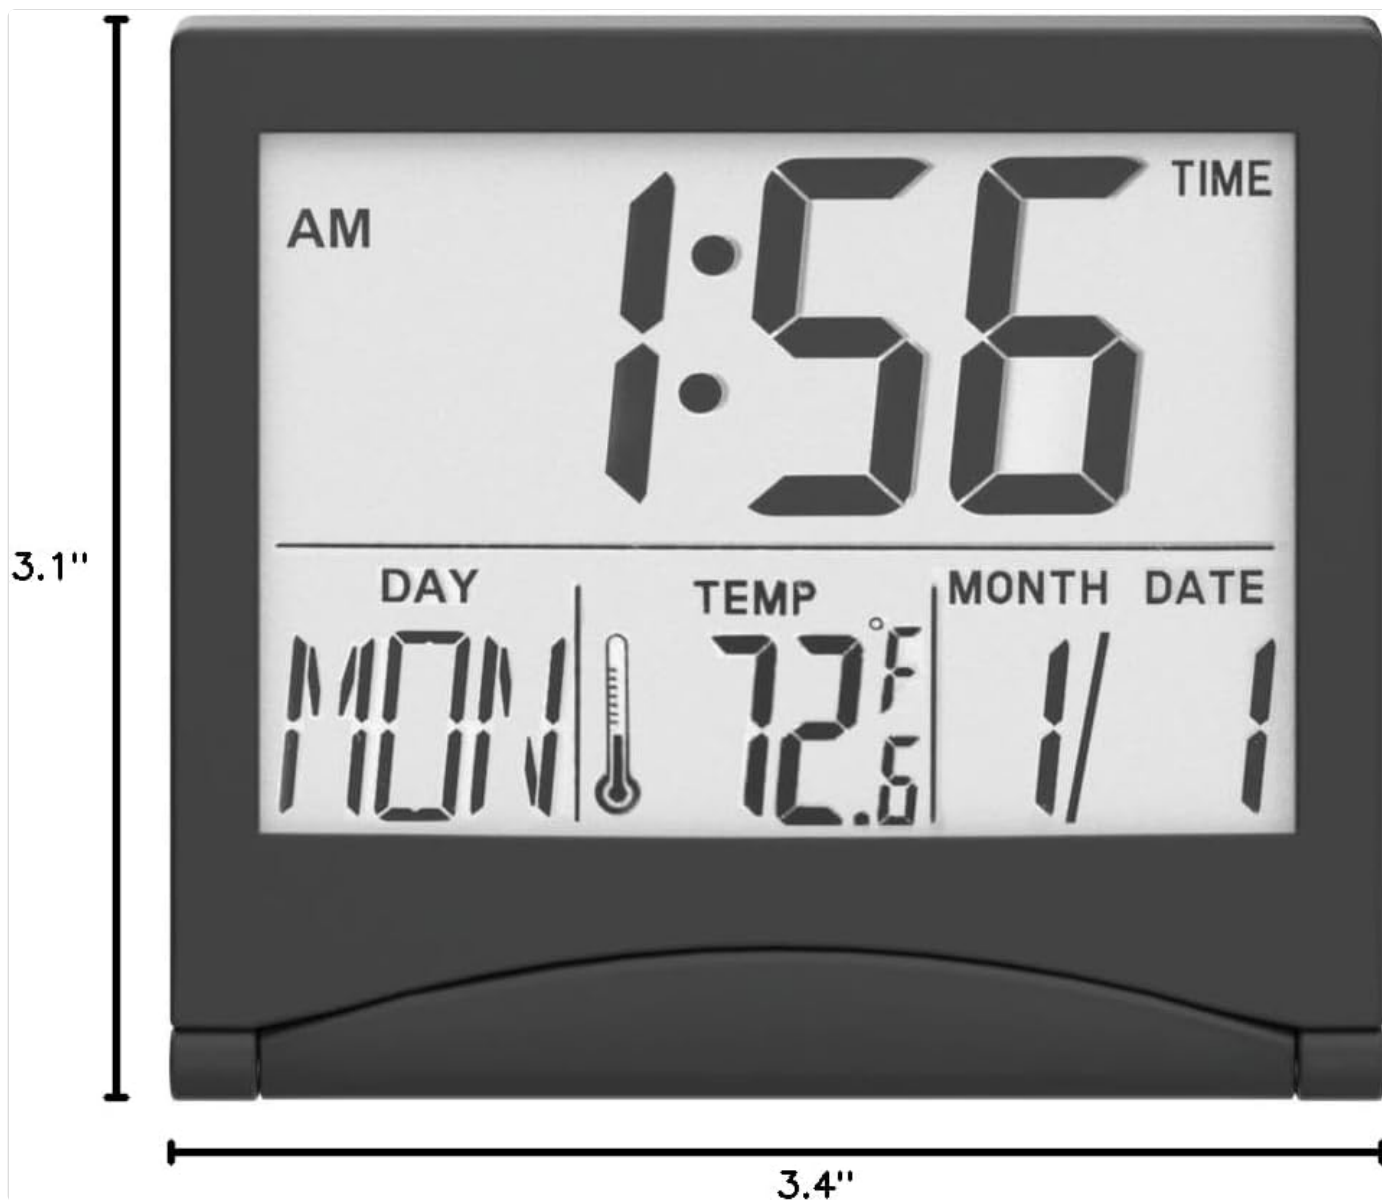 


Image: Dimensional diagram of the clock, indicating its width and height for reference.

Compact and Portable Little Clock



Ultra Thin Design

★ Small, you can take it with you anywhere!



3.4inch



5.2inch

0.47inch



Image: The clock's compact size is demonstrated by showing it held in a hand and fitting into a small bag, emphasizing its portability.

WARRANTY AND SUPPORT

Warranty Information

This KANBIT product comes with a one-year limited warranty from the date of purchase. This warranty covers manufacturing defects under normal use.

Customer Support

For any questions, concerns, or warranty claims, please contact KANBIT customer support through the Amazon buyer center. We aim to respond promptly to assist you.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question