

Manuals.plus /

› CUCKOO /

› CUCKOO CRP-ST1009FG Twin Pressure Rice Cooker User Manual

CUCKOO CRP-ST1009FG

CUCKOO CRP-ST1009FG Twin Pressure Rice Cooker User Manual

Model: CRP-ST1009FG

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your CUCKOO Twin Pressure Rice Cooker. Keep this manual for future reference.

- Always ensure the unit is unplugged before cleaning or when not in use.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep out of reach of children. Close supervision is necessary when the appliance is used near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only manufacturer-recommended attachments.
- Do not use outdoors.
- Always ensure the pressure release valve is clear before and after use.

2. PRODUCT OVERVIEW

The CUCKOO CRP-ST1009FG is a versatile twin pressure rice cooker designed to deliver perfectly cooked rice and a variety of other dishes. It features both high-pressure and non-pressure cooking modes, a nonstick inner pot, and a voice guide for ease of use.

Included Components:

- CUCKOO Twin Pressure Rice Cooker (CRP-ST1009FG)
- Nonstick Inner Pot
- Rice Spatula
- Rice Measuring Cup

- User Manual



Image: The CUCKOO Twin Pressure Rice Cooker CRP-ST1009FG in gray, showcasing its sleek design and control panel.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Wash the inner pot, detachable inner lid, rice spatula, and measuring cup with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Assemble:** Place the clean inner pot into the main unit. Ensure the detachable inner lid is properly installed in the main lid.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet (120V AC). The display will illuminate.

4. OPERATING INSTRUCTIONS

4.1 Basic Rice Cooking (White Rice)

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. One cup of uncooked rice yields approximately two cups of cooked rice. The CRP-ST1009FG has a 10-cup uncooked capacity (20-cup cooked).
2. **Wash Rice:** Rinse the rice thoroughly under cold water until the water runs clear.
3. **Add Water:** Place the washed rice into the inner pot. Add water up to the corresponding line marked inside the inner pot for 'WHITE RICE'. For example, for 4 cups of white rice, fill water to the '4' line under 'WHITE RICE'.
4. **Select Pressure Mode:** Rotate the pressure dial on the top of the cooker to either 'HIGH PRESSURE' for sticky, flavorful rice or 'NON PRESSURE' for light, fluffy, separate grains.
5. **Close Lid:** Close the lid securely until it locks.
6. **Select Menu:** Use the 'MENU/SELECT' buttons to navigate to 'WHITE RICE' on the display.
7. **Start Cooking:** Press the 'START' button. The cooker will begin the cooking process, and the voice guide will confirm the selection.

Twin Pressure Perfection

Your Perfect Texture in One Cooker



Twin Pressure



Smart Algorithm



Open Cooking



Voice Navigation



10 Cups = 20 Cups

Uncooked

Cooked



Image: Close-up of the CUCKOO Twin Pressure Rice Cooker's control panel and pressure dial, showing options for High Pressure and Non-Pressure cooking.

4.2 Advanced Cooking Modes

- **16 Versatile Modes:** The cooker offers 16 menu options including GABA rice, mixed rice, veggie rice, baby food, high-pressure steam, and more. Select your desired mode using the 'MENU/SELECT' buttons.
- **Turbo Mode:** For faster cooking of white rice, select the 'SPR. TURBO' option under high pressure. This mode can cook white rice in approximately 15 minutes.
- **Open Cooking Mode:** This mode allows you to add ingredients or adjust seasoning during the cooking process for non-pressure dishes. Select 'NON P. COOK OPEN COOKING' from the menu.

- **Voice Guide:** The cooker provides voice prompts for various operations, including mode selection, cooking start, and completion. The voice guide supports multiple languages.

Your browser does not support the video tag.

Video: Official Cuckoo video demonstrating the Twin Pressure Rice Cooker ST Model, highlighting its features and cooking capabilities.

5. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your rice cooker.

5.1 Cleaning the Inner Pot

- The nonstick inner pot should be hand washed with warm, soapy water and a soft sponge.
- Avoid using abrasive cleaners or metal scouring pads, as these can damage the nonstick coating.
- Ensure the pot is completely dry before placing it back into the main unit.

5.2 Cleaning the Detachable Inner Lid

- The inner lid is detachable for easy cleaning. Gently pull it down and out from the main lid.
- Wash with warm, soapy water and a soft sponge. Rinse thoroughly and dry.
- Reattach by aligning it correctly and pushing it back into place until it clicks.

5.3 Cleaning the Drain Dish

- The drain dish collects excess water and condensation. Remove it from the back of the cooker.
- Empty any collected water and wash the dish with warm, soapy water. Rinse and dry.
- Reinsert the drain dish firmly into its slot.

5.4 Steam Sterilization (Auto Clean)

- The cooker features a self-cleaning function using steam to sanitize the interior.
- Refer to the display for the 'AUTO CLEAN' option and follow the on-screen instructions to initiate the cycle.



Detachable Cover
Simply Remove for Easy Cleaning



Drain Dish
For Fresh and Flavorful Rice



Steam Sterilization
Self-Cleaning at Its Best

Image: A visual representation of the detachable inner lid and the drain dish, highlighting their easy removal for cleaning.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Rice is too hard/dry	Insufficient water, incorrect rice type selection, old rice.	Add more water next time, select appropriate cooking mode, use fresh rice.
Rice is too soft/sticky	Too much water, incorrect rice type selection.	Reduce water next time, ensure correct mode is selected.
Lid does not close properly	Inner pot not seated correctly, foreign object obstructing lid.	Ensure inner pot is fully inserted. Check for obstructions and remove them.
Steam leaks during cooking	Lid seal dirty or damaged, pressure valve blocked.	Clean the lid seal and pressure valve. If damaged, contact customer support.
Cooker lifts when opening lid	This is a characteristic of the spring-loaded lid design.	Hold the base of the cooker when opening the lid to prevent it from lifting.

For further assistance, please refer to the full troubleshooting guide in the comprehensive user manual or contact CUCKOO customer support.

7. SPECIFICATIONS

- **Model Name:** CRP-ST1009FG
- **Brand:** CUCKOO
- **Capacity:** 10 Cups Uncooked / 20 Cups Cooked
- **Product Dimensions:** 15.3"D x 11.1"W x 11.4"H
- **Item Weight:** 7.2 Kilograms
- **Color:** Gray
- **Material:** Stainless Steel (Lid Material: Stainless Steel)
- **Power Source:** Corded Electric
- **Voltage:** 120 Volts (AC)
- **Wattage:** 1150 watts
- **Special Features:** Advanced Fuzzy Logic, Non-Stick Inner Pot, Steam Vent, Dual Pressure Selection, Voice Guide, Open Cooking Mode.
- **Product Care Instructions:** Hand Wash (Inner Pot)

Double Duty, HP Twin Pressure



HIGH
Pressure
Mode



NON
Pressure
Mode



29 PSI Max Pressure



Sticky Texture Flavor



High-Temp Steam



Multi-Grain | GABA | Deep-Steamed Dish



NON Pressure Cook



Fluffy Texture Flavor



Moist Chewy Cook



Sushi Rice | Porridge | Noodle | Pasta

CUCKOO

Image: The CUCKOO Twin Pressure Rice Cooker CRP-ST1009FG, illustrating its dimensions and listing the included accessories.

8. WARRANTY & SUPPORT

8.1 Warranty Information

This CUCKOO Twin Pressure Rice Cooker (CRP-ST1009FG) comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

8.2 Customer Support

For product support, troubleshooting assistance, or warranty inquiries, please visit the official CUCKOO website or contact their customer service department. Contact details can typically be found on the manufacturer's website or in the warranty card included with your product.

