

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bud Light](#) /

› [Bud Light Bluetooth Speaker Bazooka Speaker Portable Wireless Instruction Manual BL-BZSS-004](#)

Bud Light BL-BZSS-004

Bud Light Bluetooth Speaker Bazooka Speaker Instruction Manual

Model: BL-BZSS-004

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Bud Light Bluetooth Bazooka Speaker. Please read this manual thoroughly before using the device and retain it for future reference.



Image: Front view of the Bud Light Bluetooth Bazooka Speaker, showcasing its cylindrical design and blue Bud Light branding.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Bud Light Bluetooth Bazooka Speaker
- Charging Cable (Micro USB)

- User Manual (this document)

PRODUCT OVERVIEW

The Bud Light Bluetooth Bazooka Speaker is a portable wireless speaker designed for audio playback from various sources. It features Bluetooth 5.0 connectivity, FM radio, AUX input, and USB playback.

Controls and Ports



Image: Detailed diagram illustrating the speaker's control panel and ports. Labels indicate Track Selection, Play/Pause, Micro USB Port, ON/OFF Power Switch, USB Port, and AUX Input.

1. **Track Selection:** Buttons for navigating tracks (previous/next) and adjusting volume.
2. **Play/Pause:** Button to start or pause audio playback.
3. **Micro USB Port:** For charging the speaker.
4. **ON/OFF Power Switch:** To power the speaker on or off.
5. **USB Port:** For playing audio from a USB flash drive.
6. **AUX Input:** For connecting external audio devices via a 3.5mm audio cable.

SETUP

Charging the Speaker

Before initial use, fully charge the speaker. Connect the provided Micro USB cable to the speaker's Micro USB port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will illuminate during charging and turn off when fully charged.

Powering On/Off

Slide the **ON/OFF Power Switch** to the 'ON' position to power on the speaker. Slide it to the 'OFF' position to power off.

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing LED).
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.

3. Search for available Bluetooth devices. The speaker will appear as "Bud Light Speaker" or similar.
4. Select the speaker from the list to pair. A confirmation tone will sound upon successful pairing.
5. The speaker will automatically attempt to reconnect to the last paired device when powered on.

OPERATING INSTRUCTIONS

Bluetooth Playback

Once paired, open your preferred music application on your device and begin playback. Use the **Track Selection** buttons on the speaker or your device to control volume and skip tracks. The **Play/Pause** button controls playback.

FM Radio

To use the FM radio function, ensure the speaker is powered on. Press the Mode button (if available, or cycle through modes using the Play/Pause button if it has multiple functions) until FM radio mode is activated. Use the **Track Selection** buttons to scan for stations or change frequencies.

AUX Input

Connect a 3.5mm audio cable (not included) from your external audio device's headphone jack to the speaker's **AUX Input** port. The speaker will automatically switch to AUX mode. Control playback and volume from your external device.

USB Playback

Insert a USB flash drive containing MP3 audio files into the speaker's **USB Port**. The speaker will automatically detect the drive and begin playing audio. Use the **Track Selection** buttons to navigate tracks and adjust volume.

MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the speaker away from water and moisture. This product is not waterproof.
- Avoid exposing the speaker to extreme temperatures or direct sunlight for extended periods.
- Store the speaker in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the Micro USB cable.
No sound from the speaker.	Check the volume level on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, AUX, USB) is selected.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode. Disable and re-enable Bluetooth on your device. Move the speaker closer to your device. Clear previous Bluetooth connections on your device.
Poor FM radio reception.	Adjust the speaker's position. Extend any antenna if available.

SPECIFICATIONS




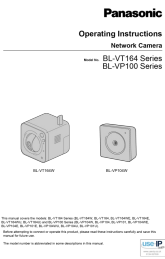 
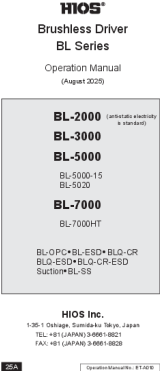 
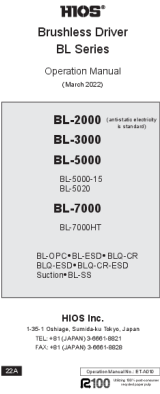 
Image: Visual representation of the Bud Light Bluetooth Speaker with approximate dimensions: 10.24 inches (length), 5.2 inches (width), 5.12 inches (height).



- **Model Name:** Bud Light Bluetooth Bazooka Speaker
- **Model Number:** BL-BZSS-004
- **Brand:** Bud Light
- **Connectivity Technology:** Bluetooth 5.0
- **Wireless Communication Technology:** Bluetooth
- **Bluetooth Range:** Up to 30 feet (barrier-free environment)
- **Speaker Type:** Subwoofer
- **Audio Output Mode:** Stereo
- **Speaker Maximum Output Power:** 3 Watts
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Product Dimensions:** 10.24"D x 5.2"W x 5.12"H
- **Item Weight:** Approximately 1 pound (16 ounces)
- **Material:** Synthetic material
- **Is Waterproof:** FALSE
- **Included Components:** Bluetooth Speaker
- **UPC:** 840286400930

WARRANTY AND SUPPORT

This product comes with a Full Warranty. For warranty claims or technical support, please refer to the contact information provided by your retailer or the manufacturer, M&S Accessory Network. Keep your proof of purchase for warranty validation.

Related Documents - BL-BZSS-004

	<p>Bud Light Amp Speaker TWG22125 User Manual</p> <p>User manual for the Bud Light Amp Speaker, Model TWG22125, providing safety instructions, operating procedures, troubleshooting, and specifications.</p>
	<p>Panasonic Network Camera BL-VT164/BL-VP100 Series Operating Instructions</p> <p>Detailed operating instructions for Panasonic BL-VT164 Series and BL-VP100 Series network cameras. Covers setup, configuration, monitoring, and maintenance.</p>
	<p>HIOS Brushless Driver BL Series Operation Manual</p> <p>Comprehensive operation manual for HIOS BL Series Brushless Drivers, covering specifications, parts identification, accessories, operating procedures, torque adjustment, and troubleshooting for models like BL-2000, BL-3000, BL-5000, and BL-7000.</p>
	<p>HIOS Brushless Driver BL Series Operation Manual</p> <p>This operation manual provides detailed information on the HIOS Brushless Driver BL Series, including models BL-2000, BL-3000, BL-5000, and BL-7000. It covers parts identification, specifications, accessories, power supplies, operating procedures, torque adjustment, and troubleshooting.</p>

	<p>Panasonic Network Camera Setup Guide: BL-C210 & BL-C230 Installation and Configuration</p> <p>Comprehensive setup guide for Panasonic network cameras, models BL-C210 and BL-C230. Learn how to install, configure network settings, access remotely, and use viewer software.</p>
	<p>VEVOR Drum Set Installation Guide and Parts List</p> <p>A comprehensive guide for assembling and installing your VEVOR Drum Set, including a detailed parts list and step-by-step instructions for models SH-004-BK, SH-004-BL-A, SH-002-BL-A, SH-002-RD, and SH-002-SY.</p>