Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Hurom /
- Hurom H310 Easy Clean Slow Juicer Instruction Manual

Hurom H310

Hurom H310 Easy Clean Slow Juicer Instruction Manual

Model: H310 | Brand: Hurom

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and care of your Hurom H310 Easy Clean Slow Juicer. Please read all instructions carefully before use and retain this manual for future reference.

PRODUCT OVERVIEW

The Hurom H310 is a compact, slow masticating juicer designed for high juice yield and easy cleaning. It features patented Slow Squeeze Technology to minimize oxidation and preserve nutrients, a self-feeding hopper for reduced prep time, and a revolutionary strainer-free chamber set for simplified cleaning.



Figure 1: Hurom H310 Easy Clean Slow Juicer with key components labeled, including the self-feeding hopper, easy clean chamber, juice spout, pulp outlet, and power switch. The base is made of BPA-free, impact-resistant ABS plastic.

SETUP AND ASSEMBLY

Before first use, ensure all packaging materials are removed and components are clean. The H310 is designed for quick and intuitive assembly.

Component Identification

- . Motor Base: Contains the quiet motor and control dial.
- Chamber Set: Includes the auger, strainer-free chamber, and hopper.
- Hopper: Self-feeding design to accommodate whole fruits and vegetables.
- Juice Spout: Dispenses extracted juice.
- Pulp Outlet: Ejects dry pulp.
- Containers: Separate containers for juice and pulp collection.
- Cleaning Brush: Included for thorough cleaning of parts.

Assembly Steps

- 1. Place the chamber set onto the motor base, aligning the arrows. Twist clockwise until it locks securely.
- 2. Insert the auger into the chamber.
- 3. Attach the hopper to the top of the chamber set, ensuring it clicks into place.
- 4. Position the juice and pulp containers under their respective outlets.

Your browser does not support the video tag.

Video 1: Visual guide to assembling the Hurom H310 Easy Clean Slow Juicer. This video demonstrates the simple steps to put together the juicer components before operation.

OPERATING INSTRUCTIONS

The Hurom H310 is designed for efficient juicing with minimal preparation. Its self-feeding hopper allows for whole-sized produce, reducing chopping time.

Preparation of Ingredients

- Wash all fruits and vegetables thoroughly.
- For most produce, pre-cutting is not necessary due to the large self-feeding hopper.
- Remove hard pits from fruits (e.g., peaches, plums) and thick peels from citrus fruits.
- For leafy greens, it is recommended to roll them into a tight bundle before inserting.

Juicing Process

- 1. Ensure the juice cap is closed to allow juice to mix in the chamber for richer flavor.
- 2. Place prepared ingredients into the self-feeding hopper.
- 3. Turn the power switch to the "ON" position. The juicer will automatically begin processing the ingredients.
- 4. Once juicing is complete, open the juice cap to dispense the fresh juice into the collection container.
- 5. If ingredients become stuck, use the "REV" (reverse) function briefly to dislodge them, then switch back to "ON".

Your browser does not support the video tag.

Video 2: Demonstration of how to collect fresh juice using the Hurom H310 juicer, highlighting the juice cap function.

Safety Features

The juicer is equipped with safety mechanisms. It will not operate if components are not correctly assembled or if the hopper lid is open, preventing accidental injury.

MAINTENANCE AND CLEANING

The H310 features a revolutionary strainer-free chamber set, making cleaning significantly easier compared to traditional juicers.

Cleaning Steps

- 1. Turn off and unplug the juicer immediately after use.
- 2. Disassemble the hopper, auger, and chamber set by twisting counter-clockwise.
- 3. Rinse all detachable parts under running water. The strainer-free design minimizes pulp residue, allowing for quick rinsing.
- 4. Use the included cleaning brush for any stubborn pulp, especially in the fine mesh of the strainer (if applicable for specific attachments) or small crevices.
- 5. Allow all parts to air dry completely before reassembling or storing.

Important: None of the juicer components are dishwasher safe. Hand washing is required to maintain product integrity and longevity.

Figure 2: The strainer-free chamber set being rinsed under water, demonstrating the ease of cleaning without scrubbing.

Problem	Possible Cause	Solution
Juicer does not turn on.	Components not assembled correctly; lid not closed; power not connected.	Ensure all parts are securely locked, the lid is closed, and the power cord is plugged in.
Ingredients are stuck/machine stops.	Overloading; hard ingredients causing blockage.	Use the "REV" (reverse) function briefly to dislodge. If persistent, disassemble and clear blockage.
Excessive pulp in juice.	Certain ingredients naturally produce more pulp; strainer may be clogged.	Ensure strainer is clean. For less pulp, consider straining juice manually after extraction.

SPECIFICATIONS

Brand: Hurom

Model Name: H310 Easy Clean Slow Juicer

Color: H310A White

Special Feature: Portable

Product Dimensions: 7.5"D x 16.4"W x 14.2"H

Finish Type: Polished

Recommended Uses For Product: Fruits, Vegetables

Product Care Instructions: Hand Wash Only

Capacity: 0.22 Liters

Maximum Power: 320 Watts

Power Source: Corded Electric

Blade Material: Stainless Steel

Number of Speeds: 1

Item Weight: 13.99 pounds
Manufacture Year: 2023
UPC: 888253000936

WARRANTY AND SUPPORT

The Hurom H310 Easy Clean Slow Juicer comes with an extensive warranty, ensuring long-term reliability. Please refer to the product packaging or the official Hurom website for specific warranty details and registration information.

For further assistance, troubleshooting, or to explore additional products, visit the official Hurom America store:

Hurom America Store

Related Documents - H310

