

[Manuals.plus](#) /

› [Columbia](#) /

› Columbia Peak Patrol CSS14-004 Watch User Manual

Columbia CSS14-004

Columbia Peak Patrol CSS14-004 Watch User Manual

Model: CSS14-004

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Columbia Peak Patrol CSS14-004 watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. The Columbia Peak Patrol CSS14-004 is a durable quartz watch featuring a polycarbonate case and a grey silicone strap, designed for everyday wear and outdoor activities.

SETUP

Strap Adjustment

The silicone strap is designed for comfort and adjustability. To adjust the strap, locate the buckle and the series of holes along the strap. Select the hole that provides a snug yet comfortable fit on your wrist.



Image: Rear view of the Columbia Peak Patrol watch, highlighting the grey silicone strap and the metal buckle with the Columbia logo. This image illustrates the strap adjustment mechanism.

OPERATING INSTRUCTIONS

Setting the Time

1. **Locate the Crown:** The crown is the small knob located on the side of the watch case, typically on the right.
2. **Pull Out the Crown:** Gently pull the crown outwards to the first or second click position. For a 3-hand quartz movement, there is usually one pull-out position for time setting.
3. **Adjust the Time:** Turn the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
4. **Push In the Crown:** Once the correct time is set, push the crown back into its original position against the watch case. This will start the watch movement.

Water Resistance

This watch is rated for **5 ATM (50 Meters) Water Resistant**. This means it is suitable for everyday use and can withstand

splashes, rain, and brief immersion in water. It is **not** suitable for swimming, diving, or prolonged water activities. Ensure the crown is fully pushed in before any contact with water to maintain water resistance.

FEATURES

- **Movement:** 3-Hand Quartz Movement for accurate timekeeping.
- **Case Material:** Durable Polycarbonate Case.
- **Water Resistance:** 5 ATM (50 Meter) Water Resistant.
- **Strap Material:** Grey Silicone.
- **Crystal:** Mineral.

MAINTENANCE

Cleaning Your Watch

To clean your watch, wipe the case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or strap. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and thorough drying.

Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the watch stops running, it indicates that the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures. Avoid exposing the watch to strong magnetic fields, which can affect its accuracy.

TROUBLESHOOTING

- **Watch Not Running:**
 - Check if the crown is fully pushed in.
 - The battery may need replacement. Consult a professional watch technician.
- **Condensation Inside Crystal:**
 - This may indicate a loss of water resistance. Avoid further contact with water and seek professional service immediately.
- **Inaccurate Time:**
 - Ensure the time was set correctly.
 - Exposure to strong magnetic fields can affect accuracy.
 - The battery may be low.

SPECIFICATIONS

Model Number	CSS14-004
Brand	Columbia
Movement Type	3-Hand Quartz
Display Type	Analog

Case Material	Polycarbonate
Case Diameter	46 Millimetres
Case Thickness	10 Millimetres
Band Material	Silicone (Plastic)
Band Width	20 Millimetres
Band Color	Gray
Dial Color	Gray
Crystal Material	Mineral
Water Resistance Depth	50 Metres (5 ATM)
Clasp Type	Buckle
Item Weight	200 Grams
UPC	810031871223

WARRANTY AND SUPPORT

Your Columbia Peak Patrol CSS14-004 watch is covered by the manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, service, or warranty claims, please contact Columbia customer service through their official website or the contact information provided with your product packaging. Keep your proof of purchase for warranty validation.

© 2023 Columbia. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B7TCTY33>

More documents and user manuals: <https://manuals.plus/>