



[Manuals.plus](#) /

> [Ailgely](#) /

> [Ailgely 2500W High Temperature Pressurized Steam Cleaner User Manual, Model RLD1149715458928YN](#)

Ailgely RLD1149715458928YN

Ailgely 2500W High Temperature Pressurized Steam Cleaner User Manual

Model: RLD1149715458928YN

[Introduction](#) [Safety Information](#) [Components](#) [Setup](#) [Operation](#) [Maintenance](#)
[Warranty & Support](#)
[Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective operation, maintenance, and troubleshooting of your Ailgely 2500W High Temperature Pressurized Steam Cleaner, Model RLD1149715458928YN. Please read this manual thoroughly before first use and retain it for future reference. The Ailgely Steam Cleaner is designed to efficiently clean various surfaces using high-temperature, high-pressure steam, making it suitable for a wide range of household cleaning tasks.



Figure 1.1: Aigely Steam Cleaner generating high-temperature steam.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, electric shock, personal injury, or property damage.

- Always ensure the appliance is unplugged from the power outlet before filling with water, cleaning, or performing any maintenance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the steam nozzle away from people, animals, and electrical appliances. Steam is extremely hot and can cause severe burns.
- Do not open the water tank cap while the appliance is operating or under pressure.
- Use only clean tap water. Do not add detergents, perfumes, or other chemicals to the water tank, as this may damage the appliance or create hazardous fumes.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Do not operate the appliance if the power cord or plug is damaged, or if the appliance has been dropped or damaged in any manner.
- Always allow the appliance to cool down completely before storing.

3. PRODUCT COMPONENTS AND OVERVIEW

Familiarize yourself with the parts of your Ailgely Steam Cleaner and its accessories.



Figure 3.1: Ailgely Steam Cleaner with included accessories.



Figure 3.2: Diagram of main components.

- **Main Unit:** Contains the heating element and water tank.
- **Handheld Sprayer:** The primary steam output nozzle.
- **Speed Adjustment Knob:** Controls the steam output level (6 speeds).
- **Power Switch:** On/Off control for the unit.
- **Water Tank:** Transparent reservoir for water (1000 ml capacity).
- **Steam Tube:** Connects the main unit to the handheld sprayer (2.2 meters long).
- **Power Cable:** Connects the unit to an electrical outlet (2.5 meters long).
- **Extended Sprayer Rod:** For reaching difficult areas.
- **Brush Heads:**
 - **Steel Brush:** For stubborn stains on durable surfaces.
 - **Small Hair Brush:** For general cleaning.
 - **Big Hair Brush:** For larger areas or delicate surfaces.

2.2-Meter-Long Steam Tube & 2.5-Meter-Long Power Cable

Convenient for cleaning, giving you more movement freedom.



Figure 3.3: Extended reach with steam tube and power cable.

4. SETUP INSTRUCTIONS

Follow these steps for initial setup before operating your steam cleaner.

1. **Prepare the Unit:** Place the steam cleaner on a stable, flat surface.
2. **Fill the Water Tank:** Ensure the unit is unplugged. Unscrew the water tank cap. Carefully pour clean tap water into the tank. Do not overfill. Securely close the water tank cap.

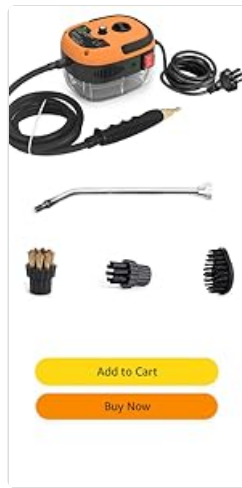


Figure 4.1: Visual guide for setup and operation steps.

3. **Attach Accessories:** Select the appropriate brush head or extended rod for your cleaning task and securely attach it to the handheld sprayer.
4. **Connect Power:** Plug the power cable into a standard 110V AC electrical outlet.

5. OPERATING INSTRUCTIONS

Once the unit is set up, follow these steps to begin cleaning.

1. **Power On and Heat Up:** Turn on the power switch. The indicator light will illuminate. The unit will begin heating the water. Steam will be ready in approximately 10 seconds, reaching 229°F/105°C and 3 BAR pressure within 1-2 minutes after the indicator light is on.
2. **Adjust Steam Output:** Rotate the speed adjustment knob to select one of the 6 available steam output levels. Turning the knob clockwise increases steam vapor content, while counter-clockwise decreases it.



Figure 5.1: Adjusting steam output with the 6-gear dial.

3. **Begin Cleaning:** Aim the nozzle at the surface to be cleaned. For optimal results, hold the nozzle as close as possible to the surface. Spray steam first to loosen stubborn stains, then use the appropriate brush head to scrub.
4. **Continuous Use:** The large capacity water tank allows for approximately 1 hour of continuous use before refilling is needed.
5. **Disinfection:** The unit is designed with strong acid resistance, allowing for the addition of suitable disinfectant or cleaning lotion for enhanced disinfection and sterilization. Always follow the manufacturer's instructions for any added cleaning agents.

Make Kitchen Cleaning Less Laborious

Enjoy spending your time at kitchen, enjoy cooking, enjoy life!



Figure 5.2: Cleaning a kitchen range hood.



1. Add proper amount of water



2. Plug the power



3. Turn on the power switch, meantime hold the spray handle, the machine will start to spray steam about 1-2 minutes after the indicator light is on



4. Aim the nozzle at the surface of the object to be cleaned, turn the adjustment knob clockwise, the water vapor content increases, and turn it counterclockwise, the water vapor content decreases. (6 gears adjustable)



5. After the cleaning work is completed, turn off the power switch and unplug the power plug



6. Drain the water from the steam cleaner tank and pipes and wipe off the surface of the machine with a dry rag

Figure 5.3: Versatile cleaning applications.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your steam cleaner.

1. **After Use:** Once cleaning is complete, turn off the power switch and unplug the unit from the electrical outlet. Allow the unit to cool down completely.
2. **Drain Water:** Carefully drain any remaining water from the steam cleaner tank and pipes.
3. **Clean Exterior:** Wipe the exterior surface of the machine with a dry rag. Do not use abrasive cleaners or solvents.
4. **Store:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and out of reach of children.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your steam cleaner.

Q: Is it normal for water to flow out before the steam cleaner sprays steam?

A: Yes, this is normal. The machine requires a preheating period to convert water into hot steam. After the indicator light is on and the machine is turned on, steam will typically begin to spray after approximately 1-2 minutes. Any initial water discharge is part of this heating process.



Figure 7.1: Preheating process and steam generation.

Q: How to steam clean quickly and efficiently?

A:

1. Aim the steam cleaner nozzle as close as possible to the object being cleaned. If the distance from the nozzle is greater, the steam temperature will be lower, reducing cleaning effectiveness.
2. Spray steam first to soften and melt off stains, then use the appropriate brush head to easily scrub them away.

If you encounter issues not covered here, please refer to the customer support section.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Ailgely
Model Name	Steam Cleaner
Item Model Number	RLD1149715458928YN
Power Source	AC
Voltage	110 Volts (AC)
Wattage	2500 watts
Maximum Temperature	229°F / 105°C
Steam Pressure	3 BAR
Heating Time	10 seconds (fast heating)
Tank Volume	1000 Milliliters
Form Factor	Handheld
Color	White
Product Dimensions	7.4"D x 5.1"W x 5.9"H (19cm x 13cm x 15cm)
Item Weight	3.89 pounds

Feature	Specification
Steam Tube Length	2.2 meters
Power Cable Length	2.5 meters



Figure 8.1: Product dimensions.

9. WARRANTY AND SUPPORT

Specific warranty details for your Ailgely Steam Cleaner may vary. Please refer to the product packaging or the retailer's website for the most accurate and up-to-date warranty information.

For technical support, troubleshooting assistance, or inquiries regarding parts and accessories, please contact Ailgely customer service through the retailer where the product was purchased or visit the official Ailgely website for contact information.

