

[Manuals.plus](#) /

› [Easyfone](#) /

› Easyfone T6 4G Cell Phone User Manual

Easyfone T6

Easyfone T6 4G Cell Phone User Manual

MODEL: T6

Introduction

The Easyfone T6 4G cell phone is designed for simplicity and ease of use, making it ideal for seniors, individuals with learning disabilities, or young children. Its key features include large, clear buttons, a convenient charging dock, and dedicated picture speed dial buttons for quick access to important contacts. The integrated SOS button provides an essential safety feature for emergencies. This manual provides comprehensive instructions to help you set up, operate, and maintain your Easyfone T6 phone.

What's in the Box

Your Easyfone T6 package includes all the necessary components to get started:

- Easyfone T6 Phone
- Charger Suit (USB cable and wall adapter)
- Battery (1050mAh Lithium Ion)
- User Manual
- SpeedTalk SIM Card
- Charging Dock
- Picture Cutting Adapter for speed dial buttons
- Neck Lanyard



Figure 1: All items included in the Easyfone T6 product package.

Setup

1. Inserting SIM Card and Battery

1. Carefully remove the back cover of the Easyfone T6.
2. Locate the SIM card slot. Insert the provided SpeedTalk SIM card into the slot, ensuring it is correctly oriented.
3. Insert the battery into its compartment, aligning the gold contacts.
4. Replace the back cover, pressing firmly until it clicks into place.



Figure 2: The Easyfone T6 phone, designed for easy handling and visibility.

2. Charging the Phone

To charge your Easyfone T6, simply place it into the provided charging dock. Ensure the phone is properly seated so that the charging contacts align. The phone will begin charging automatically. A full charge provides long standby time.



Figure 3: The Easyfone T6 in its convenient charging dock.

3. Activating Phone Service

The Easyfone T6 comes with a SpeedTalk SIM card. To activate your service, follow the instructions provided with the SpeedTalk SIM card. The phone is unlocked and compatible with T-Mobile, MetroPCS, SpeedTalk, and other MVNO carriers using the T-Mobile Network. It is **not compatible** with AT&T, Cricket, or CDMA Networks like Verizon, Sprint, and Boost Mobile.

Device Compatibility

Country: United States

Select Prepaid plan or Bring(Keep) your own phone plan

Service Provider	Carriers	Compatibility Status	SIM Card Purchase Method	Note
AT&T	AT&T		--	
	RedPocket (GSMA)		Official Site	Select GSMA SIM Card
T-Mobile	T-Mobile		Official Site or Amazon.com	Select Prepaid Plan
	Metro by T-mobile		Official Site	--
	Tello Mobile		Official Site or Amazon.com	--
	SpeedTalk		Official Site or Amazon.com	Included in the Box
	RedPocket (GSMT)		Official Site	Select GSMT SIM Card
	Mint Mobile		Official Site or Amazon.com	--
Sprint	Sprint		--	
Verizon	Verizon		--	

Icon Legend:

	Device is compatible with the network carrier (Select prepaid plan or bring your own phone plan)	--
	Device is not compatible with the network carrier	--
	Please select a compatible network carrier, Any question please feel free to contact us.	Amazon Message

Additional:

- ① Package include a SpeedTalk SIM-Card.(Support option to port-in (keep) your existing phone number or get a new one at no extra charge.
- ② To help check phone's compatibility with IMEI number: 862677050053257 (Check Before Buying)
- ③ We suggest to contact the Carrier's customer service number to Activate New Sim card.

Figure 4: Device compatibility status with various network carriers.

Operating the Phone

1. Power On/Off

To power on the phone, press and hold the red "NO" button (power button) until the screen lights up. To power off, press and hold the same button until the phone shuts down.

2. Making Calls with Picture Buttons

The Easyfone T6 features four customizable picture speed dial buttons (A, B, C, D) for direct calling to your most important contacts. You can insert small photos of your loved ones under the clear button covers. Use the included picture cutting adapter to size your photos correctly.



Figure 5: Customizing the picture speed dial buttons with personal photos.

To program a number to a picture button:

1. Press the "Menu" button.
2. Navigate to "Contact" and press "Yes".

3. Select the desired picture button (A, B, C, or D) using the up/down arrows and press "Yes".
4. Input the phone number using the numeric keypad. Use the "NO" button to delete incorrect digits.
5. Press "Save" to confirm.

To make a call using a picture button, simply long-press the corresponding picture button for 3 seconds, or press the button once and then press the green "YES" button to confirm the call.

Your browser does not support the video tag.

Video 1: Instructions on how to add a phone number to a picture button and make a call on the Easyfone T6.

3. Receiving Calls

When a call comes in, the phone will ring. Press the green "YES" button to answer the call. To end a call, press the red "NO" button.

4. SOS Function

The Easyfone T6 features a dedicated SOS button for emergencies. In case of an emergency, press and hold the SOS button located on the side of the phone. The phone will automatically dial pre-set emergency contacts in a loop until the call is answered, ensuring help can be reached quickly.



Figure 6: The SOS emergency button for quick access to help.

5. Flashlight Function

The phone includes a built-in flashlight for convenience. Refer to your quick start guide for specific instructions on activating and deactivating the flashlight.

Maintenance

- **Battery Care:** To maximize battery life, avoid extreme temperatures. Charge the phone regularly using the provided charging dock.
- **Cleaning:** Use a soft, dry cloth to clean the phone's exterior. Avoid using harsh chemicals or abrasive materials.
- **General Handling:** Handle the phone with care to prevent drops or impacts. Keep it away from water and excessive moisture.

Troubleshooting

Problem	Possible Cause	Solution
Phone does not turn on.	Low battery; Battery not inserted correctly.	Charge the phone using the charging dock; Re-insert the battery ensuring proper alignment.
Cannot make or receive calls.	No network signal; SIM card not activated or inserted incorrectly; Incompatible carrier.	Check network signal strength; Ensure SIM card is activated and correctly inserted; Verify carrier compatibility (refer to Figure 4).
Poor call quality.	Weak network signal; Environmental interference.	Move to an area with better signal; Avoid calling in noisy environments.
Phone freezes or becomes unresponsive.	Software glitch; Low memory.	Remove and re-insert the battery to restart the phone.

Specifications

Feature	Detail
Brand	Easyfone
Model Name	T6
Operating System	Easyfone OS
Cellular Technology	4G
Screen Size	1.8 Inches
Battery Capacity	1050 Milliamp Hours
Battery Power Rating	3 Watt Hours
Item Weight	11.7 ounces
Package Dimensions	5.28 x 4.69 x 2.83 inches
Connectivity Technologies	Bluetooth, USB
Special Features	SOS Button, Charging Dock, Big battery, Picture Button
Color	Black
Audio Jack	3.5 mm

Feature	Detail
Human Interface Input	Buttons

Warranty and Support

For warranty information and technical support, please refer to the official Easyfone website or contact their customer service directly. Details can typically be found in the packaging or on the manufacturer's product page.

