

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Perlegear](#) /

> [Perlegear PGTVS05 Universal Swivel Table Top TV Stand Instruction Manual](#)

Perlegear PGTVS05

Perlegear PGTVS05 Universal Swivel Table Top TV Stand Instruction Manual

Model: PGTVS05 | Brand: Perlegear

IMPORTANT SAFETY INFORMATION

Please read this manual thoroughly before installation and keep it for future reference. If you have any questions, please contact our U.S.-based customer service team.

- **Weight Capacity:** This TV stand is designed for TVs weighing up to 99 lbs (45 kg). Do not exceed this weight limit.
- **TV Size Compatibility:** Suitable for most 37-70 inch flat or curved TVs.
- **VESA Compatibility:** Supports VESA patterns from 200x100mm (8"x4") to 800x400mm (31"x16"). Ensure your TV's VESA pattern falls within this range.
- **Material:** Constructed from alloy steel and tempered glass for strong stability and durability.
- **Stability:** Features a 16.54" x 11.81" tempered glass base and five larger non-slip pads to maximize stability and prevent scratching surfaces.



Image: Illustration emphasizing safety, showing a TV stand with a child and pet nearby, indicating secure positioning to prevent tip-overs.

PACKAGE CONTENTS

Please verify all parts are present and undamaged before beginning assembly.

- Tempered Glass Base
- Lower Support Pillar
- Upper Support Pillar
- Front Support Bracket
- TV Brackets (2 pieces)
- Plastic Cover for Base
- Non-slip Pads (5 pieces)
- Various Screws, Washers, and Allen Keys (labeled A, B, C, etc.)
- Cable Clips



Image: All components of the Perlegear PGTVS05 TV stand laid out on a surface, including the glass base, support pillars, brackets, and hardware bags.

SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps for a drill-free and easy installation.

Step 1: Attach Non-Slip Pads to the Base

Carefully peel and attach the five non-slip pads to the underside of the tempered glass base. Place one pad at each corner and one in the center to ensure maximum stability and protect your furniture surface.

Step 2: Secure Lower Support Pillar to the Base

Align the lower support pillar with the pre-drilled holes on the tempered glass base. Use the provided plastic cover, washers, and bolts to securely fasten the pillar to the base. Ensure all connections are tight.

Step 3: Connect Upper Support Pillar

Slide the upper support pillar into the lower support pillar. Align the holes and secure it using the provided screws and Allen key. This connection forms the main vertical support for your TV.

Step 4: Assemble the Front Support Bracket

Assemble the horizontal front support bracket by connecting its various segments using the provided screws. Ensure all connections are firm and the bracket forms a stable frame.


Step 5: Attach Front Support to Upper Support Pillar

Mount the assembled front support bracket to the upper support pillar. Use the designated holes and screws to secure it. This is where your TV brackets will eventually attach.

Step 6: Attach TV Brackets to Your TV

Carefully place your TV face down on a soft, clean surface. Attach the two vertical TV brackets to the back of your TV using the appropriate VESA screws and washers from the provided hardware kit. Ensure the brackets are oriented correctly (arrows pointing up) and are securely fastened.

Designed for Large TVs

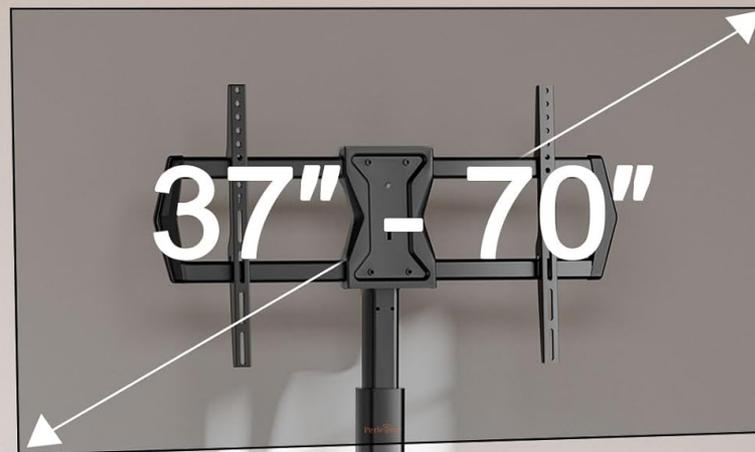

VESA Patterns

200x100mm	200x200mm	200x300mm
300x200mm	300x300mm	400x300mm
400x400mm	600x400mm	800x400mm

Image: Diagram showing compatible TV sizes (37"-70") and VESA patterns (200x100mm to 800x400mm) for the TV stand.

Step 7: Attach the TV to the Front Support

With assistance, carefully lift your TV and hook the attached TV brackets onto the front support of the stand. Ensure the TV is securely seated. Tighten any locking screws on the TV brackets to prevent accidental dislodgement.

Step 8: Attach Cable Management

Use the included cable clips to route and organize your TV cables along the support pillar for a clean and streamlined appearance.

Assembly Video Guide

Your browser does not support the video tag. Please update your browser to view this content.

Video: A detailed assembly guide for the Perlegear PGTVS05 TV stand, demonstrating each step from unboxing to final TV mounting.

Your browser does not support the video tag. Please update your browser to view this content.

Video: A concise assembly demonstration for the Perlegear PGTVS05 TV stand, highlighting key installation points and features.

OPERATING INSTRUCTIONS

Height Adjustment

The swivel TV stand offers 3 support pillar height settings, allowing you to position your screen closer to eye level for optimal comfort. To adjust the height, loosen the securing screws on the upper support pillar, slide it to your desired height (17.72" to 20.87" tall), and then re-tighten the screws firmly.



Image: Visual representation of the three available height settings (17.72", 19.29", 20.87") for the TV stand.

Swivel Function

The TV base stand allows for a 35° swivel left or right. Gently push the TV to adjust its angle, directing the screen towards your viewing position for a great view from anywhere in the room.

Watch TV From Anywhere



Image: A TV on the stand swiveling left and right by 35 degrees, illustrating the adjustable viewing angle.

MAINTENANCE

To ensure the longevity and safe operation of your TV stand, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, damp cloth to clean the tempered glass base and metal components. Avoid abrasive cleaners or solvents that may damage the finish.
- **Check Connections:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Weight Distribution:** Ensure the TV's weight is evenly distributed on the stand and does not exceed the maximum weight capacity.

TROUBLESHOOTING

If you encounter any issues with your Perlegear PGTVS05 TV stand, please refer to the following common solutions:

- **Instability:** Ensure all assembly screws are fully tightened. Verify the TV's weight and VESA pattern are within

the specified limits. Check that the non-slip pads are correctly applied to the base.

- **Difficulty Adjusting Height/Swivel:** Ensure no cables are obstructing movement. Check that securing screws for height adjustment are sufficiently loosened before attempting to change height.
- **Missing Parts or Damaged Components:** Do not proceed with assembly. Contact Perlegear customer service immediately for assistance.

SPECIFICATIONS

Mounting Type	Tabletop Mount
Movement Type	Tilt (35 Degrees Max)
Brand	Perlegear
Material	Alloy Steel, Tempered Glass
Color	Black
Compatible Devices	Television
Maximum Supported Screen Size	70 Inches
VESA Compatibility	200x100mm to 800x400mm
Maximum Load Capacity	99 lbs

Product Dimensions

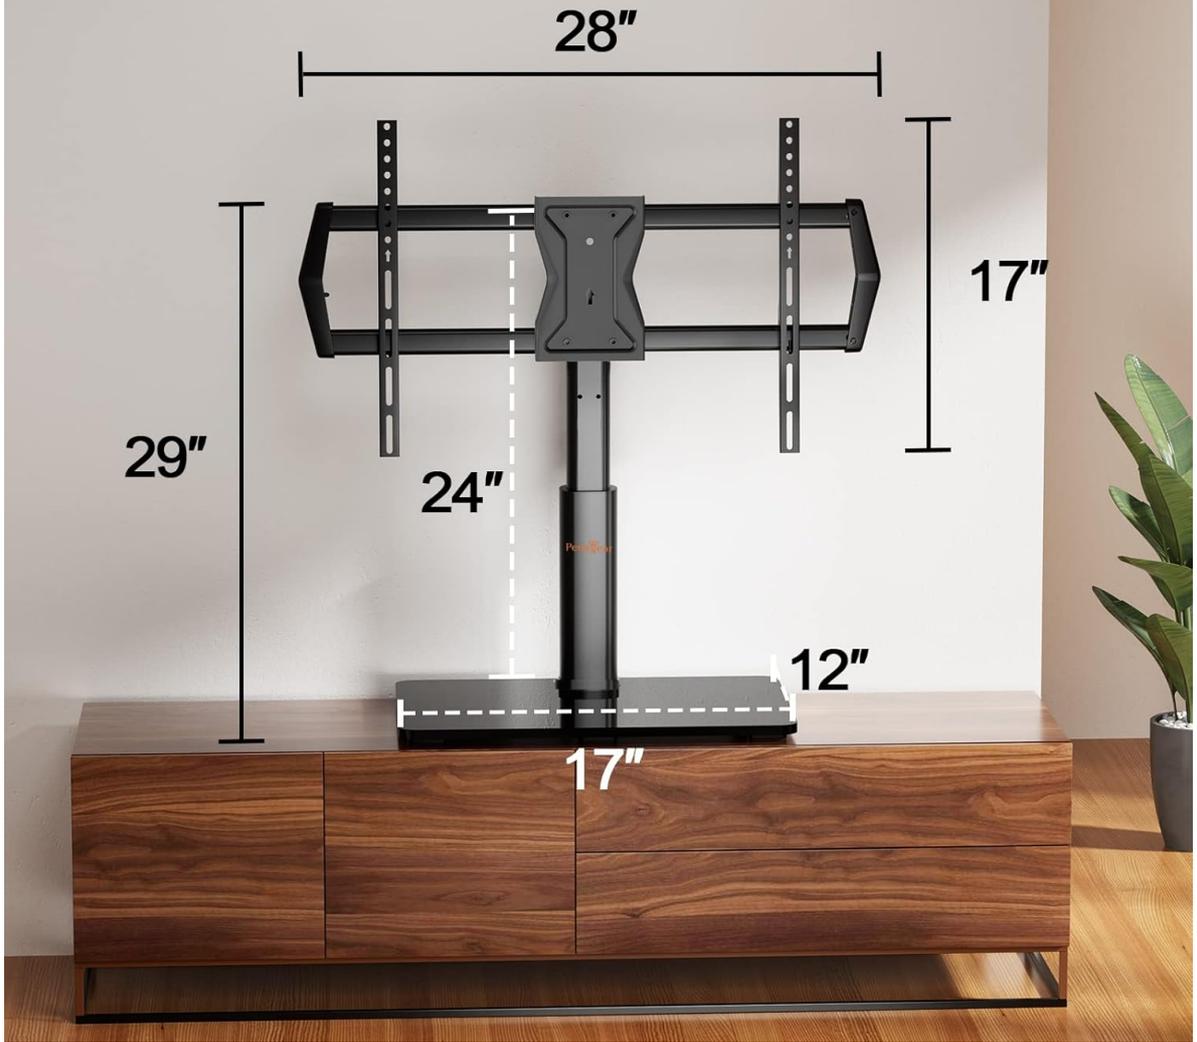


Image: Detailed product dimensions of the assembled TV stand, including height, width, and depth measurements.

WARRANTY AND SUPPORT

For any questions or concerns regarding your Perlegear PGTVS05 Universal TV Stand, please contact our U.S.-based customer service team. We are committed to providing dependable products and excellent support.

- **Technical Support:** Available for assembly assistance and product inquiries.
- **Quality Assurance:** Products undergo comprehensive safety testing.