

[Manuals.plus](#) /

> [WiMiUS](#) /

> WiMiUS P61 Mini Projector User Manual

WiMiUS P61

WiMiUS P61 Mini Projector User Manual

Model: **P61** | Brand: **WiMiUS**

1. PRODUCT OVERVIEW

The WiMiUS P61 Mini Projector is a compact and powerful device designed for versatile home entertainment and professional presentations. Featuring advanced electric focus, automatic keystone correction, and support for 5G WiFi and Bluetooth 5.2, it delivers a high-quality viewing experience with ease of use.





Figure 1: Front view of the WiMiUS P61 Mini Projector, showcasing its compact design and lens.

2. SETUP GUIDE

2.1. Package Contents

Before setup, ensure all items are present in the package:

- WiMiUS P61 Mini Projector
- Power Adapter
- Remote Control
- HDMI Cable
- User Manual
- (Other accessories as specified on packaging)

2.2. Physical Placement

Place the projector on a stable, flat surface. Ensure there is adequate ventilation around the device. For optimal viewing, position the projector directly in front of a flat, light-colored wall or projection screen.



Figure 2: Proper placement of the projector on a stable surface.

The P61 features a short-throw design, allowing for a large image from a shorter distance. For example, a 100-inch screen can be achieved from approximately 0.85 meters (compared to 2m+ for traditional projectors).

より短い距離、より大きな画面



Figure 3: Illustration of the P61's short-throw capability, showing a larger image from a closer distance compared to other models.

2.3. Power Connection

Connect the power adapter to the projector's power input port and then plug it into a power outlet. The projector will power on automatically or can be turned on using the power button on the device or remote control.


2.4. Focus and Keystone Correction

The WiMiUS P61 features **electric focus** and **automatic vertical keystone correction** for quick and clear image setup.

- **Electric Focus:** Use the remote control to adjust the focus. Press the dedicated focus buttons (often marked with '+' and '-') to achieve a sharp image. This eliminates the need for manual lens adjustment.
- **Automatic Vertical Keystone Correction:** The projector will automatically correct vertical image distortion (trapezoid effect) up to ± 30 degrees. This ensures a rectangular image even if the projector is not perfectly level with the screen.
- **Digital Zoom:** Adjust the image size from 70% to 100% using the remote control without moving the projector.

より便利なワンキー電動フォーカス

リモコンでフォーカスを調整できる

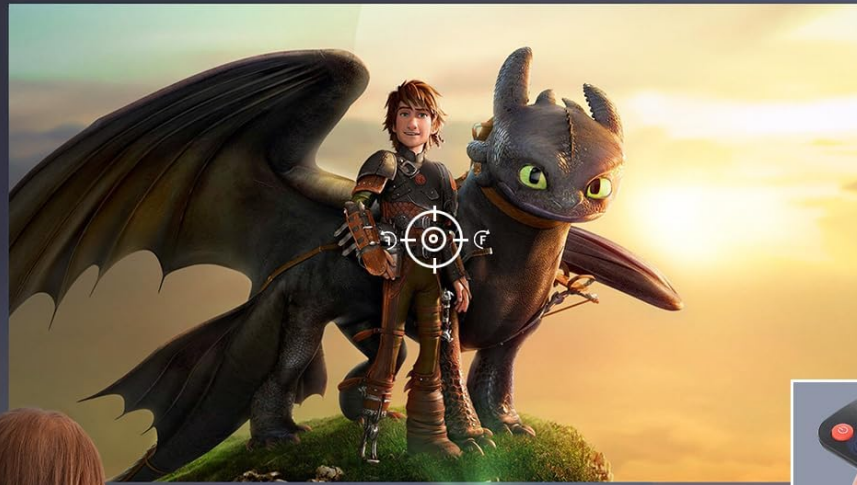

VS



Figure 4: Adjusting focus using the remote control for a clear image.

自動垂直台形補正



±30° 垂直台形補正



ズーム 100%-70%



Figure 5: Automatic vertical keystone correction and digital zoom functionality.

3. OPERATING INSTRUCTIONS

3.1. Connecting Devices

The P61 projector offers multiple connectivity options:

- **HDMI:** Connect gaming consoles (PS4, Switch), laptops, DVD players, or TV sticks using an HDMI cable.
- **USB:** Plug in USB drives to play media files directly.
- **AV:** Connect older devices using the AV port.
- **3.5mm Audio Jack:** Connect external wired speakers or headphones.
- **5G WiFi:** Connect wirelessly to iOS and Android devices for screen mirroring. The 5G WiFi ensures low latency and

high-speed transmission, ideal for gaming and streaming.


- **Bluetooth 5.2:** Connect to external Bluetooth speakers, headphones, or earphones for enhanced audio experience. The built-in HiFi speaker also provides immersive sound.



Figure 6: Overview of the projector's wide compatibility with various devices via HDMI, USB, and AV ports.

2.4G+5G WiFi 無線超高速通信

 2.4G



5G

 


Figure 7: High-speed 5G WiFi connectivity for seamless screen mirroring from mobile devices.

Bluetooth 5.2搭載

3Dダイナミックなサラウンド音声を楽しめる



スピーカー



ヘッドホン



イヤフォン



Figure 8: Bluetooth 5.2 connectivity for pairing with speakers, headphones, and earphones.

3.2. Navigating the Interface

Use the remote control to navigate the projector's main menu. The interface is designed to be intuitive, allowing easy access to input sources, settings, and media playback options.

3.3. Adjusting Settings

Access the settings menu to customize your viewing experience:

- **Picture Mode:** Select from various preset picture modes (e.g., Standard, Bright, User) or adjust brightness, contrast, color, and sharpness manually.
- **Aspect Ratio:** Choose between 16:9, 4:3, or Auto to match your content.
- **Sound Mode:** Adjust audio settings or select a sound mode.
- **Language:** Change the system language.

4. MAINTENANCE

4.1. Cleaning the Lens

Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Avoid using abrasive cleaners or cloths that could scratch the lens surface.

4.2. Dust Removal

The P61 projector is designed with dustproof features. However, regular cleaning of the air vents with a soft brush or compressed air can help maintain optimal performance and prevent dust buildup inside the device.

4.3. Storage

When not in use, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures. If storing for an extended period, consider using the original packaging or a protective case to prevent dust accumulation and damage.



Figure 9: The compact and portable design makes it easy to carry and store.

5. TROUBLESHOOTING

5.1. No Image or Blurry Image

- **Check Power:** Ensure the projector is properly connected to power and turned on.
- **Adjust Focus:** Use the electric focus on the remote control to sharpen the image.
- **Keystone Correction:** Verify that auto keystone correction is active or manually adjust if needed.

- **Input Source:** Confirm the correct input source (HDMI, USB, WiFi) is selected.
- **Cable Connection:** Ensure all cables are securely connected.

5.2. No Sound

- **Volume Level:** Increase the volume on both the projector and the connected device.
- **Mute Function:** Check if the projector or connected device is muted.
- **Audio Output:** If using external speakers, ensure they are properly connected via Bluetooth or the 3.5mm audio jack.
- **Source Audio:** Verify that the audio is playing from the source device.

5.3. Connection Issues (WiFi/Bluetooth)

- **Restart Devices:** Restart the projector, your mobile device, and your router.
- **Signal Strength:** Ensure the projector is within range of your WiFi router or Bluetooth device.
- **Interference:** Minimize interference from other wireless devices.
- **Pairing Mode:** Ensure Bluetooth devices are in pairing mode when attempting to connect.

6. SPECIFICATIONS

Feature	Description
Brand	WiMiUS
Model Series	P61
Package Dimensions	25.1 x 19.9 x 13.8 cm
Item Weight	1.38 kg
Form Factor	Portable
Native Resolution	1920 x 1080 Pixels (Full HD)
Brightness	20000 LM (as advertised)
Contrast Ratio	20000:1 (as advertised)
Wattage	60 W (approx. 90-100W consumption)
Connectivity Technology	Bluetooth 5.2, USB, HDMI, AV, 3.5mm Audio
Wireless Connectivity	5G WiFi (2.4G+5G dual-band)

Feature	Description
Recommended Use	Gaming, Home Theater, Entertainment
Special Features	Electric Focus, Auto Vertical Keystone Correction, Digital Zoom (70-100%), Short Throw, Built-in HiFi Speaker, Dustproof, Lightweight

7. WARRANTY AND SUPPORT

WiMiUS provides dedicated customer service and technical support for the P61 Mini Projector. In the event of initial defects or natural failures, the product is covered by a free exchange or refund guarantee.

For support inquiries, please contact WiMiUS customer service through the platform where you purchased the product or visit the official WiMiUS website for contact information.

Note: This product is certified for technical compliance and safety.

© 2025 WiMiUS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

