

[manuals.plus](#) /

› [FOHERE](#) /

› [FOHERE 15L Portable Mini Fridge User Manual](#)

**FOHERE FOHERE-YT-A-15X**

# **FOHERE 15L Portable Mini Fridge User Manual**

**MODEL: FOHERE-YT-A-15X**

**Brand: FOHERE**

## **1. INTRODUCTION**

Thank you for purchasing the FOHERE 15L Portable Mini Fridge. This versatile appliance is designed for both cooling and warming, making it ideal for various uses such as storing beverages, snacks, cosmetics, or medicines at home, in the office, or on the go. Please read this manual carefully before use to ensure proper operation and maintenance.



Image: The FOHERE 15L Portable Mini Fridge, showcasing its compact design and internal capacity for various items.

## 2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance away from direct sunlight and heat sources.
- Ensure proper ventilation around the unit. Do not block ventilation openings.
- Unplug the appliance from the power outlet when not in use or before cleaning.
- Do not operate the appliance with a damaged cord or plug.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use the appliance for purposes other than its intended use.

## 3. PACKAGE CONTENTS

Verify that all items are included in the package:

- FOHERE 15L Portable Mini Fridge Unit
- AC Power Cord (for home/office use)
- DC Power Cord (for car use, 12V)

- Removable Shelf
- User Manual (this document)



Image: Illustration of the mini fridge and its included accessories: AC power cable, DC power cable, and a removable internal shelf.

## 4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your mini fridge:

- **Main Unit:** The primary body of the fridge.
- **Door:** Features a clear window and a secure latch.
- **Handle:** Ergonomic handle on top for easy portability.
- **Power Input Ports:** Located at the back for AC and DC connections.
- **Control Panel:** Typically on the back or side, with switches for cooling/warming and power modes.
- **Removable Shelf:** Allows for flexible storage configurations.

## Easy Carrying Transportation

Attached ergonomic handle on top



Image: The mini fridge demonstrating its portability with the ergonomic handle, suitable for outdoor use.

# Compact 15L Size

Meet Daily Storage Needs



Image: Size comparison illustrating the 15L capacity, capable of holding up to 21 cans.

## 5. SETUP

Before first use, ensure the fridge is clean and dry. Place the removable shelf inside if desired.

### 5.1 Power Connection

The FOHERE Mini Fridge supports both AC (Alternating Current) for home/office use and DC (Direct Current) for car use.

**1. For Home/Office Use (AC 220-240V):**

- Connect the AC power cord to the AC input port on the back of the fridge.
- Plug the other end of the AC power cord into a standard wall outlet.

**2. For Car Use (DC 12V):**

- Connect the DC power cord to the DC input port on the back of the fridge.
- Plug the other end (car charger plug) into your vehicle's 12V cigarette lighter socket.

**Important:** Ensure the power switch is in the "OFF" position before connecting or disconnecting power cords.

# Home & Car Use

Equipped with adapters for AC and DC



Image: Demonstrating the dual power capability for both home (AC) and car (DC) use.

## 6. OPERATING INSTRUCTIONS

### 6.1 Cooling Function

To cool items, ensure the fridge is connected to power and the power switch is set to the "COOL" position. The fridge will begin to cool items to 15-20°C (59-68°F) below ambient temperature. For optimal cooling, place pre-chilled items inside.

# Cool Function

Cool to 10-18°C lower than ambient temperature

\*Reference 3-hour test laboratory data

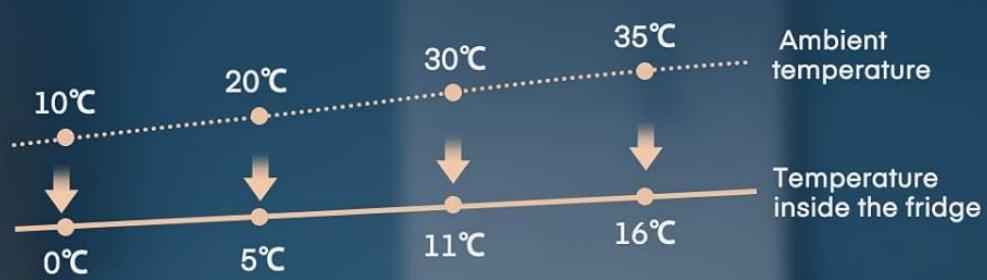


Image: Visual representation of the cooling capability, showing temperature reduction relative to ambient conditions.

## 6.2 Warming Function

To warm items, ensure the fridge is connected to power and the power switch is set to the "WARM" position. The fridge will heat items to 55-65°C (131-149°F). This function is ideal for keeping food warm or for warming baby bottles.

# Warm Function

Keep breast milk fresh all the time



Image: The mini fridge in use for its warming function, suitable for keeping items like baby milk warm.

## 6.3 Silent Mode (ECO Mode)

The FOHERE Mini Fridge features a silent mode (ECO mode) for quiet operation. When activated, the fan speed is reduced, minimizing noise. This mode is particularly useful for bedrooms, offices, or other quiet environments.

- To activate silent mode, locate the mode switch (often labeled "MAX/ECO" or similar) and set it to "ECO".
- For faster cooling/warming, switch to "MAX" mode.

# Quiet Mode



Quiet  
Mode



Environmental  
Friendly



Energy  
Saving



Image: The mini fridge operating in silent mode, highlighting its quiet, environmentally friendly, and energy-saving features.

## 6.4 Storage Options

The removable shelf allows for flexible storage. You can keep it in the middle to separate items like cosmetics from food, or remove it to accommodate taller bottles or larger items.

# Multiple Storage Options



Image: Display of the mini fridge's versatile interior, showing how the removable shelf can be used or removed to fit various item sizes.

## 7. MAINTENANCE

Regular cleaning and proper care will ensure the longevity of your FOHERE Mini Fridge.

### 7.1 Cleaning

- Always unplug the appliance before cleaning.

- Wipe the interior and exterior surfaces with a soft cloth dampened with mild soap and water.
- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Ensure all surfaces are completely dry before plugging the appliance back in.
- Clean the ventilation openings regularly to prevent dust buildup, which can affect performance.

## 7.2 Storage

If storing the fridge for an extended period, ensure it is clean, dry, and unplugged. Store it in a cool, dry place away from direct sunlight.

## 8. TROUBLESHOOTING

If you encounter issues with your mini fridge, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance not turning on	No power supply; Loose connection; Power switch off.	Check power outlet/car socket; Ensure cords are securely plugged in; Turn power switch to "COOL" or "WARM".
Not cooling/warming effectively	Blocked ventilation; Ambient temperature too high/low; Door not closed properly; Too many items inside.	Clear ventilation openings; Ensure proper air circulation; Close door tightly; Do not overfill.
Excessive noise	Fan obstruction; Appliance not on a flat surface; MAX mode active.	Check for obstructions around the fan; Place on a stable, flat surface; Switch to ECO mode for quieter operation.
Condensation inside	Frequent door opening; High humidity.	Minimize door opening; Wipe away condensation with a dry cloth.

If the problem persists after trying these solutions, please contact FOHERE customer support.

## 9. SPECIFICATIONS

Feature	Detail
Brand	FOHERE
Model Number	FOHERE-YT-A-15X (15L)
Capacity	15 Liters (approx. 21 x 330ml cans)
Dimensions (L x W x H)	40 x 30 x 27 cm (15.7 x 11.8 x 10.6 inches)
Weight	3.9 Kilograms (8.6 lbs)
Power Input	AC 220-240V; DC 12V

Feature	Detail
Cooling Temperature	15-20°C (59-68°F) below ambient temperature
Warming Temperature	55-65°C (131-149°F)
Noise Level	28 dB (in silent mode)
Special Features	Silent Mode, AC/DC Adapters, Portable Handle, Removable Shelf, Door with Window
Color	Black
Annual Energy Consumption	87 kWh/year

## 10. WARRANTY AND SUPPORT

---

FOHERE products are manufactured to high-quality standards. For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official FOHERE website. Please have your model number (FOHERE-YT-A-15X) and purchase details ready when contacting support.

For further assistance or inquiries, please contact FOHERE customer service through the retailer where you purchased the product or via the contact information provided on the official FOHERE brand website.