

KAER B0B82NW1GF

KAER 2-3 Gun Safe Instruction Manual

Model: B0B82NW1GF | Brand: KAER

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your KAER 2-3 Gun Safe. Please read all instructions carefully before installation and operation. Proper use ensures the security of your firearms and valuables, and helps prevent unauthorized access.

Safety Information

- Always store firearms unloaded and locked.
- Keep keys and access codes in a secure location, away from the safe and out of reach of children.
- Ensure the safe is properly mounted to prevent tipping or removal.
- Regularly check the locking mechanism and battery status.

Keeping Children Away From Firearms



2 Rifle Safe



Bullet



2-4Pistol



2 X Rifle



Diamond

Image: The KAER 2-3 Gun Safe positioned in a living room, emphasizing its role in securing firearms from children.

2. SETUP AND INSTALLATION

The KAER 2-3 Gun Safe is designed for easy installation and can be secured to a wall or floor. It comes with pre-punched holes and necessary hardware for mounting.

2.1 Unpacking


Carefully remove the safe from its packaging. Inspect for any damage. Retain packaging for future transport if needed.

2.2 Battery Installation for Electronic Lock

1. Locate the battery compartment on the inside of the safe door.
2. Insert 4 AA alkaline batteries (not included) into the compartment, ensuring correct polarity.
3. Close the battery compartment cover.

2.3 Mounting the Safe

For optimal security, it is highly recommended to mount the safe to a wall or floor using the provided grounding bolts and pre-punched holes. This prevents unauthorized removal of the safe.

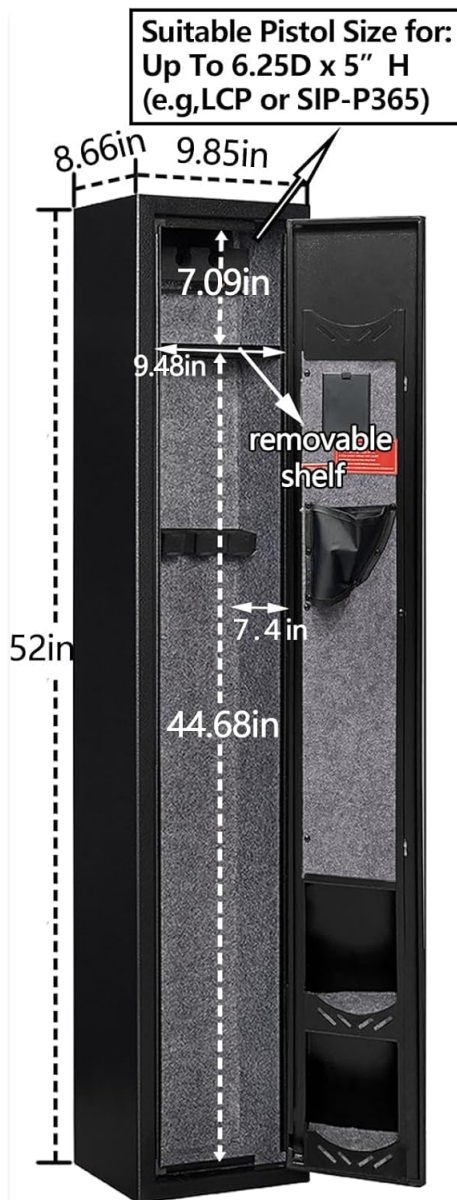

External Dimensions:

H52*W9.85*D8.66

Internal Dimensions:

H51.77*W9.65*D6

Suitable for:

(Can store 2 guns at the same time)



Image: External and internal dimensions of the safe, illustrating its capacity for various firearms.

3. OPERATING INSTRUCTIONS

Your KAER 2-3 Gun Safe offers multiple access methods for convenience and security.

3.1 Initial Opening (First Use)

Upon first receiving the safe, use the provided emergency key to open the door. The keyhole is typically concealed behind a removable cover. Once open, install the batteries for the electronic keypad.

3.2 Setting Your Personal Code

1. With the safe door open, locate the 'SET' button on the inside of the door (usually near the battery compartment).
2. Press the 'SET' button. The keypad will indicate it's ready for programming (e.g., a light will flash).
3. Enter your desired personal code (3 to 8 digits) on the keypad.
4. Press '#' to confirm your new code. The keypad will confirm successful programming (e.g., a green light).

3.3 Opening with Electronic Keypad

1. Enter your personal code on the keypad.
2. Press '#' to confirm. The keypad will indicate successful entry (e.g., a green light).
3. Within 5 seconds, turn the handle clockwise to open the door.

3.4 Opening with Emergency Key

In case of battery failure or forgotten code, the safe can be opened using the emergency key.

1. Remove the cover protecting the emergency keyhole (if applicable).
2. Insert the emergency key and turn it.
3. Turn the handle clockwise to open the door.



Image: Two primary methods for opening the safe: using a physical key or an electronic keypad with a code.

4. FEATURES

- **Capacity:** Designed to hold 2-3 rifles up to 44 inches (with/without scope).
- **180-Degree Door Opening:** External hinges allow the door to open fully for easy access.
- **Removable Storage Shelf:** Provides flexible storage options for smaller items or ammunition.
- **LED Light:** Illuminates the interior when the door is opened, aiding visibility.
- **Pistol Rack (4 slots):** Securely holds up to four pistols.

- **Pistol Bag:** An additional pocket on the door for separate pistol storage.
- **Bullet Rack:** Dedicated storage for ammunition.
- **Multi-Point Bolts:** Features 3*20mm diameter locking bolts for enhanced security against forced entry.

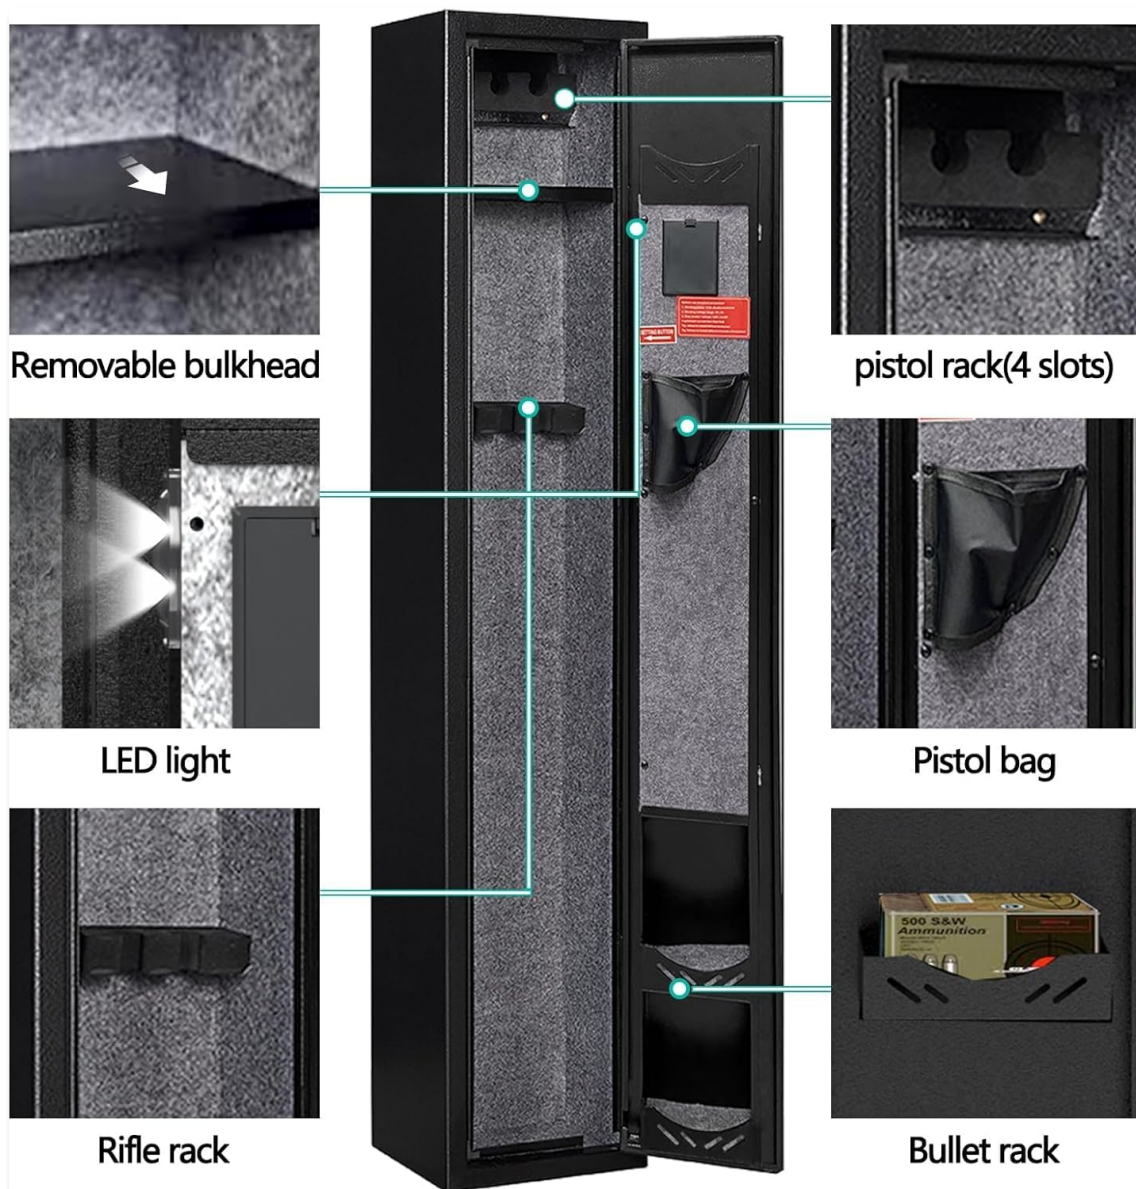


Image: Internal features of the safe, including storage compartments and lighting.

5. MAINTENANCE

- **Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- **Battery Replacement:** Replace AA batteries in the electronic keypad annually or when the low battery indicator appears.
- **Lock Mechanism:** Periodically check the locking bolts and handle for smooth operation.
- **Key Storage:** Store emergency keys securely and separately from the safe.

6. TROUBLESHOOTING

- **Forgotten Code:** Use the emergency key to open the safe. Once open, reset your personal code following the instructions in Section 3.2.
- **Battery Depletion:** If the electronic keypad batteries are depleted, use the emergency key to

open the safe. Replace the batteries immediately.

- **Alarm System:** If an incorrect code is entered 3 times, the safe will emit an audible alarm and lock for 50 seconds. Wait for the lockout period to end before attempting to enter the correct code.
- **Emergency Power Box:** If the internal batteries are dead and you cannot locate your emergency key, an external emergency power box (included) can be plugged into the front of the safe to temporarily power the keypad.

Your browser does not support the video tag.

Video: Demonstrates how to use the emergency power box to access the safe if the internal batteries are depleted.

7. SPECIFICATIONS

Attribute	Detail
Brand	KAER
Product Dimensions	8.66"D x 9.85"W x 52"H
Lock Type	Electronic Combination Lock, Key
Color	Black
Capacity	2-3 Rifles
Material	Metal (Cold-rolled steel)
Special Features	Alarm System, Anti-Theft, Combination Lock, Removable Shelf, Sensor Light
Mounting Type	Floor Mount, Wall Mount
Item Weight	52.9 Pounds
UPC	723497609678
Model Number	B0B82NW1GF

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your KAER 2-3 Gun Safe, please refer to the contact details provided with your purchase documentation or visit the official KAER website. Keep your purchase receipt for warranty claims.