

Mayer AIR TOASTER OV

Mayer Air Toaster Oven User Manual

Model: AIR TOASTER OV

INTRODUCTION

Thank you for purchasing the Mayer Air Toaster Oven. This appliance is designed to provide versatile cooking options, combining the functions of a toaster, oven, and air fryer. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



Image: Front view of the Mayer Air Toaster Oven, showcasing its internal components including the wire rack and baking tray. The control knobs for temperature and timer are visible on the top right.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or anything similar.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Mayer Air Toaster Oven:

1. **Temperature Control Knob:** Used to set the desired cooking temperature.
2. **Timer Knob:** Used to set the cooking time. Includes a "STAY ON" function for continuous operation.
3. **Power Indicator Light:** Illuminates when the oven is operating.
4. **Glass Door:** Transparent door for viewing cooking progress.
5. **Wire Rack:** For placing food items or baking pans.
6. **Baking Tray/Crumb Tray:** Collects crumbs and can be used for baking.
7. **Heating Elements:** Located at the top and bottom of the oven interior.



Image: Front view of the Mayer Air Toaster Oven with the door closed, showing the clean exterior and control knobs.



Image: Side view of the Mayer Air Toaster Oven with its glass door fully open, revealing the interior space and removable racks.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the oven and all accessories from the packaging. Remove any packing materials, stickers, or labels.
2. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is at least 10-15 cm (4-6 inches) of space on all sides for proper ventilation. Do not place it near flammable materials.
3. **Initial Cleaning:** Wipe the exterior with a damp cloth. Wash the wire rack and baking tray in warm, soapy water, rinse thoroughly, and dry completely.
4. **First Burn-Off:** Before cooking food, operate the oven empty for about 15 minutes at the maximum temperature (230°C). This will burn off any manufacturing oils and eliminate odors. A slight odor and smoke are normal during this process. Ensure the area is well-ventilated.
5. **Cool Down:** Allow the oven to cool completely after the burn-off cycle.

OPERATING INSTRUCTIONS

Follow these steps to operate your Mayer Air Toaster Oven:

1. **Prepare Food:** Place your food item on the wire rack or baking tray.

2. **Insert Tray/Rack:** Slide the wire rack or baking tray into the desired rack position inside the oven.
3. **Close Door:** Close the glass door securely.
4. **Set Temperature:** Turn the **Temperature Control Knob** to your desired temperature setting (from 60°C to 230°C).
5. **Set Timer:** Turn the **Timer Knob** clockwise to the desired cooking time (up to 60 minutes). The power indicator light will illuminate.
 - For continuous operation, turn the timer knob counter-clockwise to the "STAY ON" position. The oven will remain on until manually turned off.
 - When the set time elapses, a bell will ring, and the oven will automatically turn off.
6. **Monitor Cooking:** You can observe the cooking progress through the glass door.
7. **Remove Food:** Once cooking is complete, carefully open the door and use oven mitts to remove the hot food and tray/rack.
8. **Turn Off:** If the oven is in "STAY ON" mode, turn the Timer Knob to "OFF" to switch off the appliance. Unplug the oven from the power outlet when not in use.

Cooking Guide (Approximate)

The following table provides approximate cooking times and temperatures for common food items. Adjust as needed based on food quantity and desired doneness.

Food Item	Temperature	Time
Chicken Wings	210-230°C	25-35 minutes
Steak	210-230°C	15-25 minutes
Chicken	230°C	45 minutes
Pizza	210-230°C	15-25 minutes
Fries	210-230°C	20-30 minutes
Potato	210-230°C	35-45 minutes
Tart	160-180°C	20-25 minutes
Cake	160-180°C	35-45 minutes

Note: These are guidelines. Actual cooking times may vary based on food density, starting temperature, and desired crispness. Always ensure food is cooked to a safe internal temperature.

CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your Mayer Air Toaster Oven.

1. **Always Unplug:** Before cleaning, always unplug the oven from the power outlet and allow it to cool completely.
2. **Crumb Tray:** Pull out the crumb tray from the bottom of the oven. Discard crumbs. Wipe the tray with a damp cloth or wash in warm, soapy water. Dry thoroughly before replacing.
3. **Wire Rack and Baking Tray:** Wash these accessories in warm, soapy water. For stubborn food residue, soak them before cleaning. Rinse and dry completely. These parts are generally not dishwasher safe unless specified.
4. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. Do not use abrasive cleaners or metal

scouring pads, as they can damage the non-stick coating (if applicable) or surfaces. For baked-on grease, a paste of baking soda and water can be applied, left for a few minutes, then wiped clean.

- 5. **Exterior:** Wipe the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or polishes.
- 6. **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth. For stubborn stains, a non-abrasive cleaner can be used.
- 7. **Do Not Immerse:** Never immerse the main body of the oven, cord, or plug in water or any other liquid.

Storage: *Ensure the oven is clean and dry before storing. Store it in a cool, dry place.*

TROUBLESHOOTING

If you encounter issues with your Mayer Air Toaster Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the plug is securely in a working outlet. Turn the timer knob past the 10-minute mark to activate.
Food is not cooking evenly.	Incorrect temperature/time setting; food too large or crowded; uneven placement.	Adjust temperature and time. Ensure food is spread out and not overcrowded. Rotate food halfway through cooking.
Excessive smoke during operation.	Food residue/grease buildup; first use burn-off.	Clean the interior and crumb tray thoroughly. For first use, this is normal; ensure ventilation. If persistent, unplug and contact support.
Timer bell does not ring.	Timer mechanism issue.	Ensure the timer knob was turned past the 10-minute mark. If the issue persists, contact customer support.
Oven gets too hot on the exterior.	Normal operation; insufficient ventilation.	It is normal for the exterior to get hot. Ensure adequate space around the oven for ventilation (at least 10-15 cm). Do not touch hot surfaces.

If the problem persists after trying these solutions, please contact Mayer customer support.

SPECIFICATIONS

- Brand:** Mayer
- Model:** AIR TOASTER OV
- Capacity:** 12 Liters
- Material:** Stainless Steel
- Control Type:** Knob
- Door Style:** Dropdown Door
- Special Features:** Temperature Control, Timer
- Manufacturer:** MAYER
- ASIN:** B0B82RWSCC
- Date First Available:** 21 July 2022





Image: Angled top view of the Mayer Air Toaster Oven, highlighting its compact design and control panel.

WARRANTY AND SUPPORT

Mayer products are manufactured to the highest quality standards. For warranty information, product support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Mayer website.

Mayer Official Website: www.mayer.sg

Please have your model number (AIR TOASTER OV) and purchase date ready when contacting support.

	<p>Mayer Digital Air Pot (3L) MMAP30D User Manual</p> <p>User manual for the Mayer Digital Air Pot, model MMAP30D, part of the Paradise Collection. Provides instructions and specifications for the 3L air pot.</p>
	<p>Mayer MMFS28 Food Steamer: Instruction Manual and User Guide</p> <p>Comprehensive guide for the Mayer MMFS28 Food Steamer, covering safety instructions, assembly, operation, cleaning, maintenance, and warranty information.</p>
	<p>Mayer MMSO2050 Steam Oven User Manual</p> <p>Comprehensive user manual for the Mayer MMSO2050 Steam Oven, covering safety instructions, operating features, cleaning, maintenance, and troubleshooting for optimal use.</p>
	<p>Mayer MM076 Electric Oven - User Manual</p> <p>Instruction manual for the Mayer MM076 Electric Oven, The Professional Chef Series. Includes safety instructions, parts introduction, controls and operations, function guide, and cleaning and maintenance.</p>
	<p>Mayer MMDO13C Built-in Oven: User Manual and Safety Guide</p> <p>Comprehensive user manual for the Mayer MMDO13C built-in oven. Learn about safety, installation, operation, cooking modes, accessories, cleaning, troubleshooting, and energy-efficient use.</p>
	<p>Mayer MMDO6M Built-in Electric Oven User's Manual</p> <p>Comprehensive user manual for the Mayer MMDO6M Built-in Electric Oven, covering installation, operation, safety guidelines, cleaning, and maintenance for optimal performance.</p>