

## Easy Camp 120406

# Easy Camp Huntsville 400 Tent User Manual

Model: 120406

Brand: Easy Camp

## 1. INTRODUCTION

Thank you for choosing the Easy Camp Huntsville 400 tent. This manual provides essential information for the safe and effective setup, operation, and maintenance of your tent. Please read it thoroughly before first use and retain it for future reference.

The Huntsville 400 is a spacious 4-person tent designed for camping and hiking, offering reliable shelter with its waterproof construction and durable materials.

## 2. SAFETY INFORMATION

- Fire Safety:** Keep all flame and heat sources away from the tent fabric. The tent is made of flammable material and will burn if exposed to flame. Do not use gas or paraffin heaters, barbecues, or cooking appliances inside the tent.
- Ventilation:** Ensure adequate ventilation at all times to prevent condensation and the accumulation of carbon monoxide if using any combustion appliances (which is not recommended).
- Weather Conditions:** While the tent is waterproof, extreme weather conditions (e.g., strong winds, heavy snow) can cause damage. Choose a sheltered pitching site and secure all guy ropes properly.
- Children:** Supervise children around the tent, especially during setup and takedown.
- Site Selection:** Pitch your tent on level ground, away from sharp objects, overhanging branches, and potential flood areas.

## 3. PACKAGE CONTENTS

Before setting up, verify that all components are present:

- Outer Tent (Rainfly)
- Inner Tent
- Tent Poles (Aluminum)
- Pegs/Stakes
- Guy Ropes (pre-attached or separate)
- Carry Bag

- Instruction Manual (this document)

## 4. SETUP INSTRUCTIONS

The Easy Camp Huntsville 400 tent is designed for quick assembly, typically taking around 5 minutes for two people.

1. **Unpack and Lay Out:** Remove the tent from its carry bag and lay the outer tent (rainfly) flat on your chosen pitching site. Ensure the door is facing the desired direction.
2. **Assemble Poles:** Connect the aluminum pole sections. Identify the correct poles for each sleeve on the outer tent.
3. **Insert Poles:** Slide the assembled poles through the corresponding sleeves on the outer tent.
4. **Arch and Secure Poles:** Gently arch the poles and insert their ends into the eyelets or pin-and-ring systems at the base of the tent. This will raise the tent structure.
5. **Peg Down Corners:** Secure the four main corners of the outer tent to the ground using pegs.
6. **Attach Inner Tent:** Go inside the outer tent and clip or toggle the inner tent into place. Ensure the inner tent floor is spread out smoothly.
7. **Secure Guy Ropes:** Extend all guy ropes and peg them firmly into the ground at an appropriate angle (approximately 45 degrees) to provide stability against wind. Adjust tensioners as needed.
8. **Final Adjustments:** Check all zips are closed and the tent is taut and stable.



Figure 4.1: The Easy Camp Huntsville 400 tent fully pitched, showing its overall structure and guy rope setup.



Figure 4.2: A side view of the Huntsville 400 tent, illustrating the tunnel design and pole structure.

## 5. OPERATING INSTRUCTIONS

- **Entry and Exit:** The tent features a main zippered entrance. Ensure zippers are fully closed when not in use to prevent insects and weather ingress.
- **Ventilation:** Utilize the tent's ventilation points to maintain airflow and reduce condensation. Open vents during the day and close them partially at night if temperatures drop.
- **Internal Space:** The tent has one main room, providing ample space for 4 persons.
- **Storage:** Use any internal pockets or hanging points for organizing small items.



Figure 5.1: Interior view of the tent showing the sleeping area partition closed, providing privacy.



Figure 5.2: Interior view of the tent with the sleeping area partition open, creating a larger communal space.

## 6. MAINTENANCE AND CARE

- **Cleaning:** Clean the tent using a soft brush or sponge and lukewarm water. Do not use detergents, bleach, or harsh chemicals as they can damage the fabric's waterproof coating. The manufacturer recommends hand washing.
- **Drying:** Always ensure the tent is completely dry before packing it away. Packing a damp tent can lead to mildew, mold, and degradation of the fabric and coatings. Air dry in a shaded, well-ventilated area.
- **Storage:** Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Zippers:** Keep zippers clean and free of dirt. Lubricate occasionally with a silicone-based spray if they become stiff.
- **Repairs:** Small tears can be repaired with a tent repair kit. For larger damage, consult a professional repair service.

## 7. TROUBLESHOOTING

- **Condensation Inside Tent:** This is normal and occurs when warm, moist air inside the tent meets cooler tent fabric. Increase ventilation by opening vents or doors slightly.
- **Water Leaks:** Check for tears in the fabric or seams. Ensure all zippers are fully closed. If leaks persist, re-apply seam sealer to stitched areas or a waterproofing spray to the fabric.
- **Poles Difficult to Assemble/Disassemble:** Ensure pole sections are clean. If they stick, a small amount of silicone spray can help. Do not force them.
- **Tent Not Standing Firmly:** Ensure all poles are correctly inserted and tensioned. Check that all pegs are securely driven into the ground and guy ropes are taut and properly angled.

## 8. SPECIFICATIONS

<b>Brand</b>	Easy Camp
<b>Model Name</b>	Huntsville 400 Tienda
<b>Model Number</b>	120406
<b>Occupancy</b>	4 Person
<b>Seasons</b>	3 Season
<b>Item Weight</b>	7.7 Kilograms
<b>Water Resistance Technology</b>	1500 mm
<b>Special Feature</b>	Portable, Waterproof
<b>Material (Outer Tent)</b>	Polyester (Rainfly: Nylon)
<b>Base Material</b>	Polyethylene
<b>Pole Material Type</b>	Aluminum
<b>Color</b>	Black
<b>Item Dimensions (LxWxH)</b>	55.12 x 39.37 x 80.71 inches
<b>Maximum Height</b>	100 Centimeters
<b>Assembly Time</b>	5 minutes
<b>Number of Rooms</b>	1

## 9. WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or spare parts, please refer to the original purchase documentation or visit the official Easy Camp website. Contact details for customer service can typically be found on the manufacturer's website or on your purchase receipt.

It is recommended to register your product, if applicable, to receive updates and support.