

[Manuals.plus](#) /

› [KRUPS](#) /

› Krups NESCAFÉ Dolce Gusto Piccolo XS KP1A0131 Coffee Machine User Manual

KRUPS KP1A0131

Krups NESCAFÉ Dolce Gusto Piccolo XS Coffee Machine User Manual

Model: KP1A0131

INTRODUCTION

Welcome to the user manual for your new Krups NESCAFÉ Dolce Gusto Piccolo XS coffee machine. This compact and efficient machine is designed to deliver professional-quality coffee with a rich aroma and velvety crema, thanks to its high-pressure system of up to 15 bars. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your appliance.



Image: The Krups NESCAFÉ Dolce Gusto Piccolo XS coffee machine, showcasing its compact design and white finish with a red control button.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always unplug the machine from the power outlet before cleaning, maintenance, or if it will be left unattended for a long period.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- This appliance is intended for household use only. Do not use outdoors.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Keep children away from the appliance during operation, as surfaces can become hot.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only NESCAFÉ Dolce Gusto capsules with this machine.
- Never open the capsule holder during brewing.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your coffee machine.



Image: The Krups NESCAFÉ Dolce Gusto Piccolo XS machine brewing coffee into a glass cup, illustrating its operational state.

Key Components:

- **Water Tank:** Removable tank for fresh water (0.8 L capacity).
- **Capsule Holder:** Where NESCAFÉ Dolce Gusto capsules are inserted.
- **Control Lever:** Used to select hot or cold water and start/stop brewing.
- **Drip Tray:** Adjustable for different cup sizes, collects drips.
- **Power Button:** To turn the machine on/off.

SETUP

Follow these steps for initial setup before first use.

1. **Unpack:** Carefully remove all packaging materials and place the machine on a stable, flat surface.
2. **Clean:** Wash the water tank and drip tray with warm water and mild detergent. Rinse thoroughly.
3. **Fill Water Tank:** Fill the water tank with fresh, potable water up to the MAX level indicator. Place it back onto the machine.
4. **First Rinse:** Plug the machine into a grounded power outlet. Place an empty cup on the drip tray. Without a capsule, lift the control lever to the hot position to run water through the system. Repeat for the cold position. This primes the machine and cleans internal components.

OPERATING INSTRUCTIONS

Learn how to prepare your favorite beverages.

1. **Power On:** Press the power button. The indicator light will blink red and then turn green when the machine is ready.
2. **Insert Capsule:** Open the capsule holder and insert a NESCAFÉ Dolce Gusto capsule. Close the holder

firmly.



Image: A close-up view of the Krups NESCAFÉ Dolce Gusto Piccolo XS machine, showing a NESCAFÉ Dolce Gusto capsule being placed into the capsule holder.

3. **Place Cup:** Position your cup on the drip tray. Adjust the drip tray height if necessary.
4. **Select Temperature & Brew:** Move the control lever to the right for hot beverages or to the left for cold beverages. The machine will start brewing.
5. **Stop Brewing:** Once your desired amount of beverage is dispensed, return the control lever to the center position to stop the flow.
6. **Remove Capsule:** After brewing, wait a few seconds, then open the capsule holder and dispose of the used capsule. Close the holder.
7. **Enjoy:** Your beverage is ready to enjoy.

MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your machine.

Daily Cleaning:

- **Drip Tray & Capsule Holder:** After each use, remove and empty the drip tray. Clean it and the capsule holder with warm, soapy water. Rinse and dry thoroughly.

- **Water Tank:** Empty and rinse the water tank daily. Refill with fresh water.
- **Exterior:** Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaners.

Descaling:

Depending on water hardness and frequency of use, descaling should be performed every 3-6 months. Refer to the official Krups website or your local customer support for specific descaling instructions and recommended descaling solutions for NESCAFÉ Dolce Gusto machines.

TROUBLESHOOTING

If you encounter issues, try these common solutions.

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet fault.	Ensure plug is securely in a working outlet.
No water flow.	Water tank empty; air bubble in system; machine needs descaling.	Fill water tank. Perform a first rinse cycle. Descale the machine.
Coffee is not hot enough.	Machine not preheated; cold cup.	Wait for the green light to be steady. Preheat cup with hot water.
Water leaks from machine.	Water tank not correctly positioned; drip tray full.	Ensure water tank is seated properly. Empty and clean drip tray.

If the problem persists, please contact Krups customer support.

SPECIFICATIONS

Technical details of the Krups NESCAFÉ Dolce Gusto Piccolo XS coffee machine.

Brand: KRUPS

Model Number: KP1A0131

Power: 1600 Watts

Water Tank Capacity: 0.8 Liters

Pressure System: Up to 15 bars

Dimensions (L x W x H): 26 x 13.6 x 27.6 cm

Weight: 2.43 Kilograms

Material: Plastic

Special Features: High-pressure system, Hot & Cold function, compatible with NESCAFÉ Dolce Gusto capsules.

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or further technical support, please refer to the official KRUPS website or contact their customer service directly. Keep your proof of purchase for warranty claims.

