

ALLIMITY RC45135P

ALLIMITY Replacement Remote Control User Manual

Model: RC45135P

1. INTRODUCTION

This manual provides instructions for the ALLIMITY Replacement Remote Control, model RC45135P. This remote is designed to be compatible with various Smart TV models from brands such as HOMEX, ORAVA, Vanguard, PROSONIC, FINLUX, VESTEL, and JVC. It offers full functionality of your original remote control without requiring any complex programming.





Image 1.1: The ALLIMITY RC45135P Replacement Remote Control. This image displays the front view of the black remote control, showing all its buttons including number keys, navigation pad, volume and channel controls, and dedicated app buttons for services like Netflix and YouTube.

2. SETUP

2.1 Battery Installation

The ALLIMITY RC45135P remote control operates on standard alkaline batteries (not included). No programming or pairing is required; simply insert the batteries, and the remote will be ready for immediate use with compatible TV models.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Note: Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

3. OPERATING INSTRUCTIONS

This remote control provides comprehensive functionality for your compatible Smart TV. Below is a general overview of common button functions. Refer to your TV's original manual for specific functions if needed.

- **Power Button ():** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+/-):** Adjusts the TV's volume level.
- **Channel Up/Down (P ▲/P ▼):** Changes the TV channel.
- **Mute Button ():** Mutes or unmutes the TV audio.
- **Navigation Pad (▲ ▼ ◀ ◁):** Used to navigate menus and select options.
- **OK Button:** Confirms selections within menus.
- **Back Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Home Button ():** Accesses the TV's main home screen or Smart TV portal.
- **Dedicated App Buttons (e.g., Netflix, YouTube, Prime Video, Rakuten TV, Twitch):** Provides direct access to these streaming applications.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Record):** Controls media playback.

4. MAINTENANCE

4.1 Cleaning the Remote Control

To maintain the remote control's functionality and appearance, follow these cleaning guidelines:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.
- Ensure no liquid enters the remote control, especially around buttons or battery compartment.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or it stops functioning. Refer to Section 2.1 for detailed battery installation instructions. Always dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

If you encounter issues with your ALLIMITY RC45135P remote control, try the following troubleshooting steps:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote has short range or intermittent response.	Weak batteries; Obstruction between remote and TV; Infrared sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight to the TV's infrared sensor. Remove any objects blocking the sensor.
Certain buttons do not work.	Dirt or debris under the button; Remote control malfunction.	Clean the remote control (refer to Section 4.1). If the issue persists, the remote may be faulty and require replacement.
Remote does not control the TV.	Incompatible TV model; TV is not powered on.	Verify your TV model is listed as compatible. Ensure the TV is powered on.

6. SPECIFICATIONS

Key technical specifications for the ALLIMITY RC45135P Replacement Remote Control:

- **Brand:** ALLIMITY
- **Model Name:** RC45135P
- **Model Number:** QYSY-RC45135P-QYSY
- **Color:** Black
- **Connectivity Technology:** Infrared (IR)
- **Special Feature:** Universal compatibility with specified TV models
- **Compatible Devices:** HOMEX, ORAVA, Vanguard, PROSONIC, FINLUX, VESTEL, JVC Smart TVs (specifically models RC45135P, RC-45135P, F32ST2000, 32DMS34HD, ED65A01UHD-VE, 30109171)
- **Maximum Range:** 10 Meters
- **Number of Buttons:** 30
- **Controller Type:** Remote Control

7. WARRANTY AND SUPPORT

Specific warranty information for the ALLIMITY RC45135P Replacement Remote Control is not provided in the product details. For any support inquiries or to report issues, please refer to the seller or your point of purchase. Ensure you retain your proof of purchase for any potential warranty claims.

Related Documents - RC45135P



[Bluum MSRP Price List - REMC Bid Item Number 229011](#)

A comprehensive price list from Bluum, detailing Manufacturer, Display Name, and MSRP for a wide range of products. This document serves as a reference for pricing and product availability within the REMC Bid Item Number 229011.