

[Manuals.plus](#) /

› [WALI](#) /

› WALI Universal TV Stand Instruction Manual

WALI TVDVD-5

WALI Universal TV Stand Instruction Manual

Model: TVDVD-5 | Brand: WALI

1. INTRODUCTION

Thank you for choosing the WALI Universal TV Stand. This stand is designed to provide a stable, adjustable, and versatile mounting solution for your television, enhancing your viewing experience. Please read this manual thoroughly before installation and use to ensure proper assembly and safe operation.



Image 1.1: WALI Universal TV Stand with a television mounted, showcasing its design and functionality.

2. SAFETY INFORMATION

WARNING: Failure to read and follow all instructions may result in personal injury, property damage, or voiding of warranty. If you have any questions, please contact WALI customer support.

- Do not exceed the maximum weight capacity of 88 lbs (40 kg).
- Ensure your TV's VESA mounting pattern is within the supported range (75x75mm to 600x400mm).
- This product is intended for indoor use only.
- Do not use this product for any purpose not explicitly specified by the manufacturer.
- Always use two people for lifting and positioning the TV.
- Keep children and pets away during assembly. Small parts can be a choking hazard.
- Check all connections and fasteners regularly to ensure they remain secure.

- Place the stand on a stable, level surface to prevent tipping.

3. PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact WALI customer support for assistance.

Table 3.1: Component List

Part	Description	Quantity
A	Tempered Glass Base	1
B	Main Support Column	1
C	TV Mounting Plate	1
D	TV Bracket (Left)	1
E	TV Bracket (Right)	1
F	Plastic Protective Cover	1
G	Anti-skid Pads	4
H	Cable Management Clips	2
I	Hardware Pack (various screws, washers, spacers, Allen keys)	1 set

Highlight Feature



Image 3.1: Highlighted features and components of the WALI TV Stand.

4. SETUP AND ASSEMBLY

Follow these steps carefully to assemble your WALI Universal TV Stand.

Step 4.1: Attach Main Support Column to Base

1. Carefully place the Tempered Glass Base (A) on a soft, clean surface to prevent scratches.
2. Attach the Main Support Column (B) to the Tempered Glass Base (A) using the provided screws and an Allen key from Hardware Pack (I). Ensure the column is securely fastened.
3. Affix the Anti-skid Pads (G) to the bottom corners of the Tempered Glass Base (A).



Image 4.1: The tempered glass base and anti-skid pads for stability.

Step 4.2: Attach TV Mounting Plate to Main Support Column

1. Secure the TV Mounting Plate (C) to the Main Support Column (B) using the designated screws. Ensure it is centered and level.
2. Slide the Plastic Protective Cover (F) onto the Main Support Column (B) if applicable.



Image 4.2: The plastic protective cover for the main support column.

Step 4.3: Attach TV Brackets to Your TV

1. Lay your TV face down on a soft, clean surface.
2. Identify the correct screws (from Hardware Pack I) that fit your TV's VESA mounting holes. Use spacers if the TV back is uneven or if screws are too long.
3. Attach the TV Bracket (D) and TV Bracket (E) to the back of your TV. Ensure they are level and securely tightened. The brackets should be positioned to allow the TV to hang correctly on the mounting plate.

Compatible VESA Patterns

100x150mm / 200x200mm / 200x300mm / 400x200mm
400x300mm / 400x400mm / 600x200mm / 600x400mm

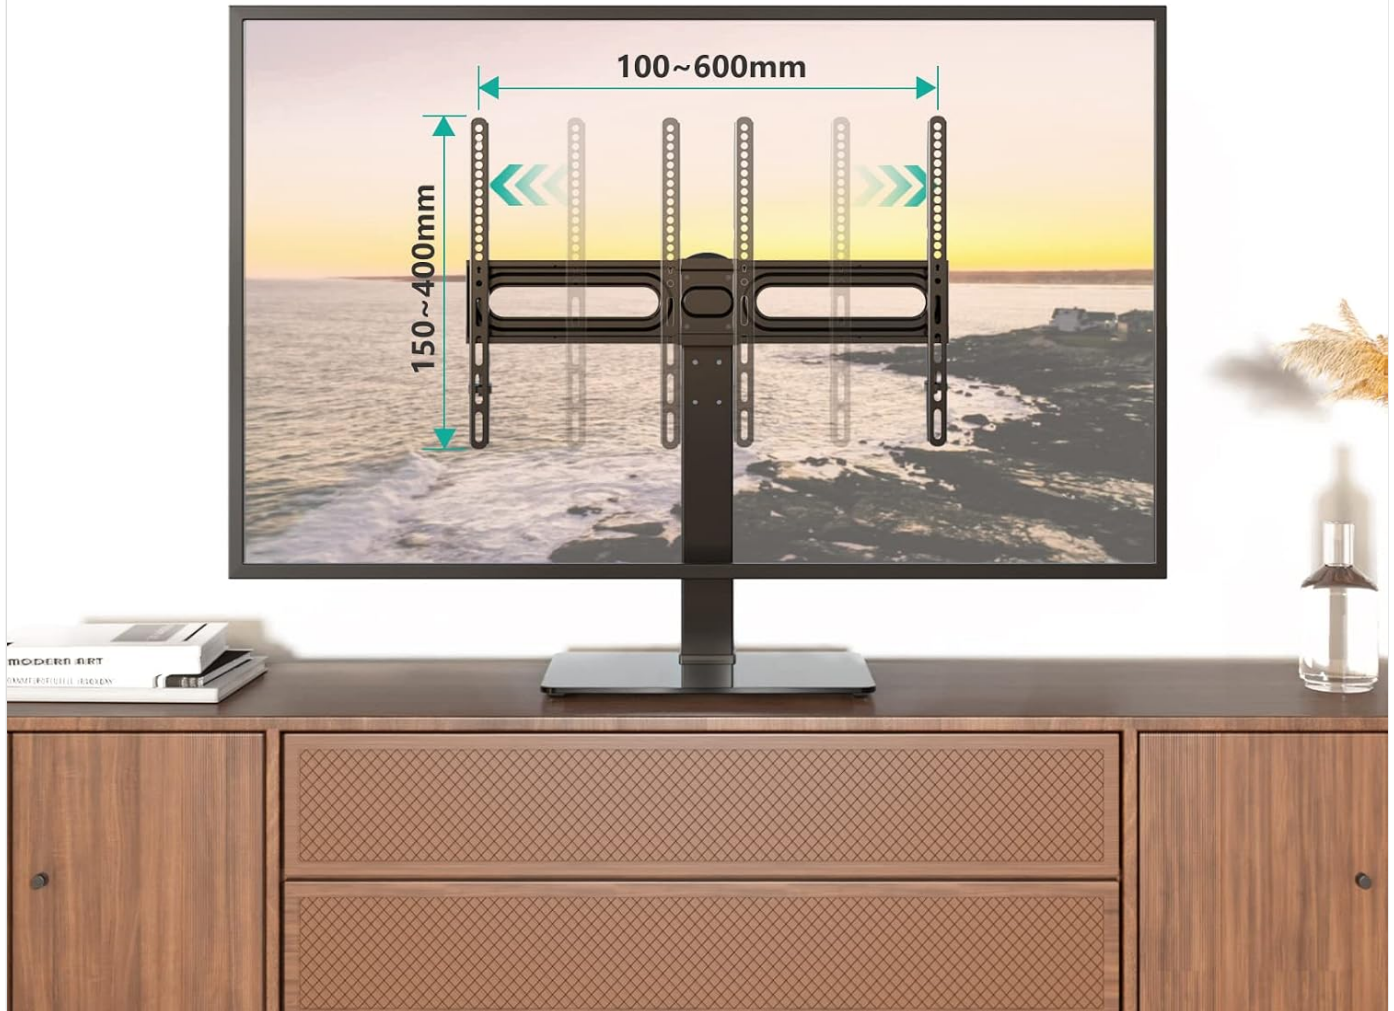


Image 4.3: Compatible VESA patterns for TV mounting.

Step 4.4: Mount TV to Stand

1. With assistance, carefully lift the TV and hook the TV Brackets (D & E) onto the TV Mounting Plate (C).
2. Ensure the TV is securely seated on the mounting plate.
3. Tighten the safety lock screws on the TV Brackets (D & E) to prevent accidental dislodgement.



Image 4.4: Detail of the safety lock screw for secure TV attachment.

Step 4.5: Cable Management

1. Route your TV and device cables neatly along the Main Support Column (B).
2. Use the Cable Management Clips (H) to secure the cables, keeping them tidy and out of sight.



Image 4.5: Integrated cable management for a clean setup.

5. OPERATING INSTRUCTIONS

5.1 Height Adjustment

The WALI TV stand offers 6 height adjustment levels for the TV bracket, and the VESA panel has a 2-position adjustment. To adjust the height:

1. Carefully loosen the screws that secure the TV Mounting Plate (C) to the Main Support Column (B).
2. Adjust the TV Mounting Plate (C) to your desired height.
3. Securely tighten all screws to lock the height in place.



Image 5.1: Illustration of the multiple height adjustment options.

5.2 Swivel Function

The TV stand allows for a 70° swivel range (+35°/-35°). To swivel your TV, gently rotate the television to the left or right to achieve your optimal viewing angle.



Image 5.2: The 70-degree swivel capability of the TV stand.

6. MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the stand. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all screws and connections to ensure they are tight and secure. Re-tighten if necessary.
- **Stability:** Ensure the stand remains on a flat, stable surface.

7. TROUBLESHOOTING

Table 7.1: Common Issues and Solutions

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Stand is wobbly/unstable.	Loose connections; uneven surface.	Ensure all screws are tightened. Place stand on a level surface. Verify anti-skid pads are properly attached.
TV does not fit the stand.	Incorrect TV size or VESA pattern.	Verify your TV's size (32-70 inches) and VESA pattern (75x75mm to 600x400mm) against specifications.
Difficulty swiveling the TV.	Friction or obstruction.	Ensure no cables are obstructing the swivel mechanism. Check for any debris.
Missing parts.	Packaging error.	Contact WALI customer support immediately with your purchase details.

8. SPECIFICATIONS

- **Model:** TVDVD-5
- **Compatible TV Sizes:** 32 to 70 inches
- **Weight Capacity:** Up to 88 lbs (40 kg)
- **VESA Compatibility:** 75x75mm, 100x100mm, 200x100mm, 200x200mm, 300x200mm, 300x300mm, 400x200mm, 400x300mm, 400x400mm, 600x200mm, 600x400mm
- **Height Adjustment:** 6 levels (25" to 31")
- **Swivel Range:** +35° / -35° (70° total)
- **Material:** Tempered Glass, Alloy Steel
- **Color:** Black
- **Product Dimensions:** 17.56 x 11.81 x 3.07 inches (Package)
- **Item Weight:** 13.46 pounds

Display Compatibility



Weight Capacity
88lbs



VESA Size
MAX 600X400mm



Screen Size
Max 70"

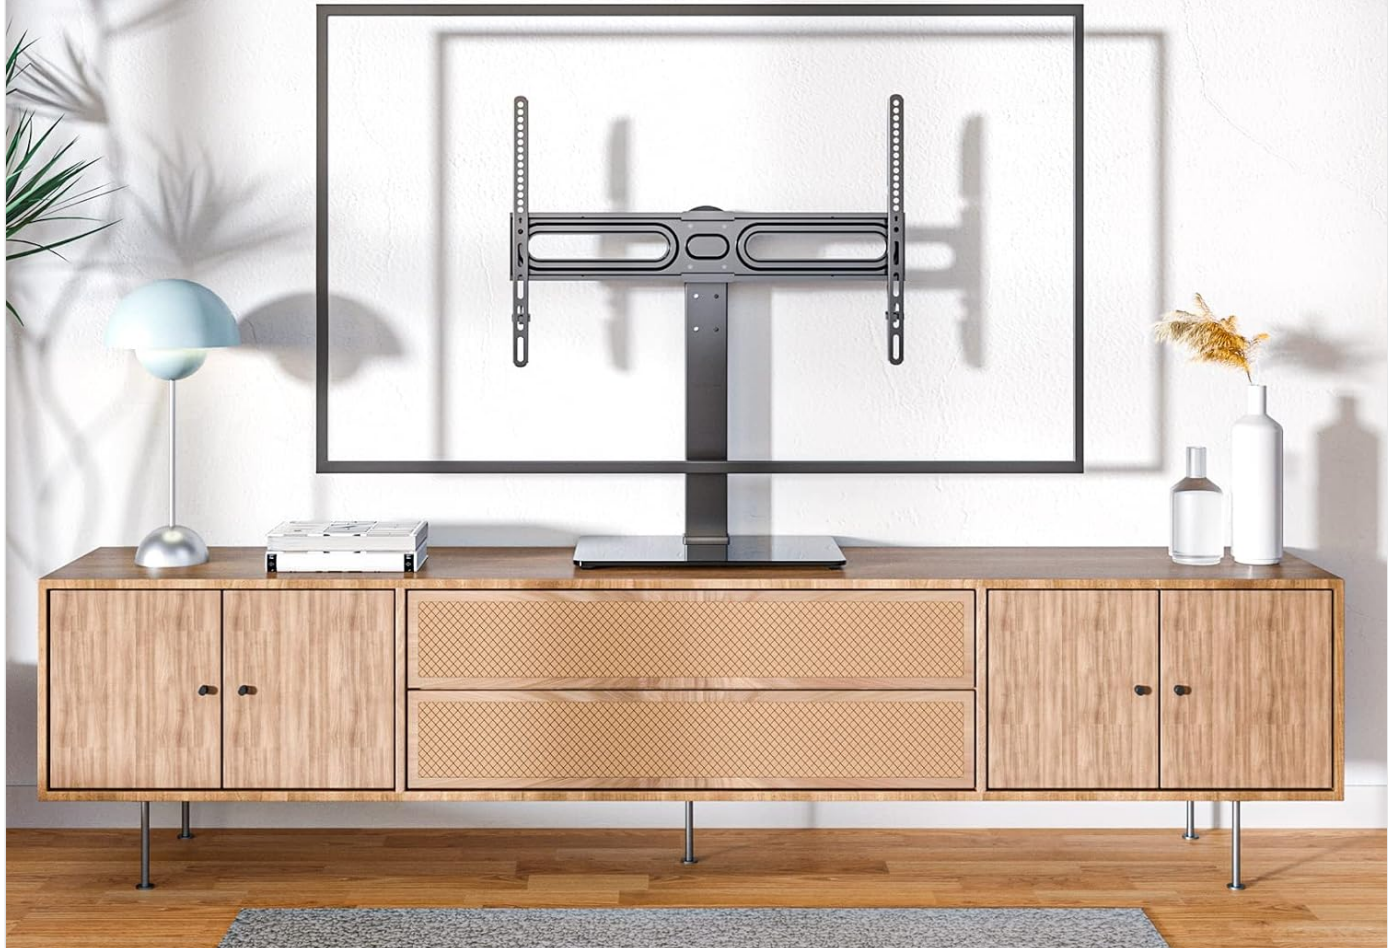


Image 8.1: Display compatibility details for the TV stand.

Product Dimensions



Image 8.2: Detailed product dimensions.

9. WARRANTY AND SUPPORT

WALI stands behind the quality of its products. For warranty information or technical support, please contact WALI customer service. Our support team is available to answer any questions you may have within 12 hours.

For more information and to explore other WALI products, visit the official WALI store:

[Visit the WALI Store on Amazon](#)

© 2025 WALI. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question