

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Casio](#) /
- › [Casio WS-1400H-1BVDF Digital Watch User Manual](#)

## Casio WS-1400H-1BVDF

# Casio WS-1400H-1BVDF Digital Watch User Manual

Model: WS-1400H-1BVDF

## INTRODUCTION

---

This manual provides detailed instructions for the Casio WS-1400H-1BVDF Digital Watch. This timepiece is designed for active individuals, featuring a 60-lap memory, an easy-to-read LCD, a front stopwatch button, 100-meter water resistance, an LED light, and a 10-year battery life. Please read this manual carefully to ensure proper use and to fully utilize all functions of your watch.



Figure 1: Front view of the Casio WS-1400H-1BVDF Digital Watch. This image displays the watch face with its digital display, buttons on the sides, and the black resin band.

## SETUP

---

Before using your watch, it is recommended to set the current time, date, and any desired alarms.

## Button Functions

- **A (ADJUST):** Used to enter and exit setting modes, and to confirm settings.
- **B (MODE):** Cycles through the watch's modes (Timekeeping, Stopwatch, Lap Memory, Timer, Alarm, Dual Time).
- **C (LIGHT):** Illuminates the display.
- **D (START/STOP):** Used to start/stop stopwatch or timer operations, and to change settings during setup.
- **E (LAP/RESET):** Used to record laps in stopwatch mode, and to reset values during setup.



Figure 2: Angled view of the watch, highlighting the placement of the control buttons on the side of the case. These buttons are used for navigating modes and adjusting settings.

## Time and Date Setting

1. In Timekeeping Mode, press and hold **A** until the city code starts flashing. This indicates the setting mode.
2. Press **B** to cycle through the settings: City Code → DST (Daylight Saving Time) → 12/24-hour format → Seconds → Hour → Minute → Year → Month → Day.
3. Use **D** and **E** to change the flashing value. **D** typically increases the value, and **E** decreases or resets.
4. After setting all desired values, press **A** to exit the setting mode.

## Alarm Setting

1. From Timekeeping Mode, press **B** repeatedly until you reach the Alarm Mode (indicated by 'ALM' or a bell icon).

2. Press and hold **A** until the alarm hour digits start flashing.
3. Use **D** to adjust the hour and **E** to adjust the minute.
4. Press **A** to confirm and exit the alarm setting mode.
5. Press **D** in Alarm Mode to toggle the alarm ON/OFF.

## OPERATING INSTRUCTIONS

---

### Mode Navigation

Press the **B (MODE)** button to cycle through the watch's various modes in the following order:

Timekeeping Mode → Stopwatch Mode → Lap Memory Mode → Timer Mode → Alarm Mode → Dual Time Mode

### Using the Stopwatch

The stopwatch measures elapsed time, split times, and two finishes. It features a 60-lap memory.

1. Enter Stopwatch Mode by pressing **B**. The display will show 'STW' or '00'00"00'.
2. Press **D (START/STOP)** to start the stopwatch.
3. Press **E (LAP/RESET)** to record a lap time while the stopwatch is running. The lap time will be displayed briefly.
4. Press **D** again to stop the stopwatch.
5. Press **E** to reset the stopwatch to zero.

### Lap Memory Recall

To view recorded lap times:

1. Enter Lap Memory Mode by pressing **B**.
2. Use **D** and **E** to scroll through the stored lap records.

### Using the Timer

The timer can be set for a countdown from 1 minute up to 24 hours.

1. Enter Timer Mode by pressing **B**. The display will show 'TMR'.
2. Press and hold **A** until the timer hour digits start flashing.
3. Use **D** and **E** to set the desired countdown time.
4. Press **A** to confirm the setting.
5. Press **D** to start or stop the countdown.
6. When the countdown reaches zero, an alarm will sound. Press any button to stop the alarm.

### Using the LED Backlight

Press the **C (LIGHT)** button to illuminate the display for easy reading in low-light conditions.



Figure 3: The watch display showing the time and date, with the LED backlight activated for visibility in dark environments.

## MAINTENANCE

---

Proper care will ensure the longevity and performance of your Casio WS-1400H-1BVDF watch.

### Cleaning

- Wipe the watch with a soft, dry cloth to remove dirt and moisture.
- For resin bands, wash with water and a mild detergent, then rinse thoroughly and dry.
- Avoid using chemical cleaners, as they can damage the watch's materials.

### Water Resistance

This watch is 100-meter water resistant. This means it is suitable for swimming, showering, and snorkeling. However, please observe the following precautions:

- Do **not** operate buttons while the watch is wet or submerged in water.
- Avoid exposing the watch to hot water or steam (e.g., hot showers, saunas), as this can compromise the water resistance seals.
- After exposure to saltwater, rinse the watch with fresh water and wipe it dry.

### Battery Replacement

The watch is equipped with a 10-year battery. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is highly recommended to have the battery replaced by an authorized Casio service center to ensure proper sealing and maintain water resistance.

## Storage

When not in use for extended periods, store the watch in a dry, cool place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common problems and solutions:

| Problem                   | Possible Cause   | Solution  |
|---------------------------|--|---|
| Display is blank or dim.  | Low battery.   | Replace the battery at an authorized service center.  |
| Time is incorrect.        | Time not set correctly or accidental adjustment.       | Refer to the "Time and Date Setting" section to reset the time.   |
| Buttons do not respond.   | Watch may be in a locked mode or internal malfunction. | Try pressing all buttons firmly. If unresponsive, allow the watch to sit for a few minutes. If the problem persists, contact support. |
| Water inside the display. | Water resistance seals compromised.                    | Stop using the watch immediately and take it to an authorized service center. Do not attempt to dry it yourself.                      |

## SPECIFICATIONS

Key technical specifications for the Casio WS-1400H-1BVDF Digital Watch:

- **Model Number:** WS-1400H-1BVDF
- **Display Type:** Digital
- **Movement Type:** Quartz
- **Case Material:** Resin
- **Band Material:** Resin
- **Case Diameter:** 44.5 Millimetres
- **Case Thickness:** 13.4 Millimetres
- **Item Weight:** 43 Grams
- **Water Resistance Depth:** 100 Metres (10 ATM)
- **Battery Type:** 1 Lithium Ion battery (included)
- **Battery Life:** Approximately 10 years
- **Special Features:** 60-lap memory, Stopwatch, Timer, Alarm, Dual Time, LED Backlight



Figure 4: The Casio WS-1400H-1BVDF watch worn on a wrist, demonstrating its size and fit.

## WARRANTY AND SUPPORT

---

### Warranty Information

This Casio WS-1400H-1BVDF Digital Watch comes with an **Extended Warranty**. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage.

### Customer Support

For technical assistance, service, or warranty claims, please contact Casio customer support:

- **Manufacturer:** Casio India Co Pvt Ltd
- **Address:** A-41, 1st Floor, MCIE, Mathura Road, New Delhi-110044, India
- **Importer:** Casio India Co Pvt Ltd

For the most up-to-date contact information and support resources, please visit the official Casio website for your region.

© 2026 Casio. All rights reserved.