

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION E69143 Vinyl and Cassette Player with MP3 Conversion User Manual

MEDION E69143

MEDION E69143 Vinyl and Cassette Player with MP3 Conversion User Manual

Model: E69143

1. INTRODUCTION

Thank you for choosing the MEDION E69143 Vinyl and Cassette Player. This versatile audio system allows you to enjoy your vinyl records and cassette tapes, as well as convert your analog music into digital MP3 files. It also supports MP3 playback from USB drives and SD cards, and features an AUX input for connecting external audio sources. Please read this manual carefully to ensure proper use and to maximize the lifespan of your device.



Figure 1.1: The MEDION E69143 Vinyl and Cassette Player. This image shows the complete unit with the dust cover closed, highlighting its compact design and front panel controls.

2. SAFETY INSTRUCTIONS

To prevent fire, electric shock, or product damage, always follow these basic safety precautions:

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings.
- Ensure the power cord is not pinched or walked on.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the appliance during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Keep the unit away from direct sunlight, heat sources, and strong magnetic fields.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- MEDION LIFE E69143 MD43142 USB Turntable
- Transparent Dust Cover
- Remote Control
- Software CD
- User Manual
- Warranty Card

4. PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your MEDION E69143.



Figure 4.1: Front Panel Controls. This image provides a close-up view of the front panel, showing the LCD display, volume knob, USB port, SD card slot, headphone jack, and various control buttons for function, recording, and playback.

4.1 Front Panel

1. **LCD Display:** Shows current mode, track information, and settings.
2. **STANDBY Button:** Powers the unit on/off.
3. **Headphone Jack:** For private listening.
4. **USB Port:** Connect USB flash drives for MP3 playback or recording.
5. **SD/MMC Card Slot:** Insert SD or MMC cards for MP3 playback or recording.
6. **AUX IN:** 3.5mm input for external audio devices.
7. **VOLUME/O Knob:** Adjusts volume and navigates menus.
8. **FUNCTION Button:** Selects input source (Phono, Cassette, USB, SD, AUX).
9. **TIMER/SLEEP Button:** Sets timer or sleep function.
10. **REC/DEL Button:** Initiates recording or deletes files.
11. **FOLDER ▲/▼ Buttons:** Navigates folders on USB/SD.
12. **MODE/CLOCK Button:** Changes display mode or sets clock.
13. **Playback Control Buttons (|<, >|, >>, <<, Play/Pause):** Controls playback for MP3, cassette, and recording functions.

4.2 Turntable Section



Figure 4.2: Turntable Section. This image displays the turntable with a vinyl record placed on it, the tonearm, and the transparent dust cover open, ready for playback.

1. **Turntable Platter:** Where vinyl records are placed.
2. **Spindle:** Holds the record in place.
3. **Tonearm:** Holds the stylus (needle).
4. **Stylus/Cartridge:** Reads the grooves of the record.
5. **Speed Selector:** Switch between 33, 45, and 78 RPM.
6. **Auto-Stop Switch:** Enables/disables automatic stopping of the platter at the end of a record.
7. **Dust Cover:** Protects the turntable from dust.

4.3 Cassette Deck

1. **Cassette Door:** Insert cassette tapes here.
2. **Cassette Controls:** Play, Stop, Fast Forward, Rewind.

5. SETUP

5.1 Unpacking and Placement

- Carefully remove the unit from its packaging.
- Place the unit on a stable, level surface away from direct sunlight, heat, and moisture.
- Ensure adequate ventilation around the unit.

5.2 Power Connection

Connect the power cord to the AC inlet on the rear of the unit, then plug it into a standard wall outlet.

5.3 Initial Turntable Setup

- Remove any protective packaging from the tonearm and stylus.
- Ensure the stylus guard is removed before playing a record.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

Press the **STANDBY** button to turn the unit on or off.

6.2 Playing Vinyl Records

1. Open the dust cover.
2. Place a vinyl record on the turntable platter.
3. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch. For 45 RPM records, place the included adapter on the spindle.
4. Set the **AUTO-STOP** switch to ON if you want the platter to stop automatically at the end of the record.
5. Press the **FUNCTION** button until "PHONO" appears on the LCD display.
6. Gently lift the tonearm using the cueing lever and position the stylus over the desired track on the record.
7. Lower the tonearm slowly onto the record. Playback will begin.
8. Adjust the volume using the **VOLUME/O** knob.
9. To stop playback, lift the tonearm and return it to its rest.

6.3 Playing Cassette Tapes

1. Insert a cassette tape into the cassette door.
2. Press the **FUNCTION** button until "TAPE" appears on the LCD display.
3. Use the cassette control buttons (Play, Stop, Fast Forward, Rewind) to operate the tape.
4. Adjust the volume using the **VOLUME/O** knob.

6.4 Playing MP3 Files from USB/SD

1. Insert a USB flash drive into the **USB Port** or an SD/MMC card into the **SD/MMC Card Slot**.
2. Press the **FUNCTION** button until "USB" or "SD" appears on the LCD display.
3. The unit will automatically start playing MP3 files.
4. Use the Playback Control Buttons (|<, >|, >>, <<, Play/Pause) to navigate and control playback.
5. Use the **FOLDER ▲/▼** buttons to navigate through folders.
6. Adjust the volume using the **VOLUME/O** knob.

6.5 Using the AUX Input

1. Connect an external audio device (e.g., smartphone, MP3 player) to the **AUX IN** jack using a 3.5mm audio cable (not included).
2. Press the **FUNCTION** button until "AUX" appears on the LCD display.
3. Start playback on your external device.
4. Adjust the volume using the **VOLUME/O** knob on the unit and/or on your external device.

6.6 Direct MP3 Conversion (Recording)

The MEDION E69143 allows you to convert audio from vinyl, cassette, or AUX input directly to MP3 files on a USB drive or SD card without a computer.

1. Insert a USB flash drive or SD card into the respective slot. Ensure it has sufficient free space.
2. Select the desired source for recording (PHONO, TAPE, or AUX) using the **FUNCTION** button.
3. Start playback of the source material (e.g., place the needle on the record, start the cassette).
4. Press the **REC/DEL** button. The recording indicator will appear on the LCD.
5. To manually split tracks during recording, press the **REC/DEL** button briefly. A new track file will be created.
6. To stop recording, press the **REC/DEL** button again. The recording will be saved as an MP3 file (128 kbit/s or 192 kbit/s) on your USB drive or SD card.
7. *Note:* The unit supports automatic track separation for some sources. Refer to the software CD for advanced settings if available.

7. MAINTENANCE

7.1 Cleaning the Unit

- Always unplug the unit before cleaning.
- Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Clean the dust cover with a soft, slightly damp cloth.

7.2 Stylus Care

- Regularly clean the stylus using a soft brush, brushing gently from back to front.
- Replace the stylus when you notice a decrease in sound quality or visible wear.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet faulty	Ensure power cord is securely connected; Try a different outlet
No sound	Volume too low; Incorrect function selected; Headphones connected	Increase volume; Press FUNCTION to select correct source; Disconnect headphones
Turntable not spinning	Unit not powered on; Auto-stop engaged prematurely; Belt dislodged	Turn unit on; Check auto-stop switch; Contact service for belt issues
Poor sound quality from vinyl	Dirty record; Worn stylus; Incorrect speed selected	Clean record; Replace stylus; Select correct RPM

Problem	Possible Cause	Solution
MP3 recording not working	USB/SD card full or not formatted correctly; Source not playing	Check USB/SD card capacity and format (FAT32 recommended); Ensure source is playing

9. SPECIFICATIONS

- **Brand:** MEDION
- **Model Number:** E69143 (MD 43142)
- **Color:** Black
- **Connections:** USB, AUX Input
- **Special Features:** Direct MP3 Conversion, Integrated Speakers, SD Card Reader
- **Compatible Devices:** USB devices, SD cards, devices with AUX input
- **Turntable Speeds:** 33, 45, 78 RPM
- **Motor Type:** Belt Drive
- **Integrated Speakers:** 2 x 1.5 W RMS
- **MP3 Conversion Bit Rate:** 128 kbit/s or 192 kbit/s
- **Weight:** 2.32 Kilograms
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Components Included:** Transparent dust cover, remote control, software CD

10. WARRANTY AND SUPPORT

Your MEDION E69143 comes with a warranty as specified by your retailer or local distributor. Please refer to the included warranty card for detailed terms and conditions.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact MEDION customer service or your authorized dealer. Keep your purchase receipt and model number (E69143) handy when contacting support.

Note: Information regarding spare parts availability and software updates is not available at this time.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B87ZQZRT>

More documents and user manuals: <https://manuals.plus/>